
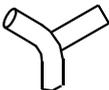
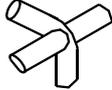
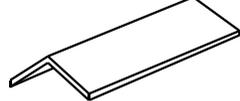
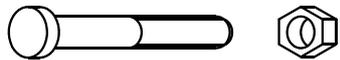
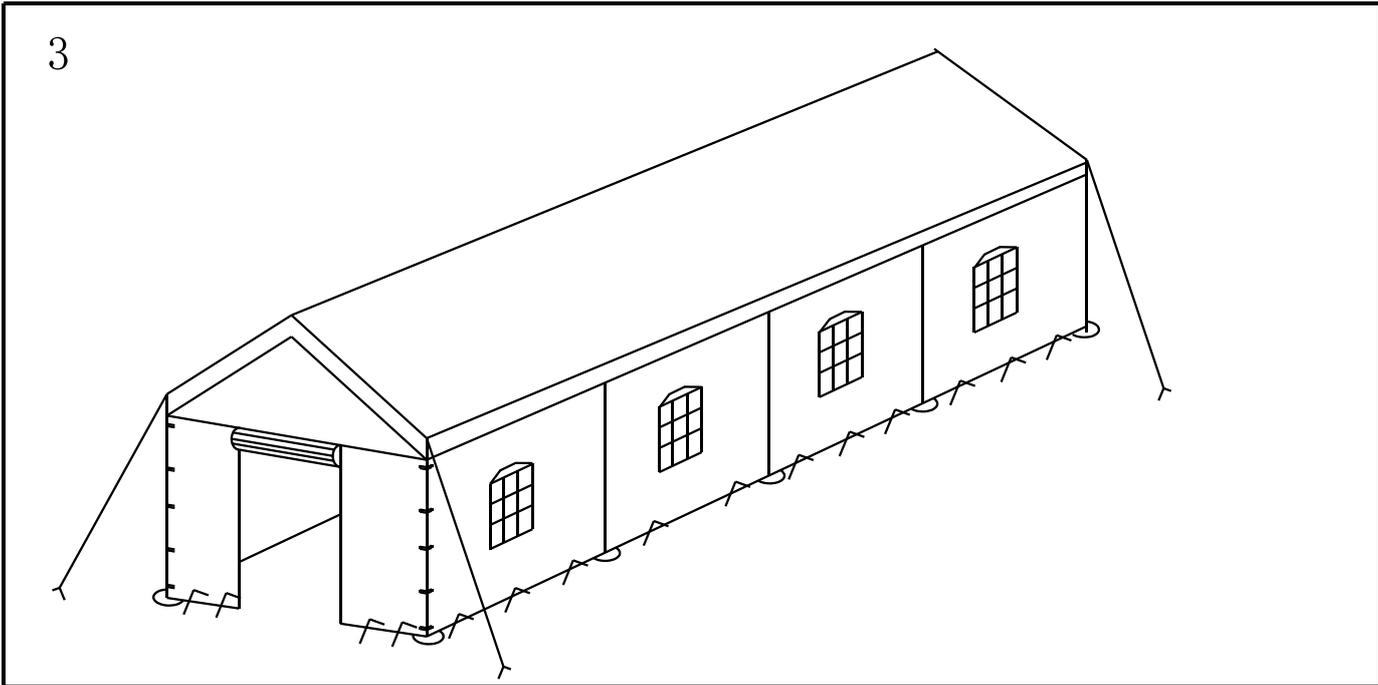
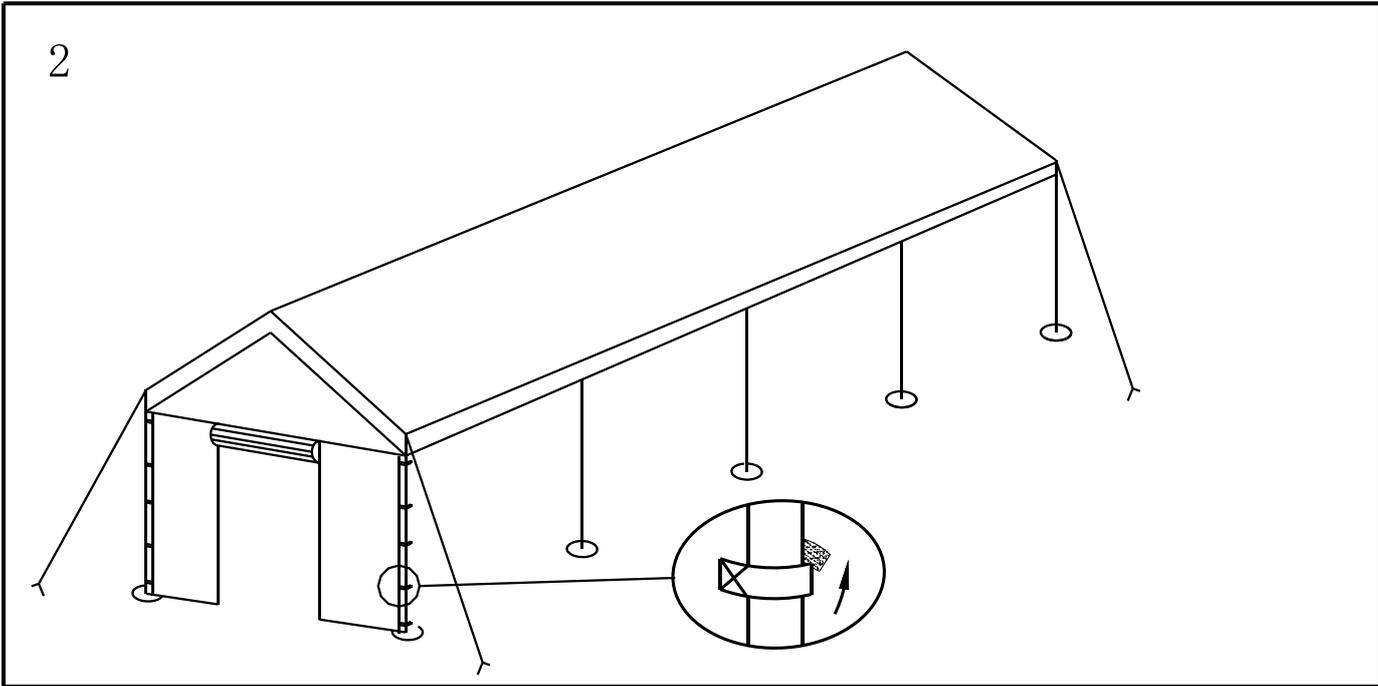


PEOTELK / PARTY TENT
4x8m

TK/QTY		
10	A 	SARIKAS / RAFTER D38mm
12	B 	SARIKAS / RAFTER D38mm
10	C 	TUGIPOST / LEG D38mm
6		3-NE ÜHENDUS 3-WAY JOINT
9		4-NE ÜHENDUS 4-WAY JOINT
10		TUGIPOSTI ALUS BASE PLATE
52		VAI PEG
60		TRIPP BUNGEE
4		NÖÖR GUY LINES
1		KATUS ROOF
2		SEINAPANEEL WALL PANEL
2		OTSAPANEEL END PANEL
10		MUTTER JA POLT NUT AND BOLT

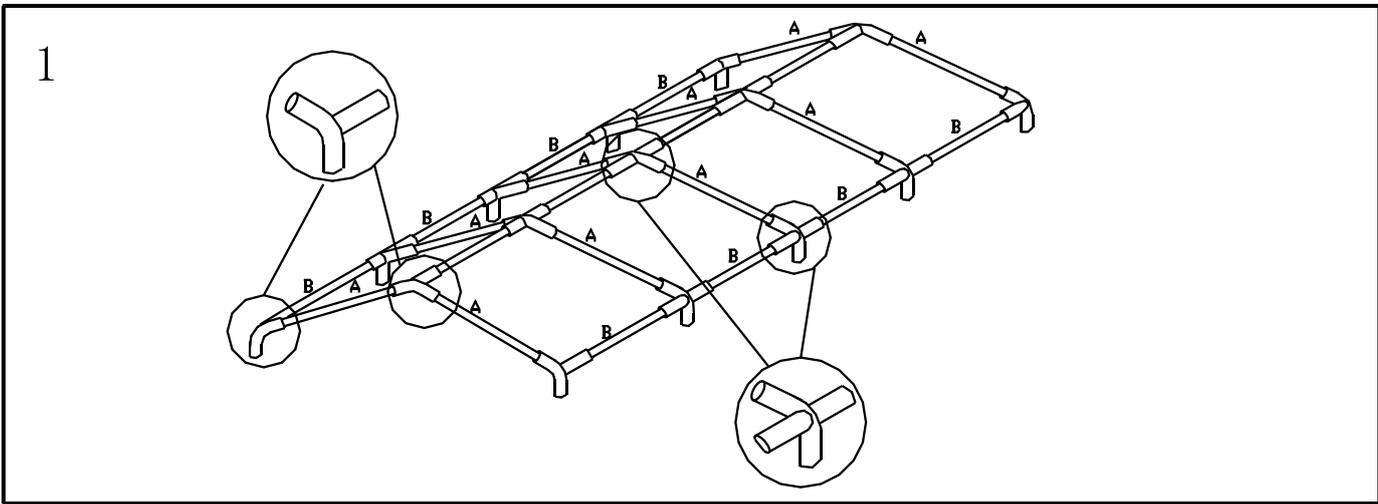

OLULINE! Enne peotelgi kokkupanemist lugege juhend läbi. Hoidke juhend alles hilisemaks kasutamiseks.

HOIATUS!

- * Antud toode on mõeldud kasutamiseks ainult koduses majapidamises ning vaba aja veetmiseks.
- * Telgi korrektse paigalduse ja piisava ankurduse eest vastutab ostja.
- * Ajutise paigaldisena disainitud kergkonstruktsiooniga telk ei ole mõeldud kasutamiseks tugeva tuule ja vihma korral ning seda ei tohi jätta järelevalveta ebasoodsate ilmastikutingimuste meelevalda.
- * Paigaldage telk siledale tasasele aluspinnale ja jälgige, et selle ümbruses oleks piisavalt vaba ruumi.
- * Ankurdage telk aluspinna külge. Varikatust ei tohi püsivalt kinnitada betoonalusele või platvormile. Ärge paigaldage telki liivasele, mudasele või lahtisele pinnasele. Vaiad ei ole sellise pinnase jaoks piisavalt tugevad.
- * Leidke piisavalt tööjõudu telgi paigaldamiseks või teisaldamiseks. Mõned osad võivad olla teravate äärtega. Kasutage sobivaid töökindaid.
- * Ekstreemsete ilmastikutingimuste või tormihoiatuse korral on soovitatav telk lahti monteerida. Tugev tuul, vihm või lumi võivad varikatust kahjustada ning kokkuvarisemise korral võib see vigastada juuresolijaid.
- * Ärge riputage varikatuse raami külge mingisuguseid raskusi. Katusele ronimine on keelatud.
- * Kui telki ei kasutata pikema perioodi vältel monteerige see lahti ja hoiustage puhtas, kuivas ruumis.

Müüja ei vastuta ilmastikutingimustest tulenevate, ebakorrekse paigaldamise või mittesihotstarbelise kasutamise tagajärjel tekkinud kahjude eest.

IMPORTANT! Please read this manual carefully before beginning assembly of this product.
Keep this manual for future reference.

WARNING!

- * This product is designed for garden and leisure activities and suitable for domestic use only.
- * Buyer is responsible for the correct installation and adequate anchorage of the pavilion.
- * This pavilion is designed as a temporary structure and should not be left up unattended when strong winds and rain.
- * Place and assemble the pavilion on flat horizontal ground. Ensure there is enough clearance around the product.
- * Anchor the pavilion to the ground. The pavilion cannot be permanently attached to a concrete floor or platform. Do not assemble the pavilion on sandy, muddy or loose soil, as stakes are not strong enough to anchor in these types of soil.
- * Make sure there is sufficient manpower when assembling or moving the pavilion. Some parts may contain sharp edges. Wear protective gloves if necessary.
- * Always disassemble the pavilion before experiencing heavy wind conditions, as it is not designed to withstand harsh weather, including high wind, rain, and snow. In these conditions it might tip over and could cause injury to bystanders.
- * Do not hang any weights on the roof frame. Do not climb onto the roof of the pavilion. Doing so may cause the gazebo to fall down, thereby resulting in serious injury.
- * If the pavilion will not be used for a long period of time disassemble and store it in a clean, dry environment.

The seller cannot be held responsible for any damage incurred by weather condition, incorrect installation or improper use