
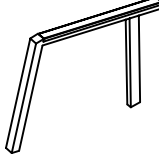 

 
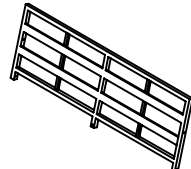 
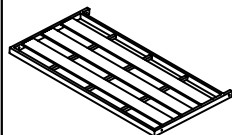 

 





 
 
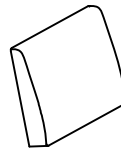 

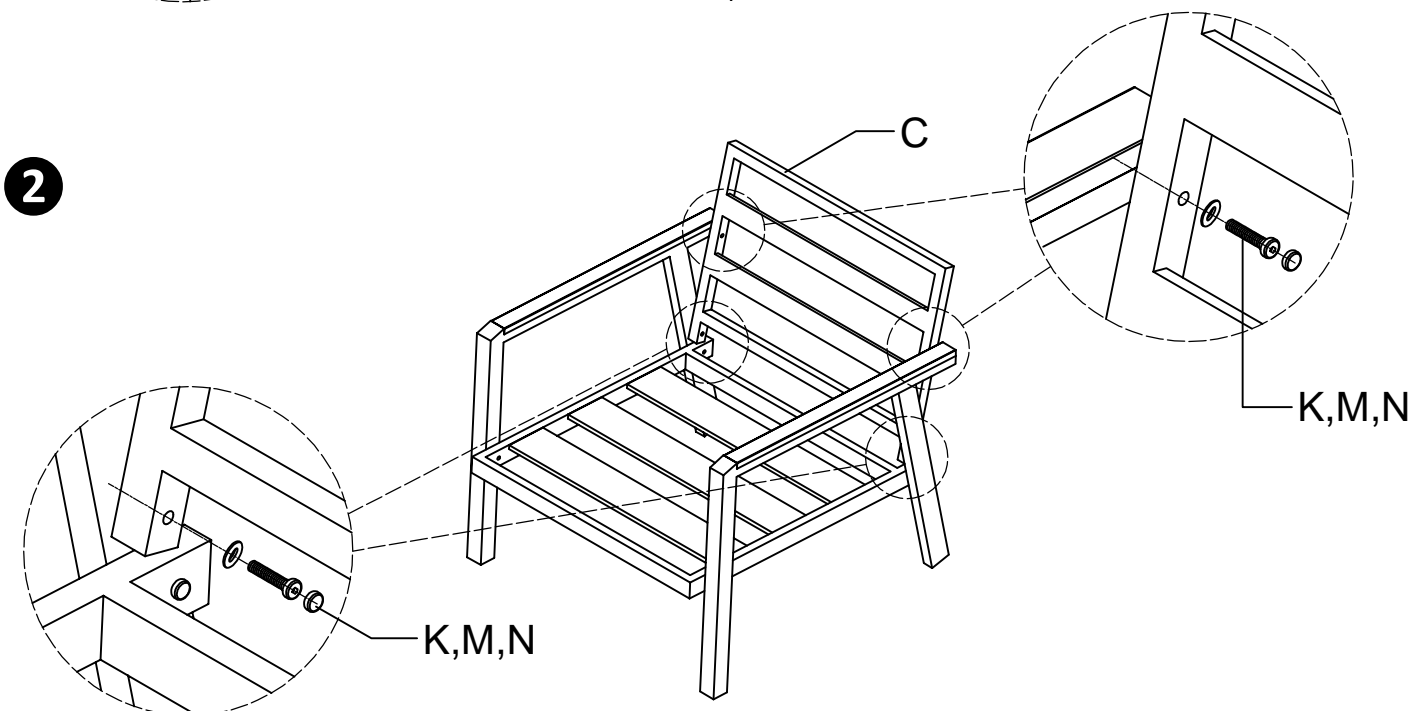 
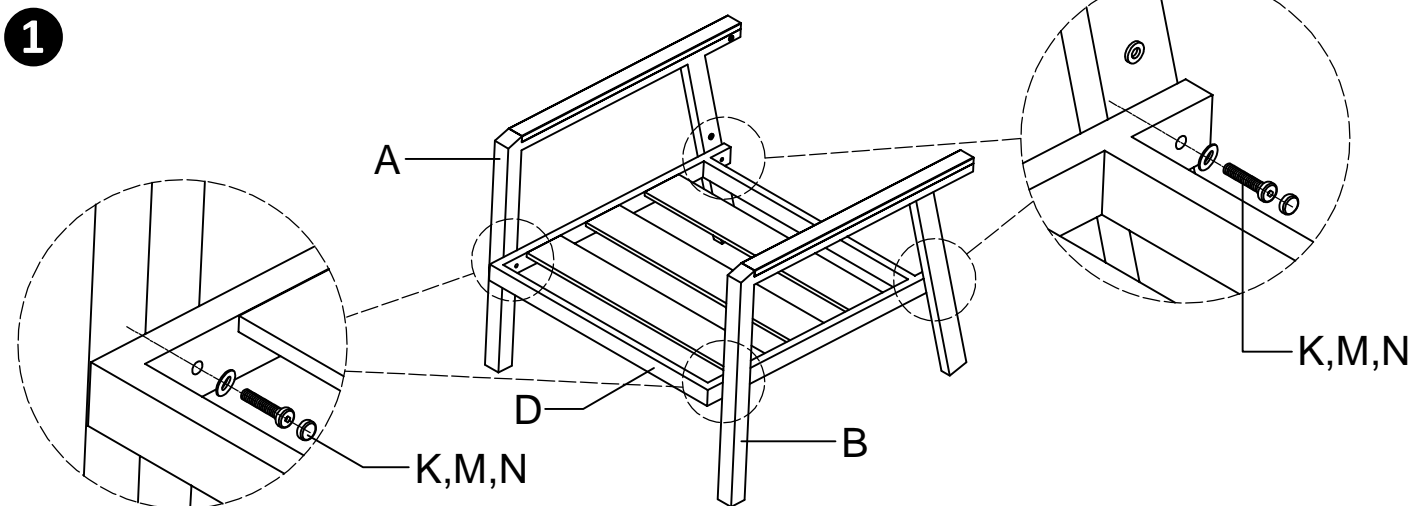 
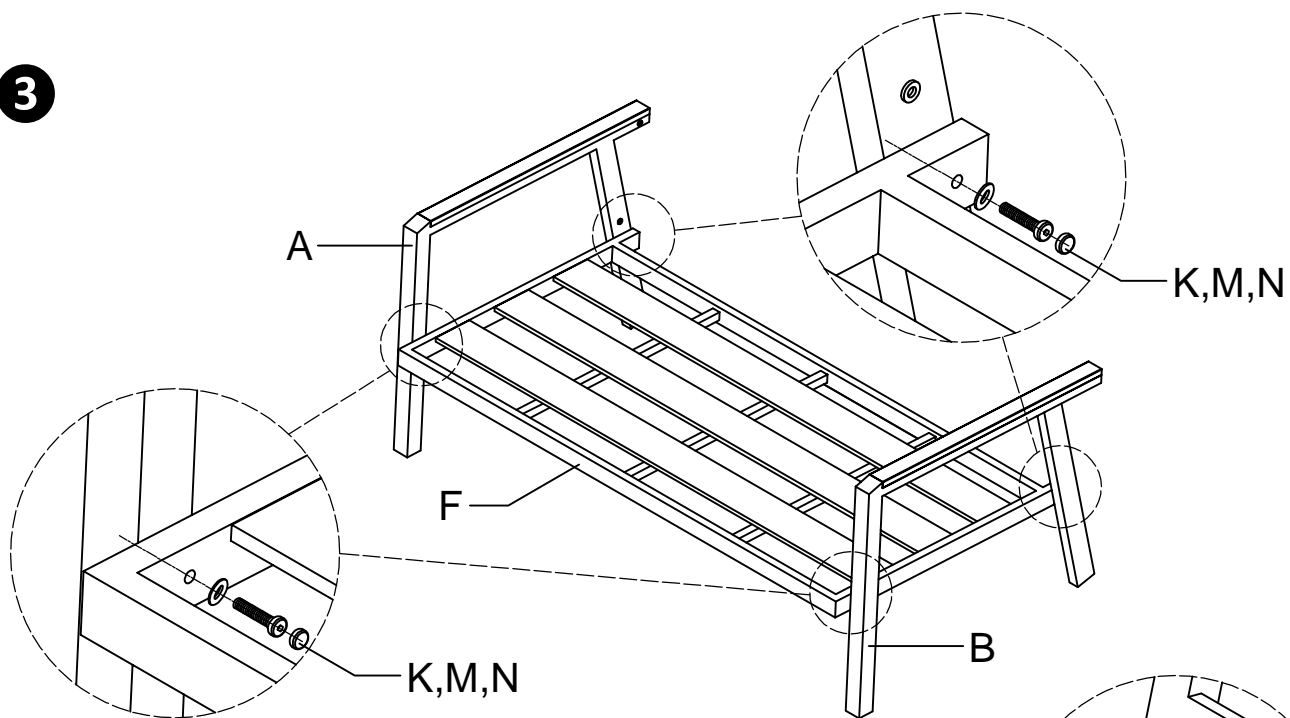 


ASSEMBLY INSTRUCTIONS


					
AX 3	BX 3	CX 2	DX 2	EX 1	FX 1
					
GX 1	HX 1	IX 4	JX 1	KX 42	LX 18
					
MX 24	NX 42	OX 1	PX 4	QX 4	




3




 
4

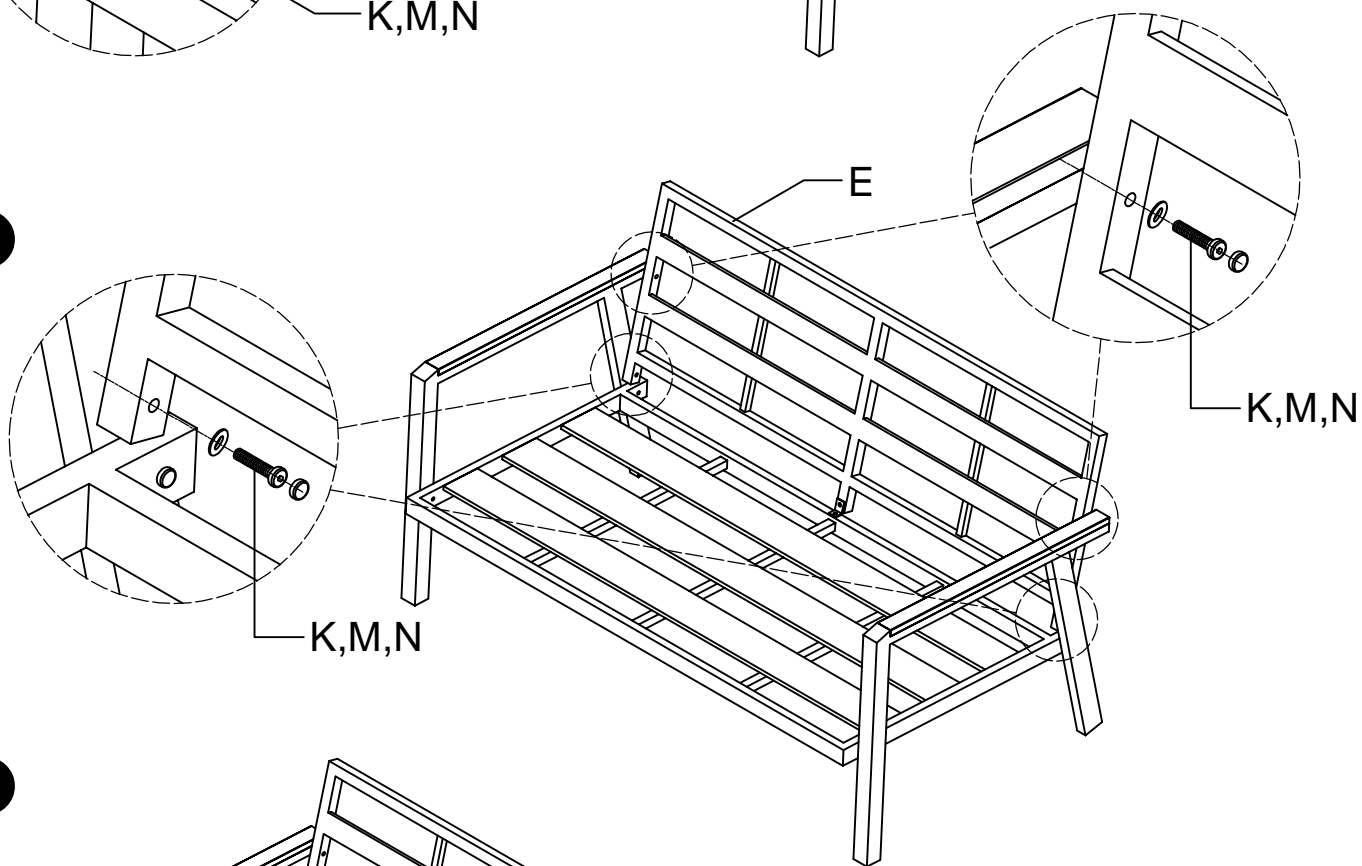


5

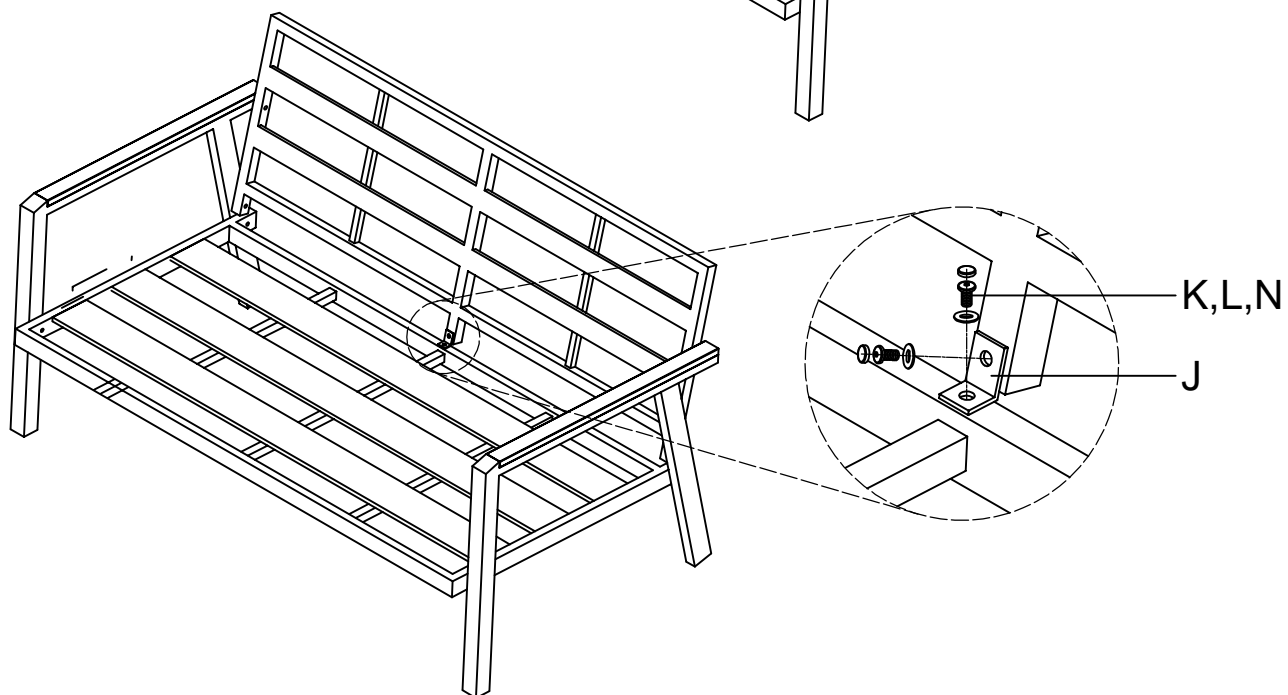 

6

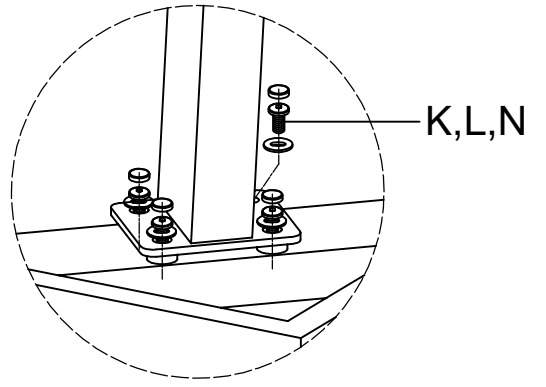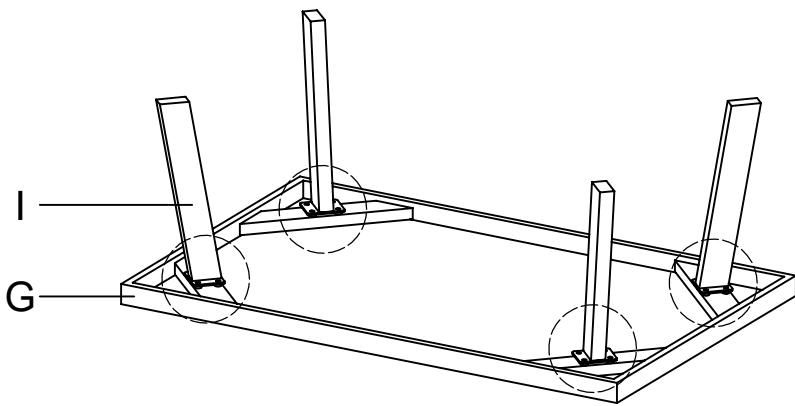  

7

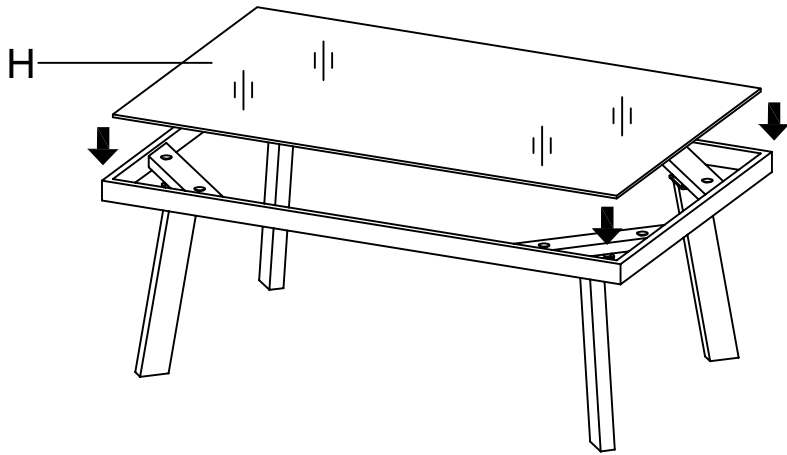 

8

