 
 
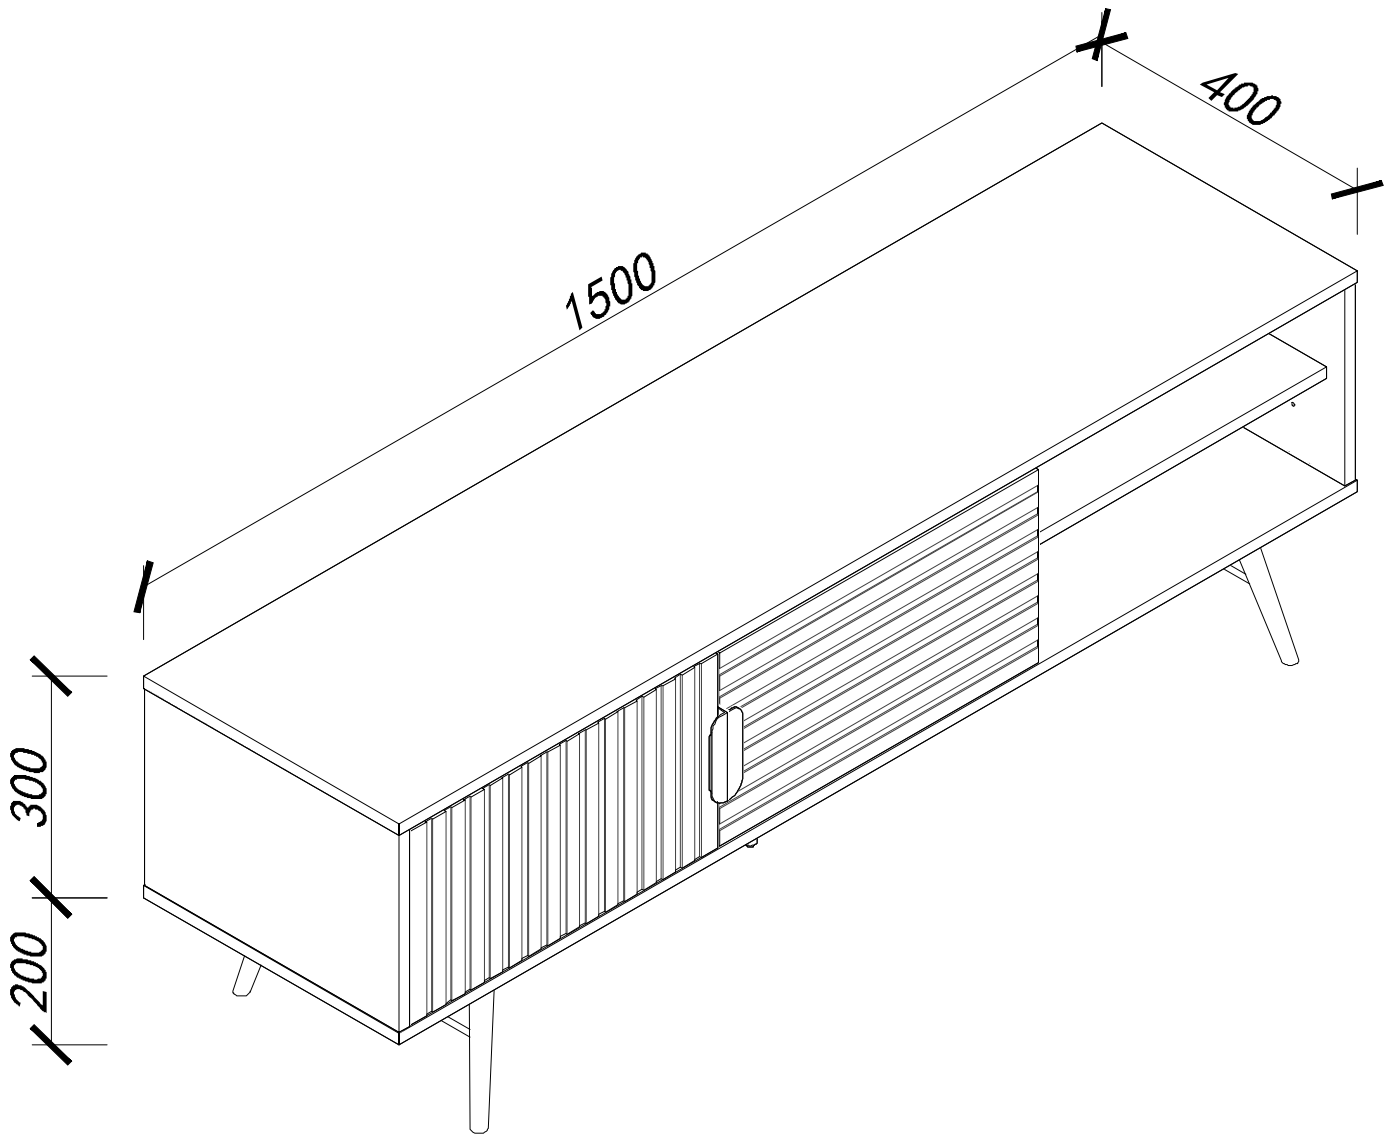 
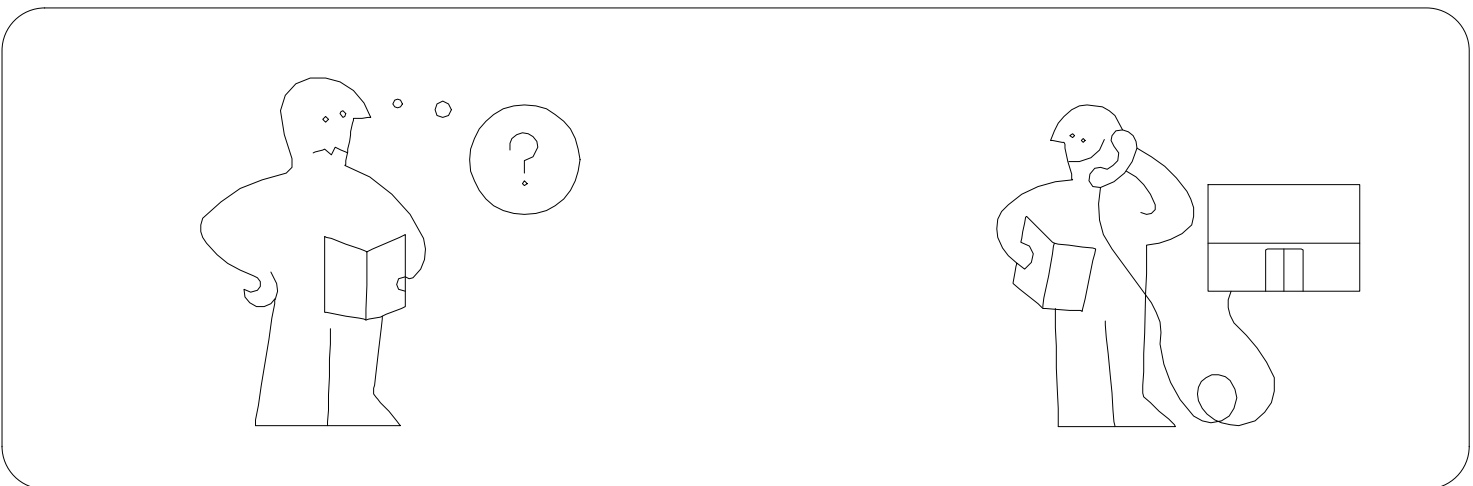 
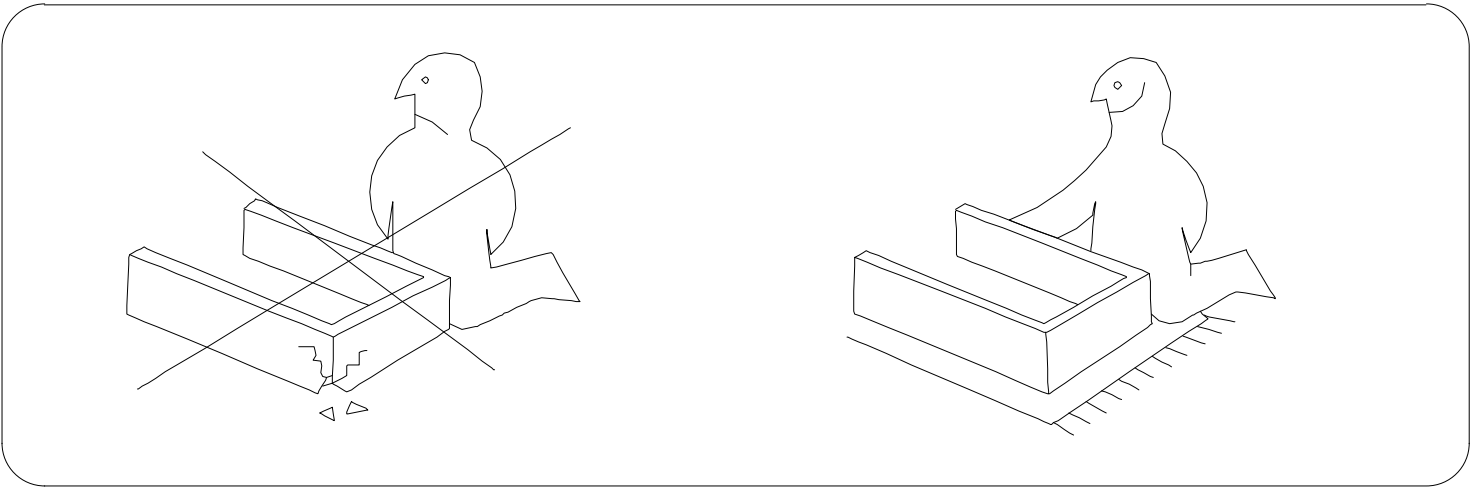 
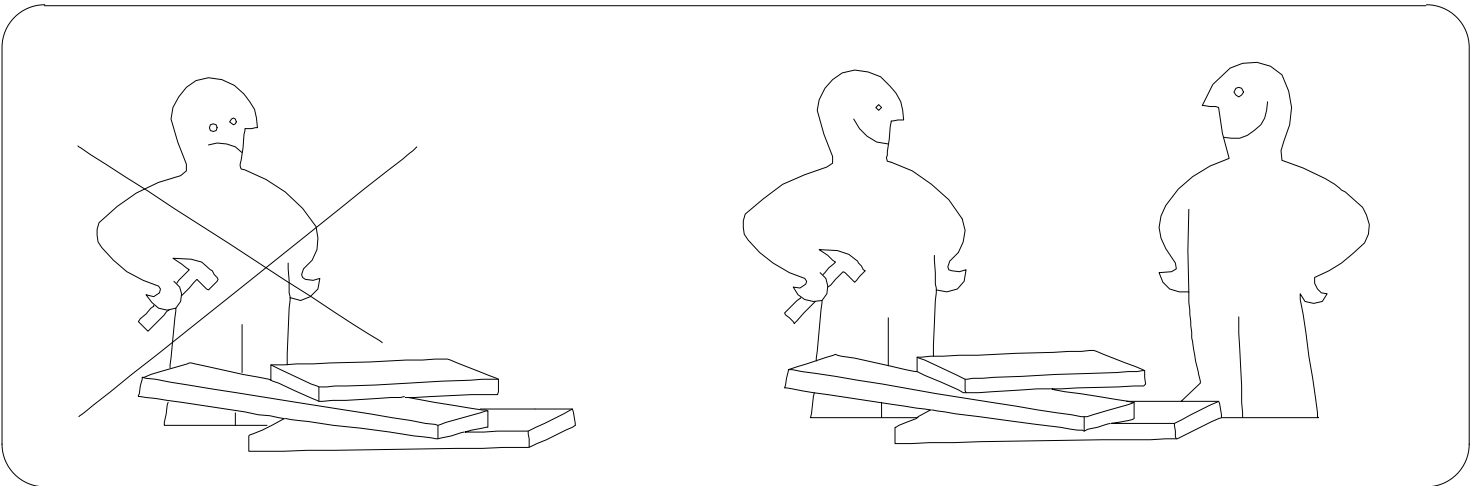 



Assembly Instruction

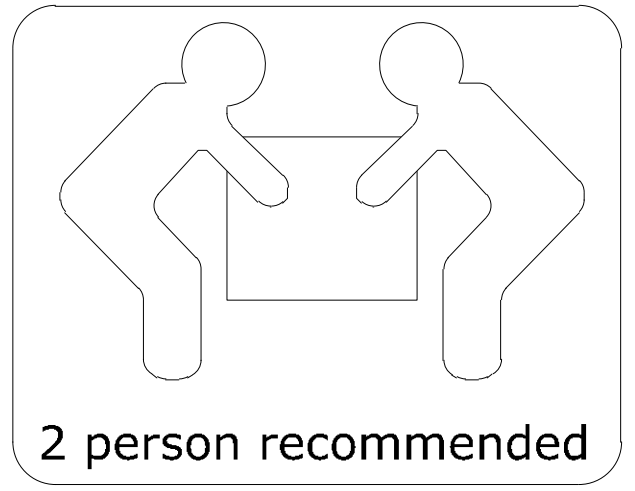

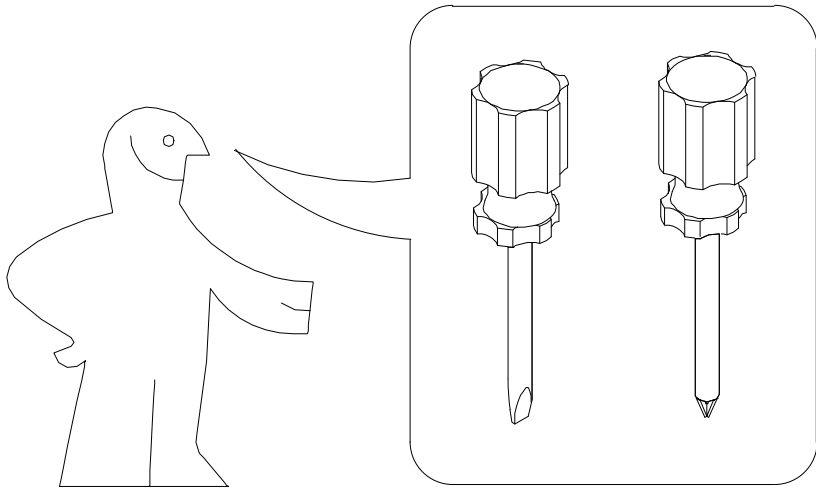


Panel No	Panel Sizes	Quantity
1	1500*400*16	1
2	1500*400*16	1
3	268*399*16	1
4	268*399*16	1
5	268*380*16	1
6	268*380*16	1


Panel No	Panel Sizes	Quantity
7	475*350*16	3
8	488*278*5	2
9	488*278*5	1
10	262*482*18	1
11	499*262*18	1

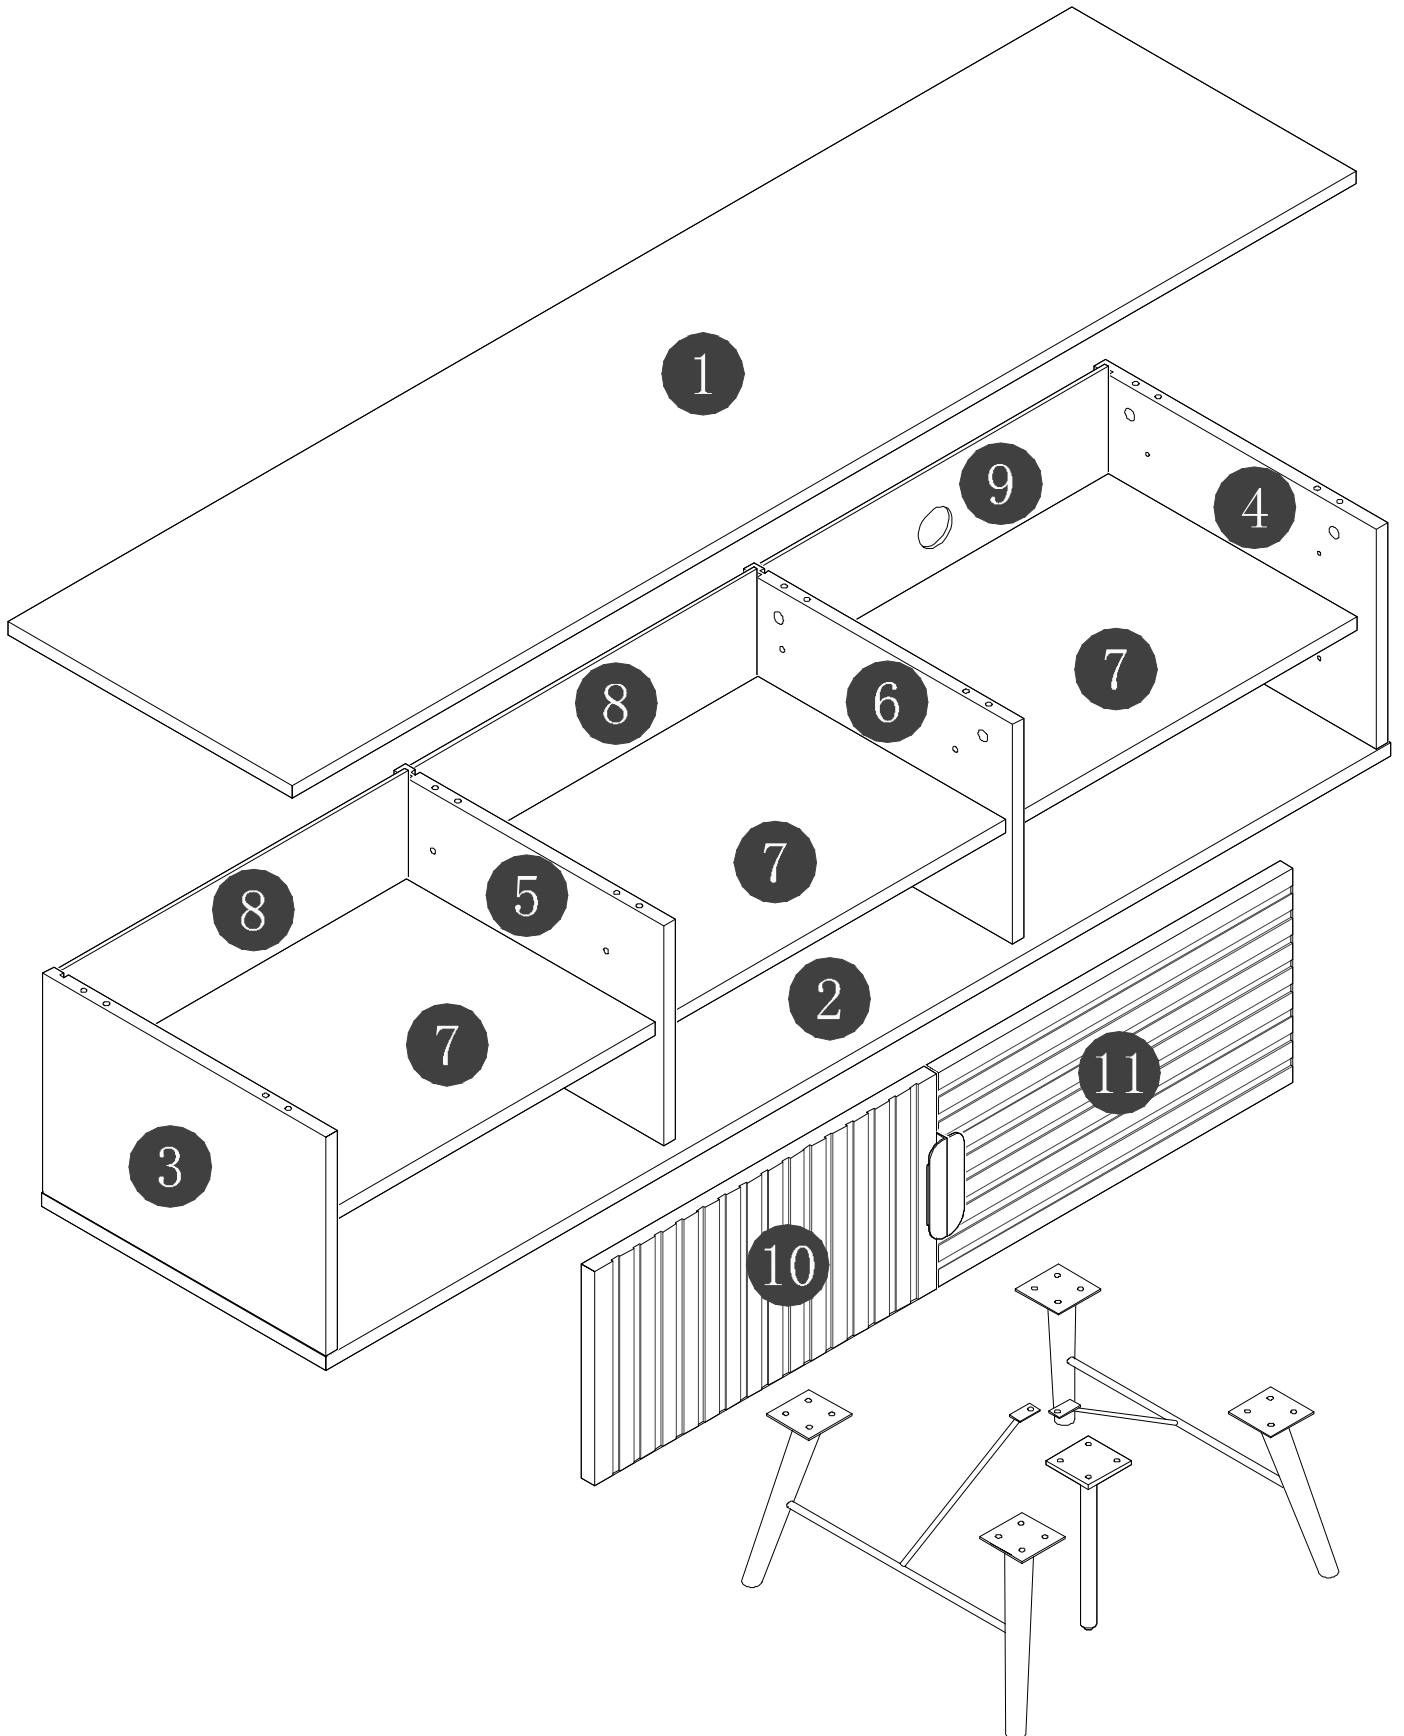 


Fittings

 

A=8

 


B=16

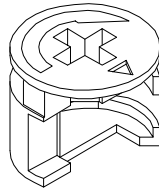 


C=8



 
D=8

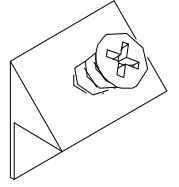

E=12

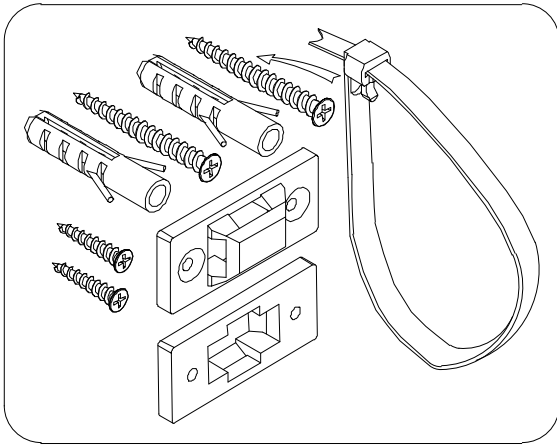 

F=1

 


M6*16


G1=22



 
H=1

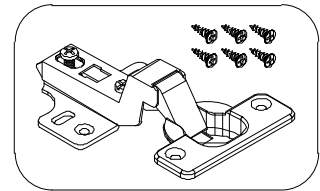

I3=2

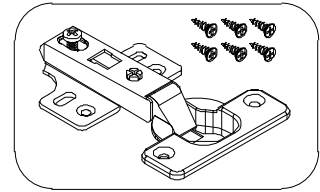 


I1=2

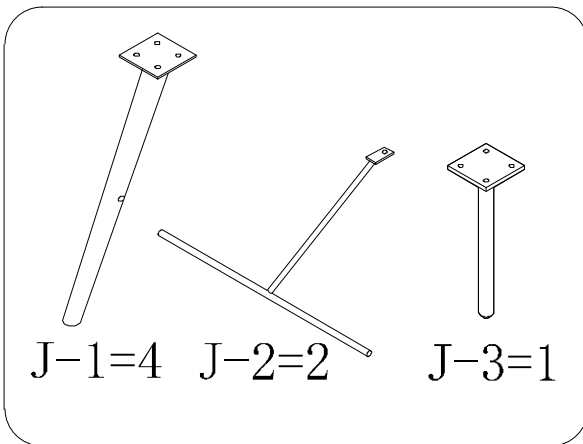 


J-1=4

J-2=2

 J-3=1

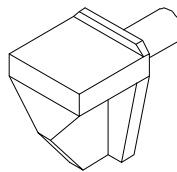


L=12

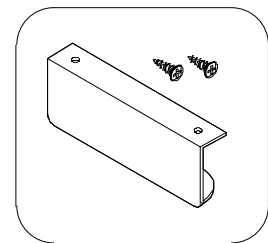 


U=2



 Z1=22




Z2=22

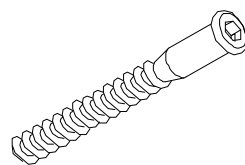 


Q=8

 
STEP 1

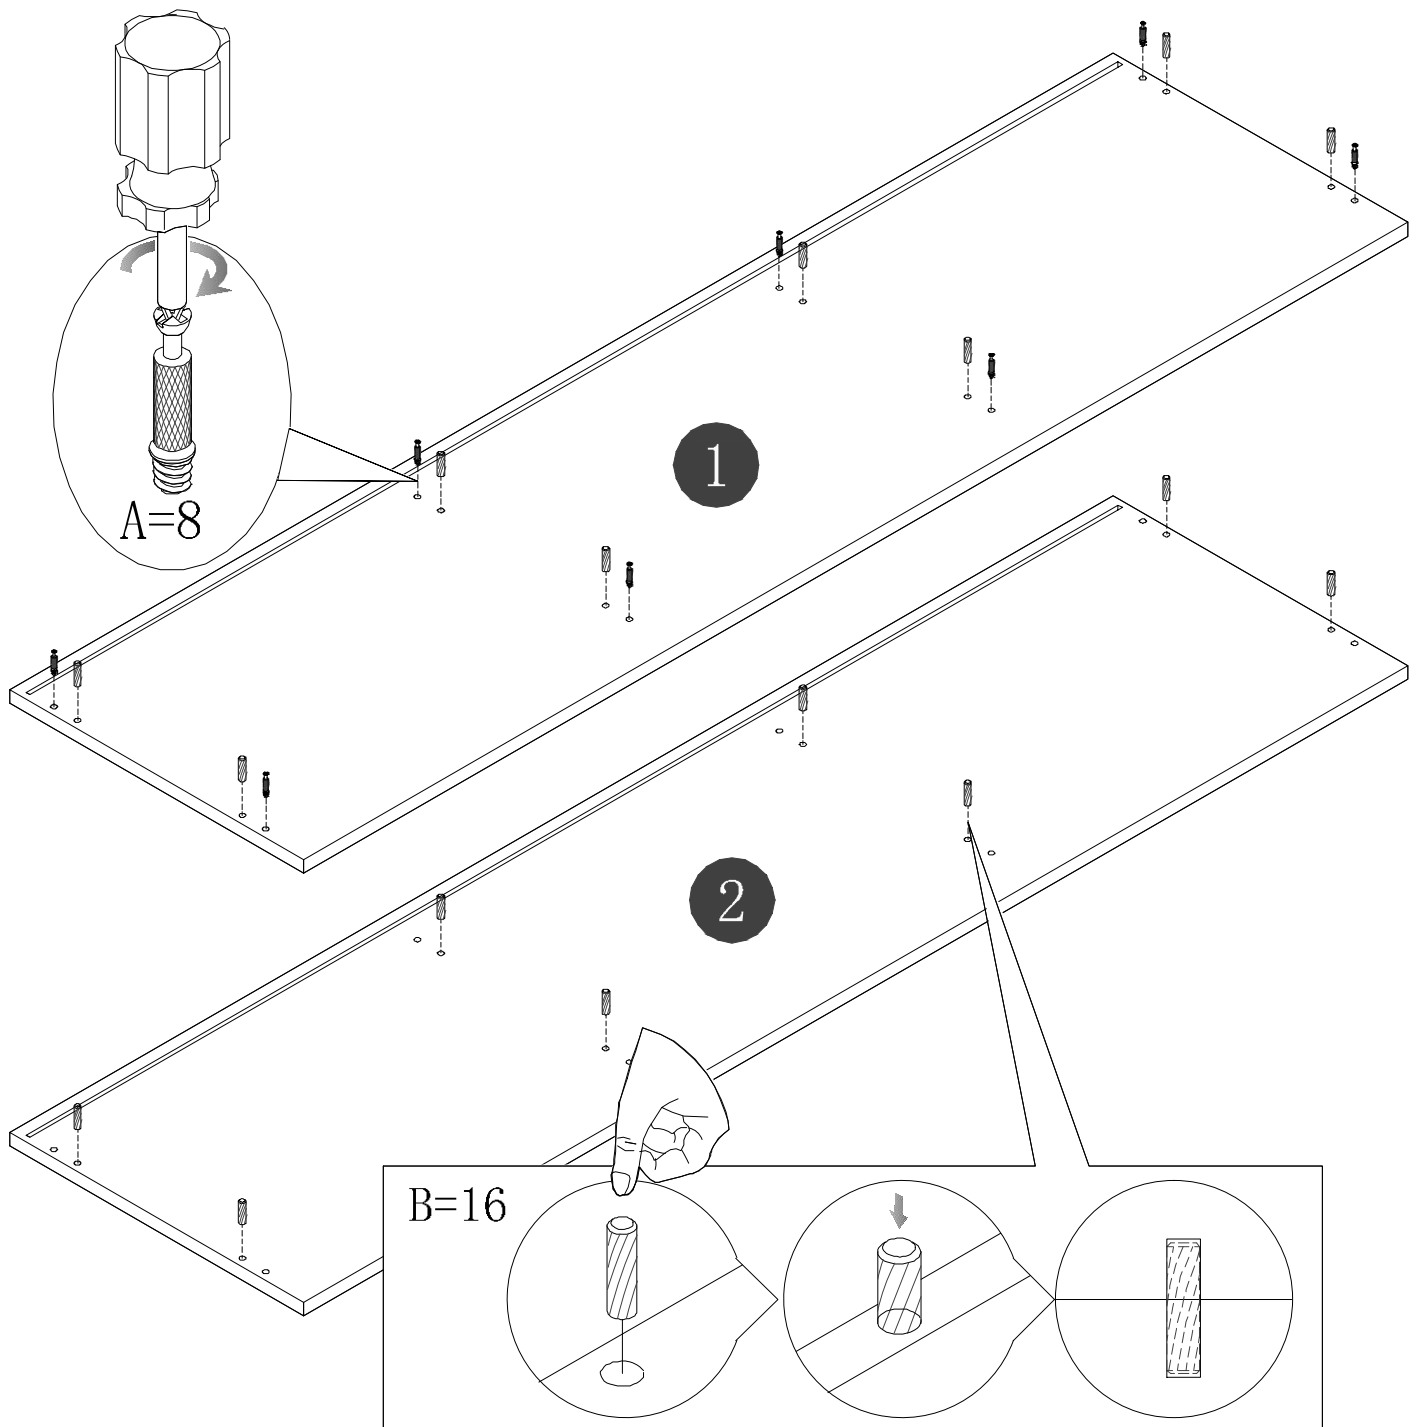

 
STEP 2

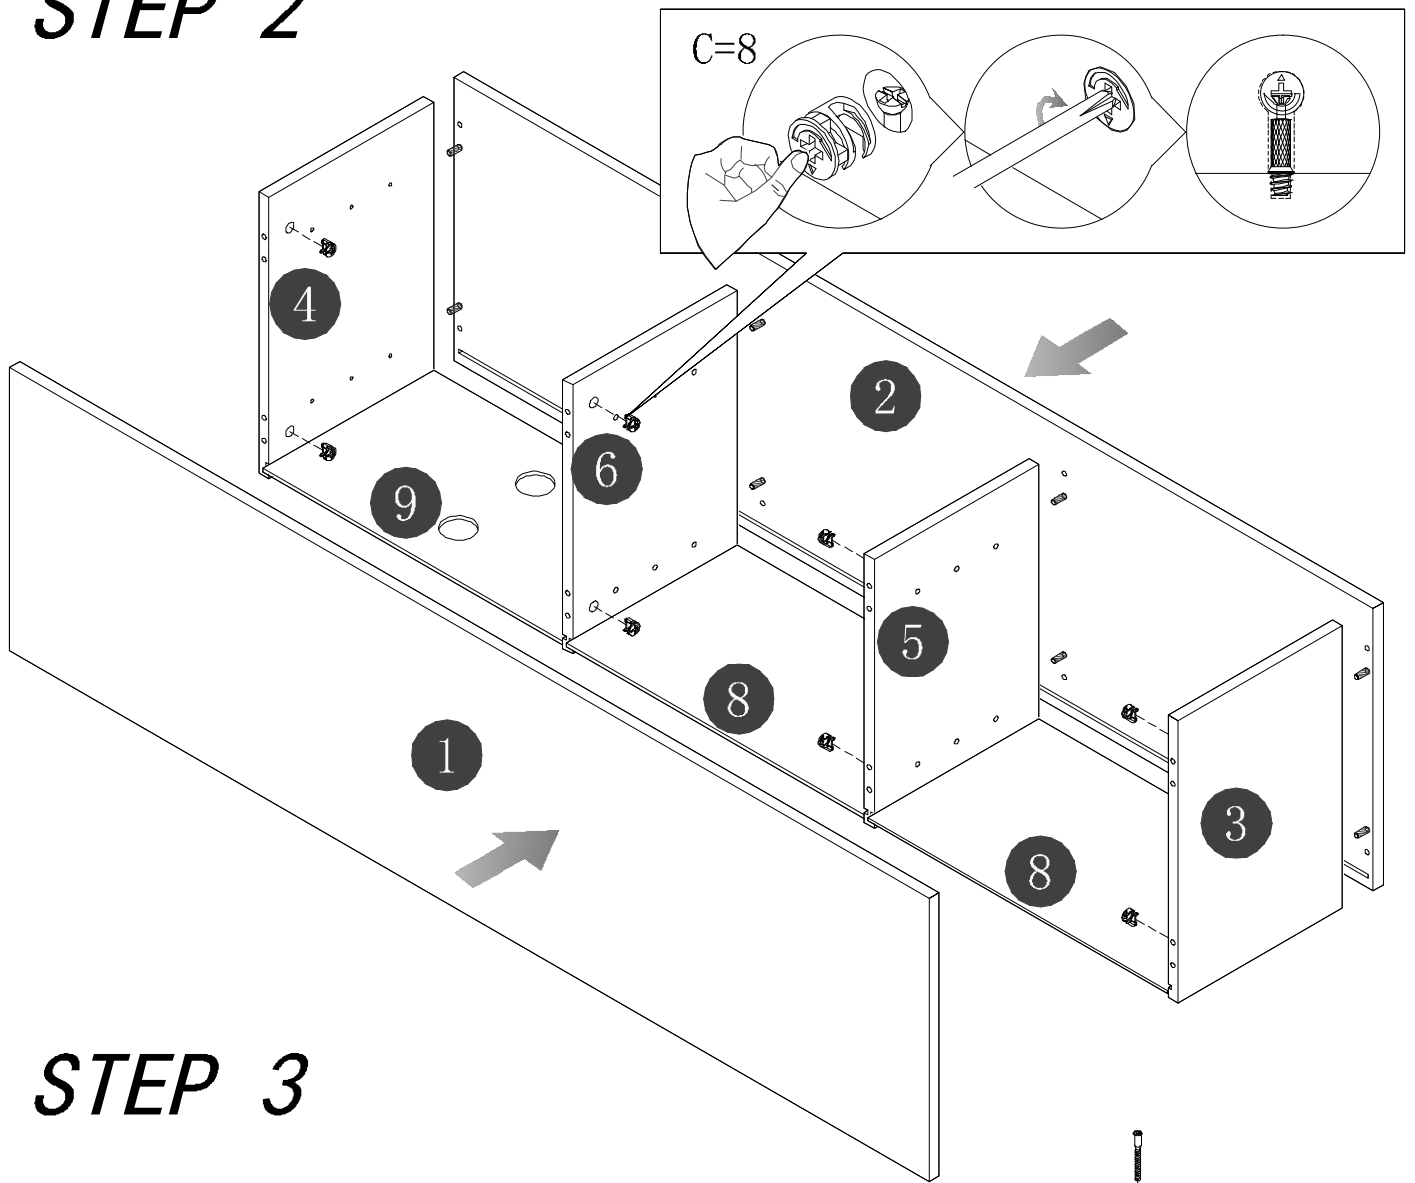

 
STEP 3

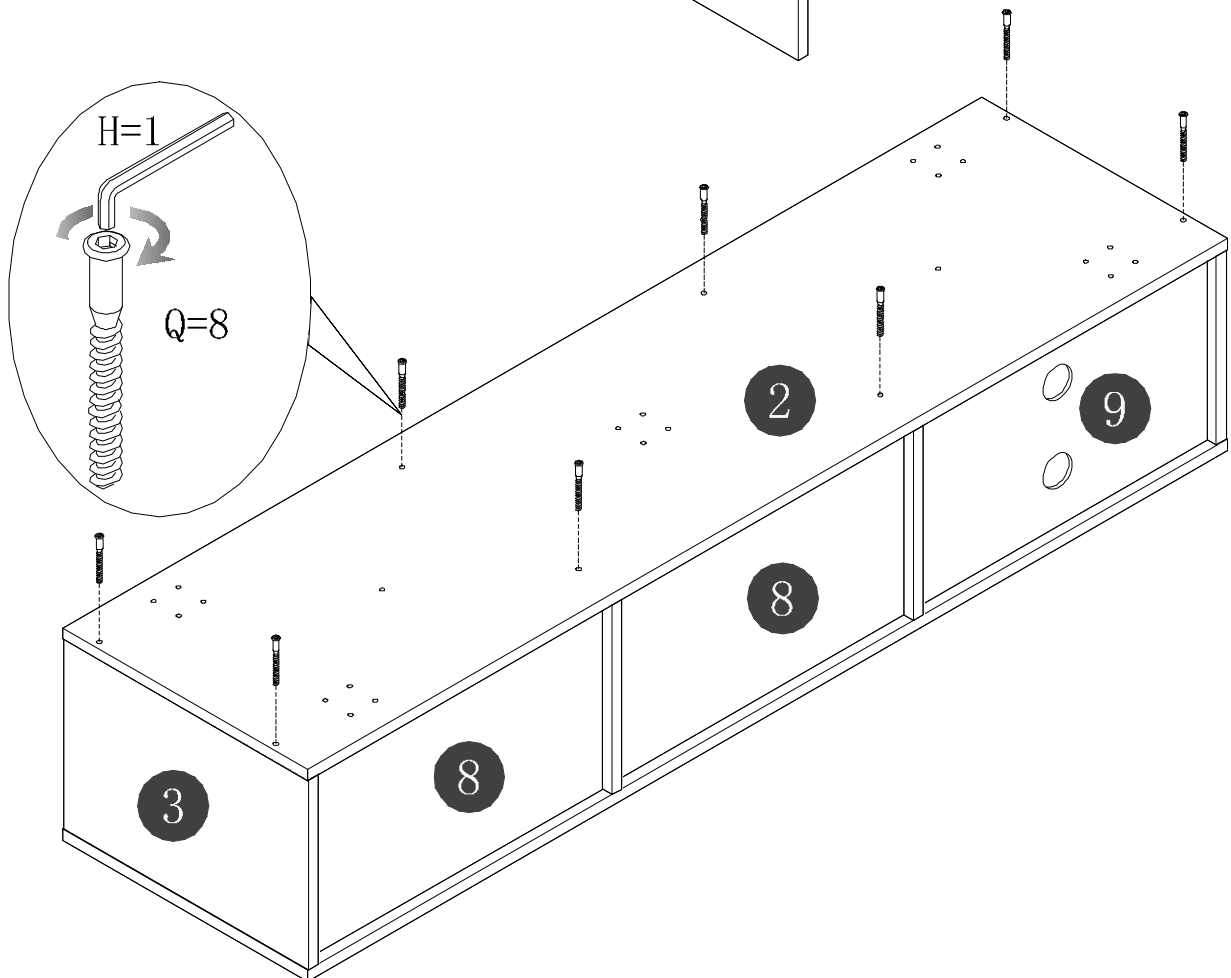

 
STEP 4

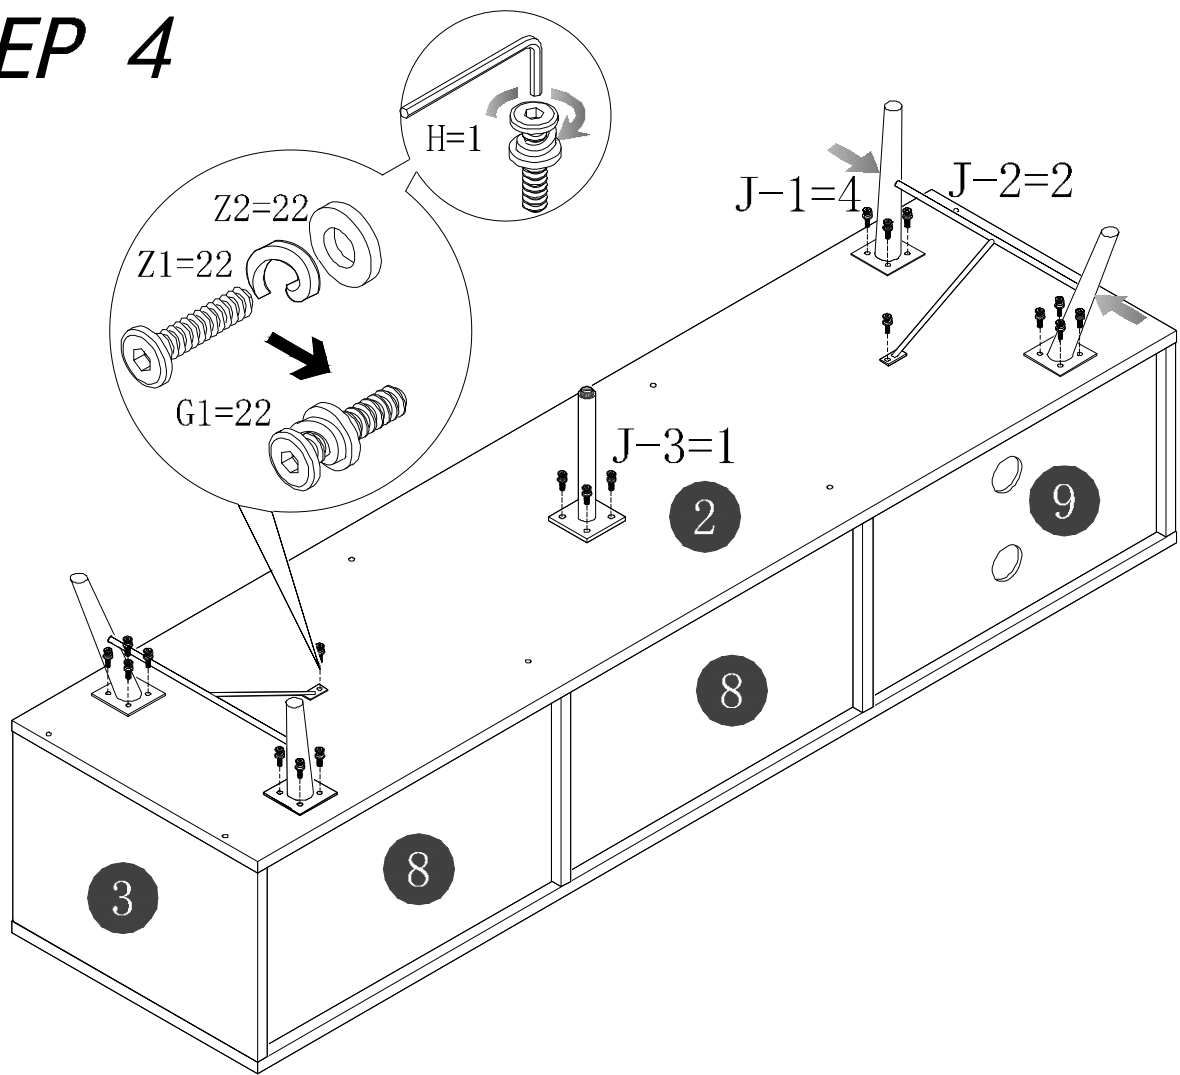

 
STEP 5

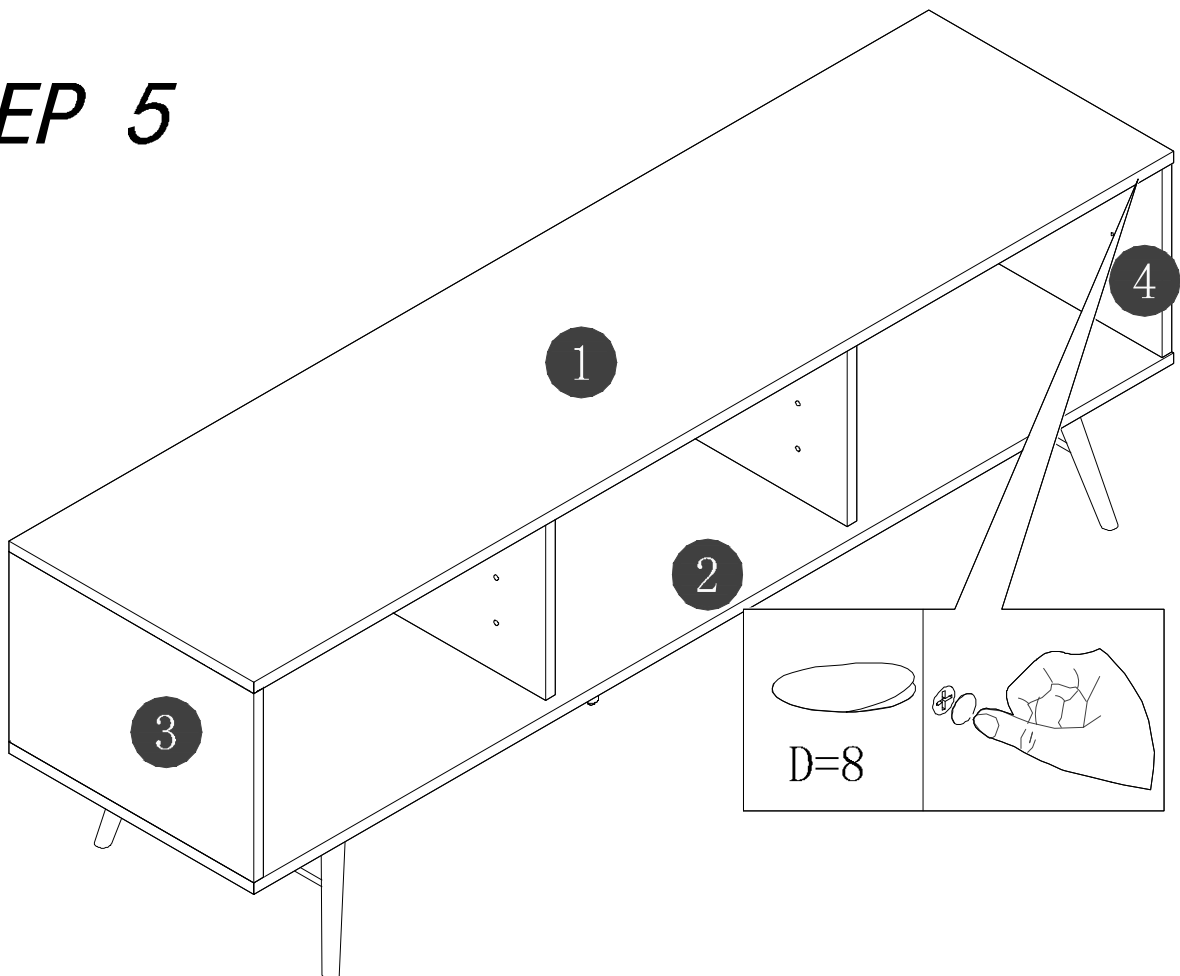

 
STEP 6

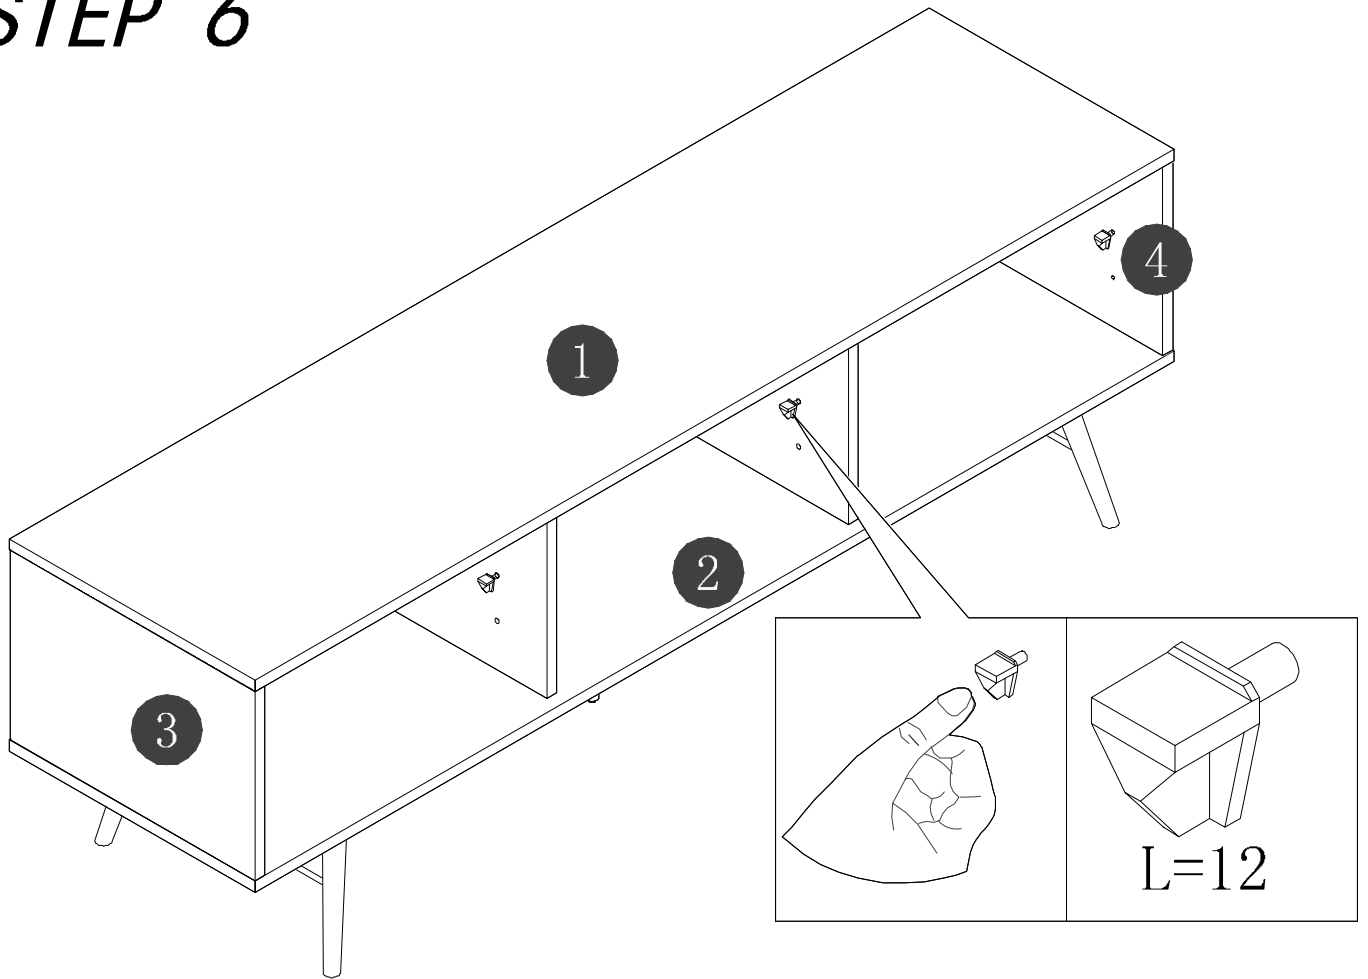

 
STEP 7

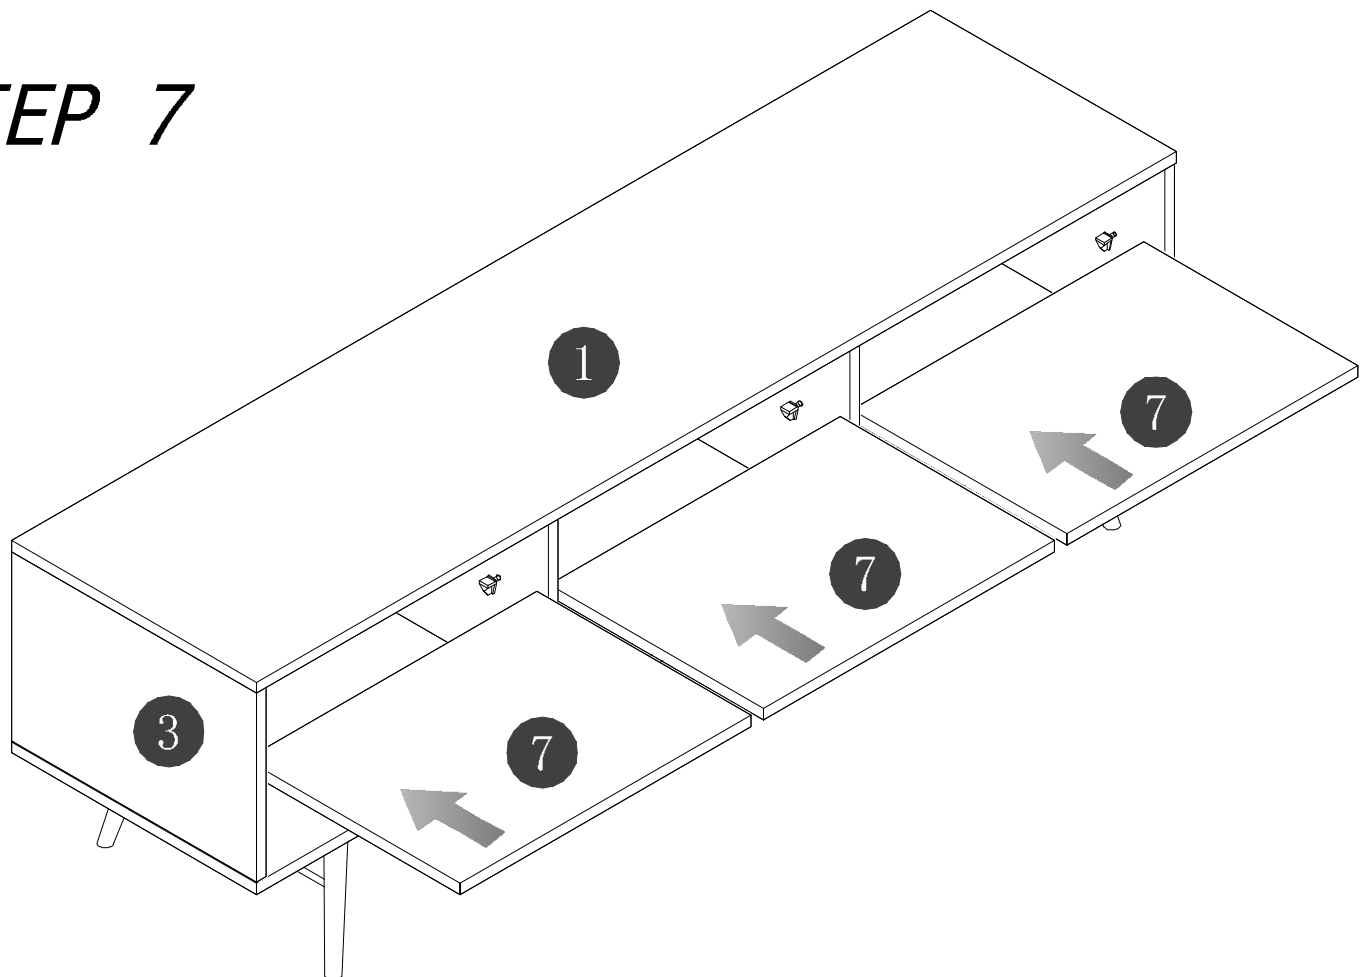




 
STEP 8

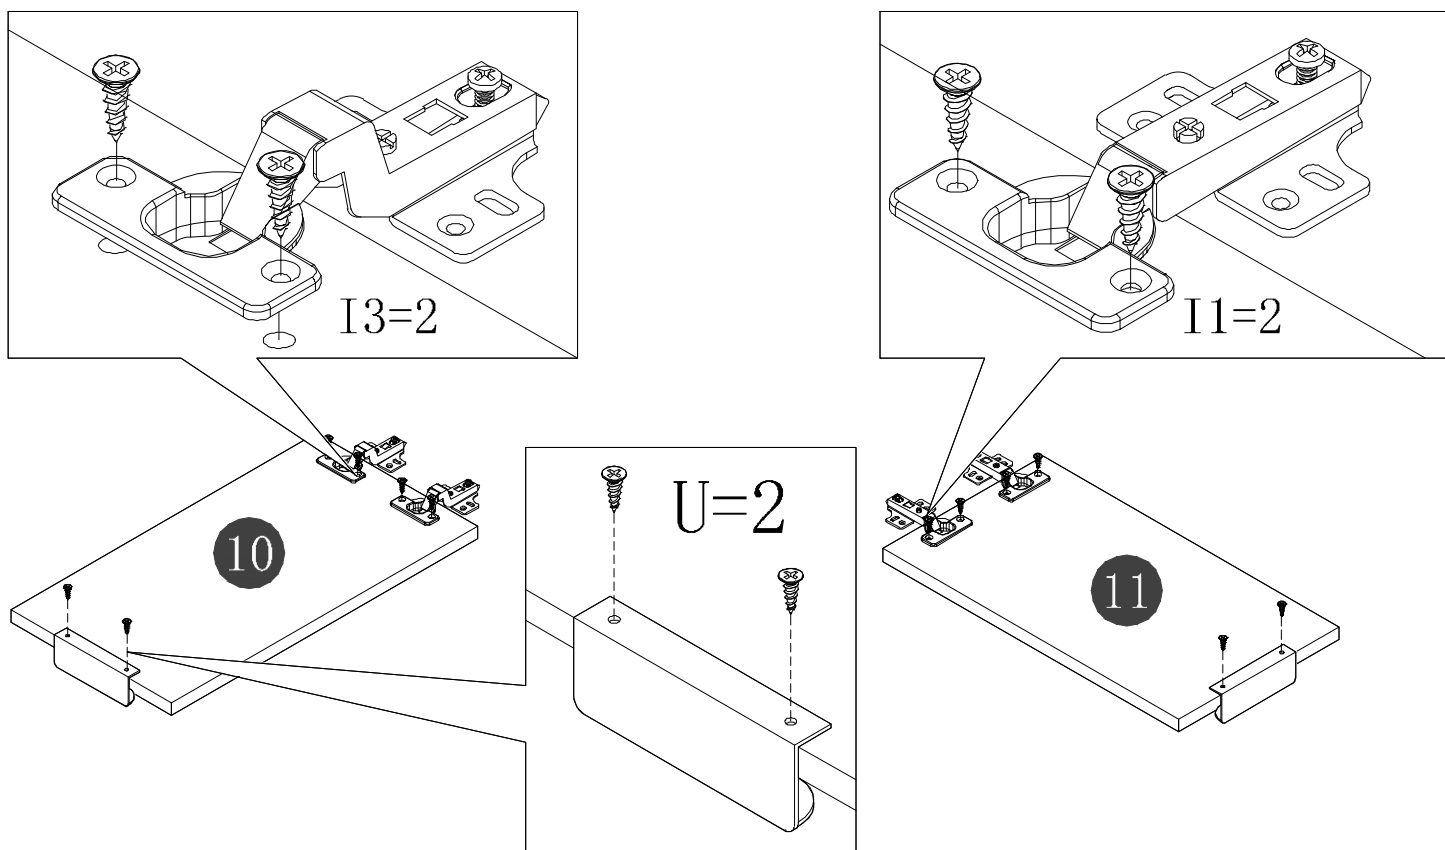

 
STEP 9

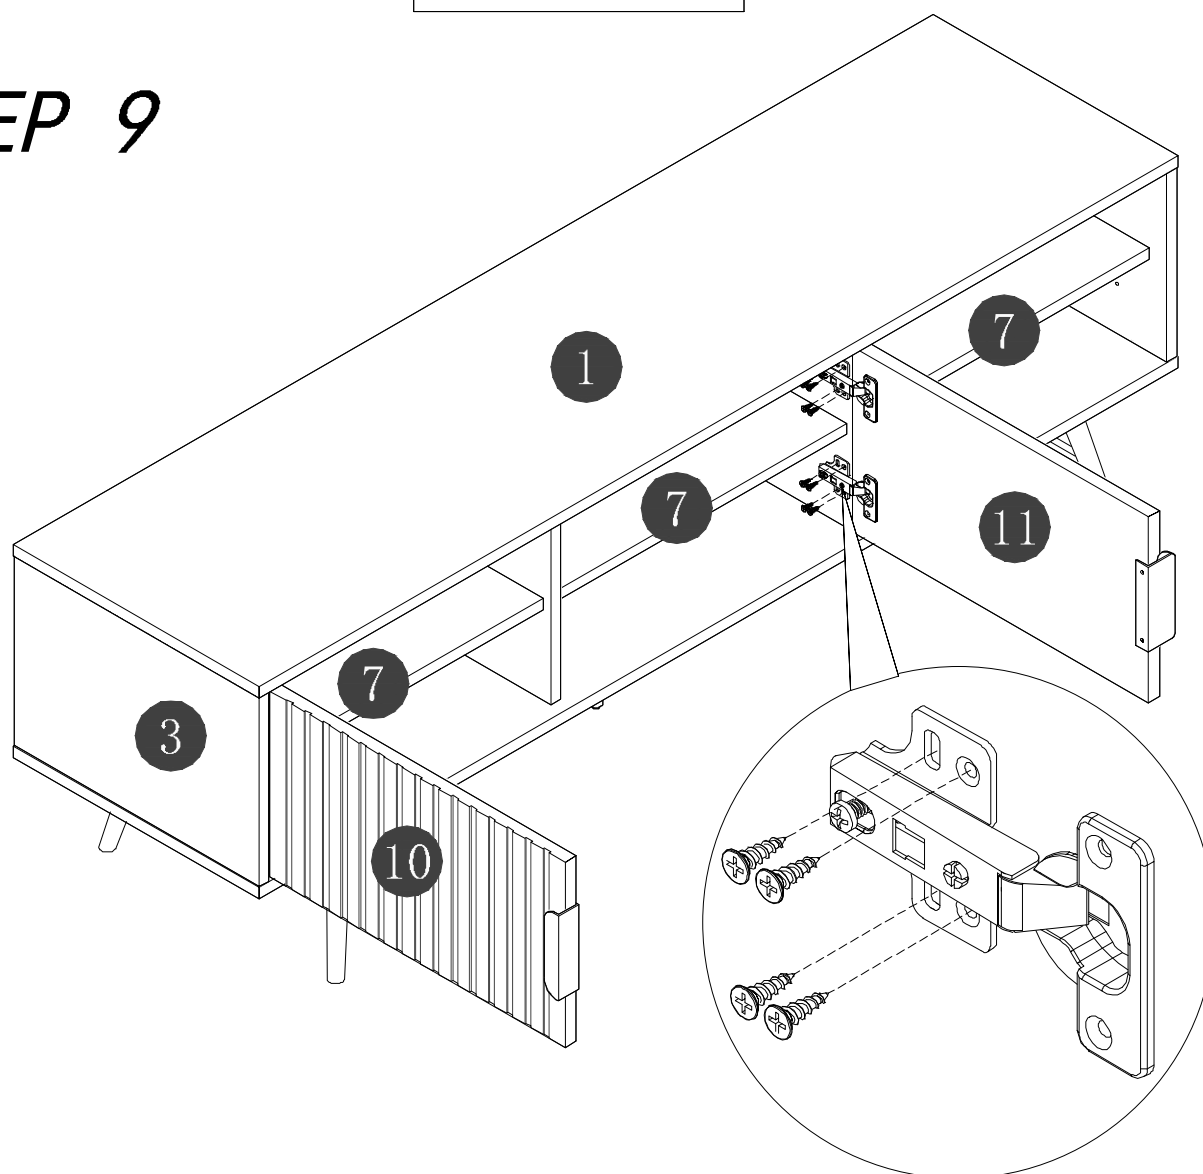

    
STEP 10

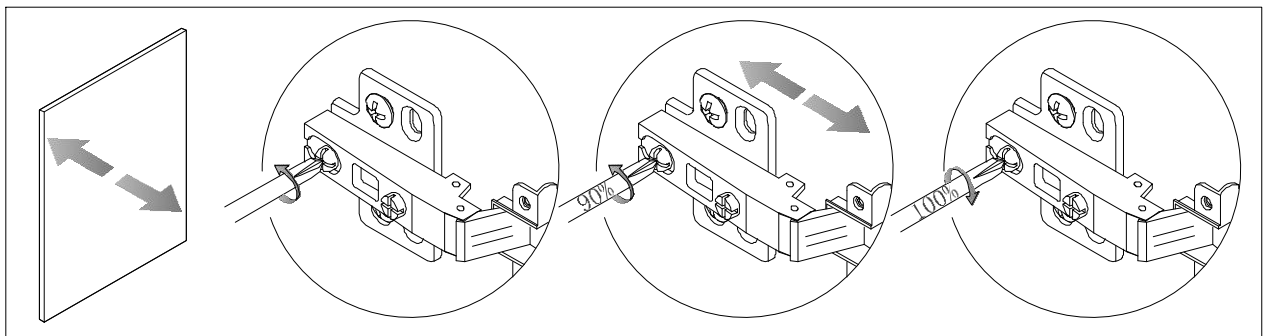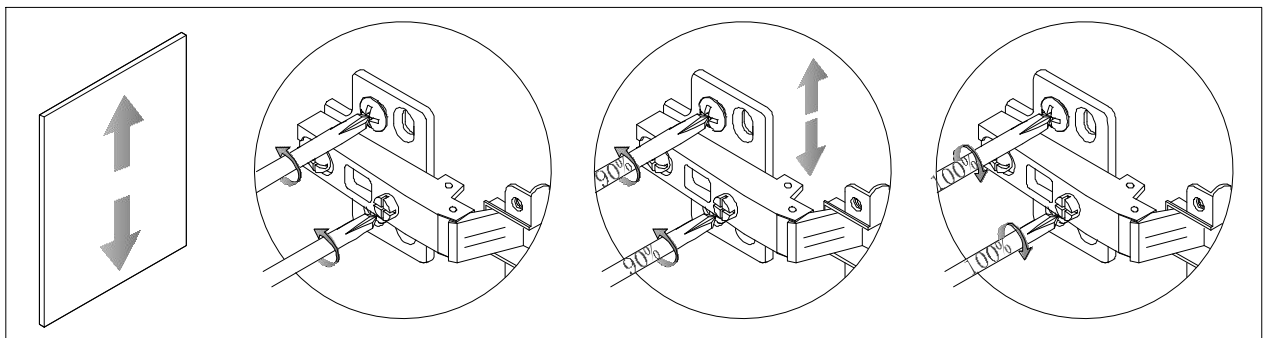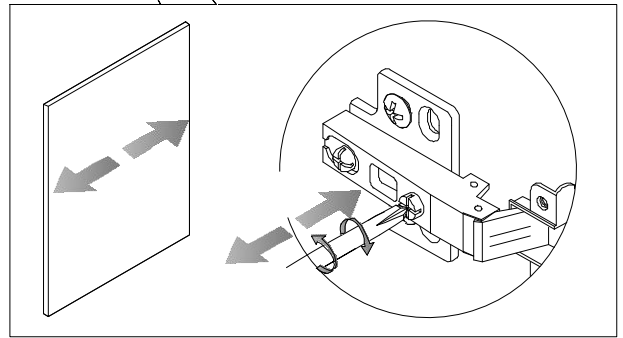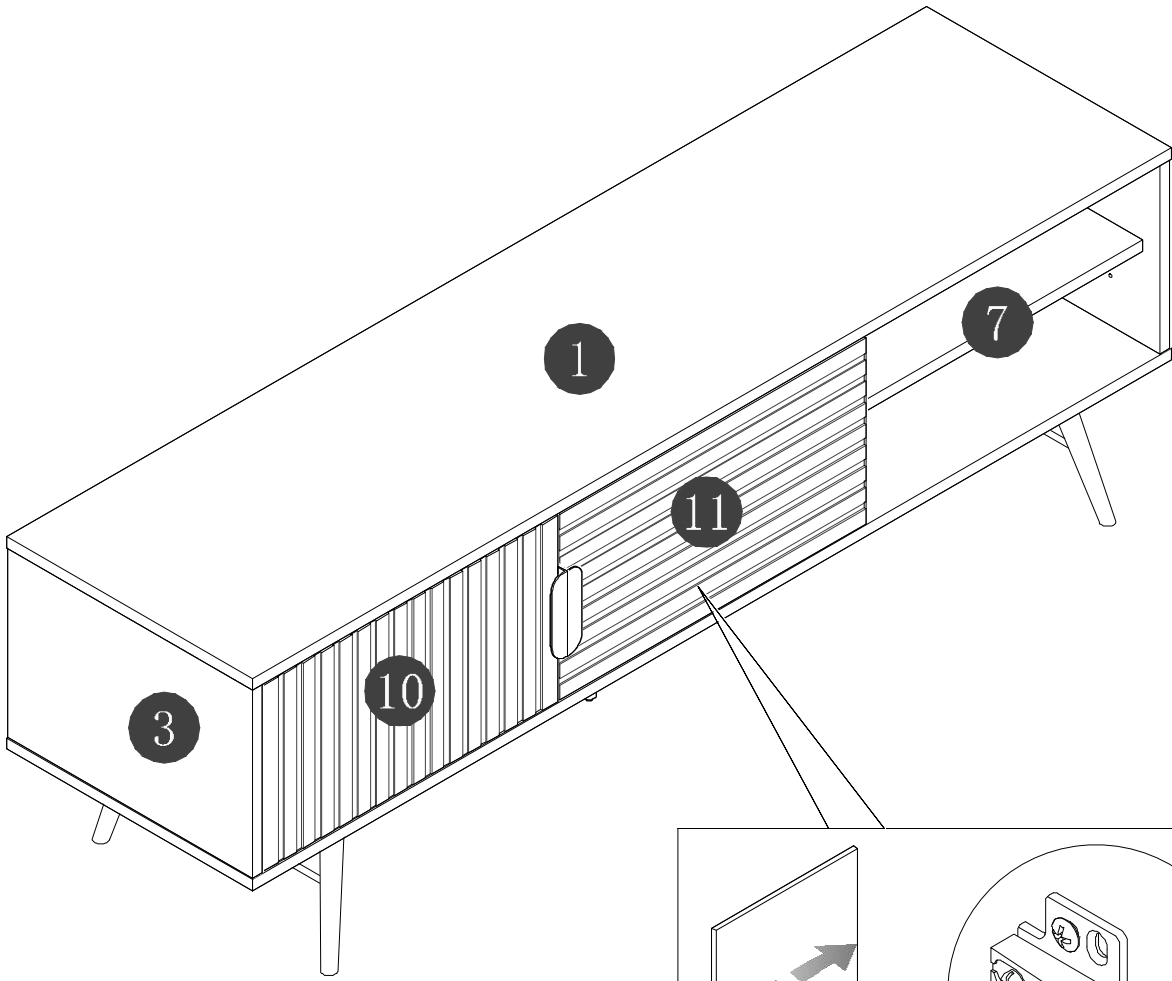

 
STEP 11

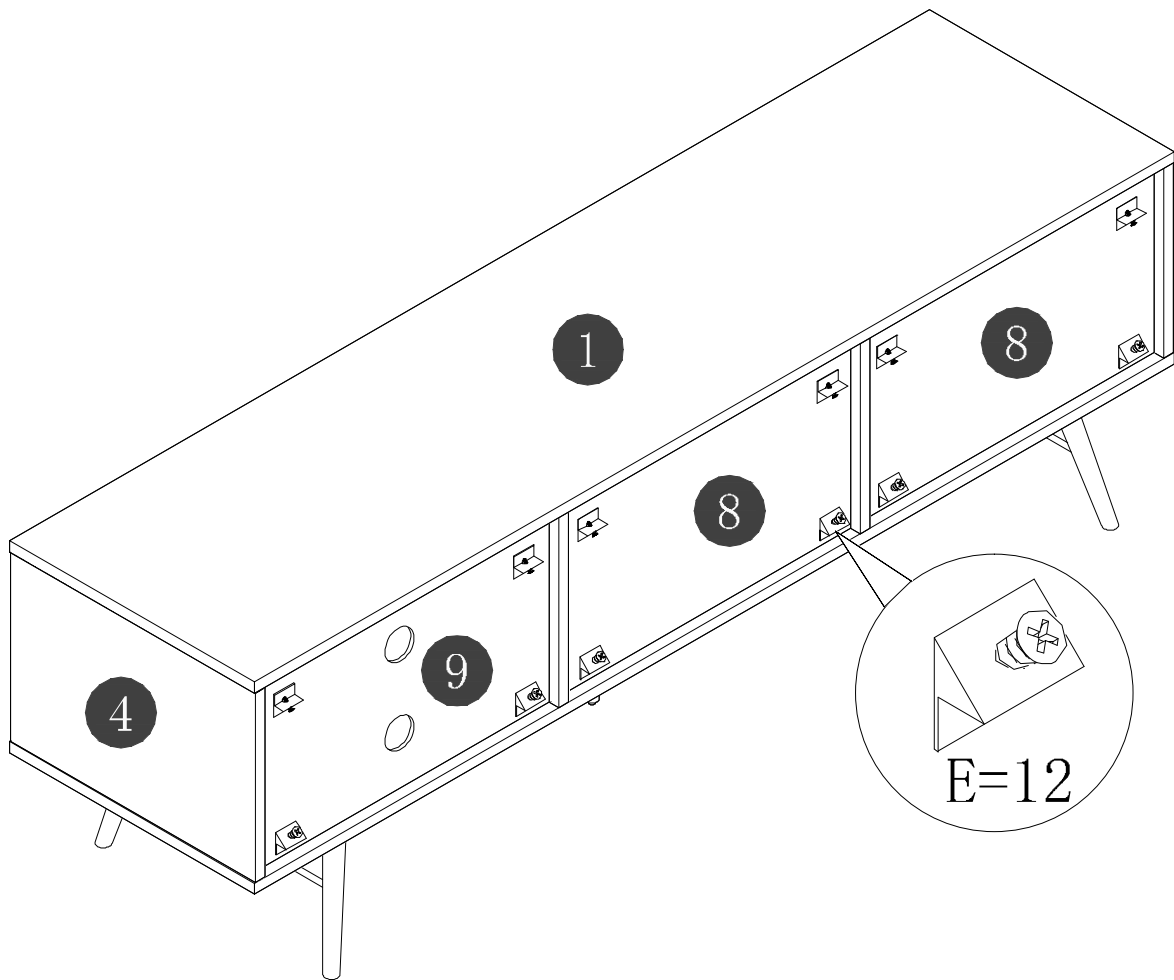

 STEP 12

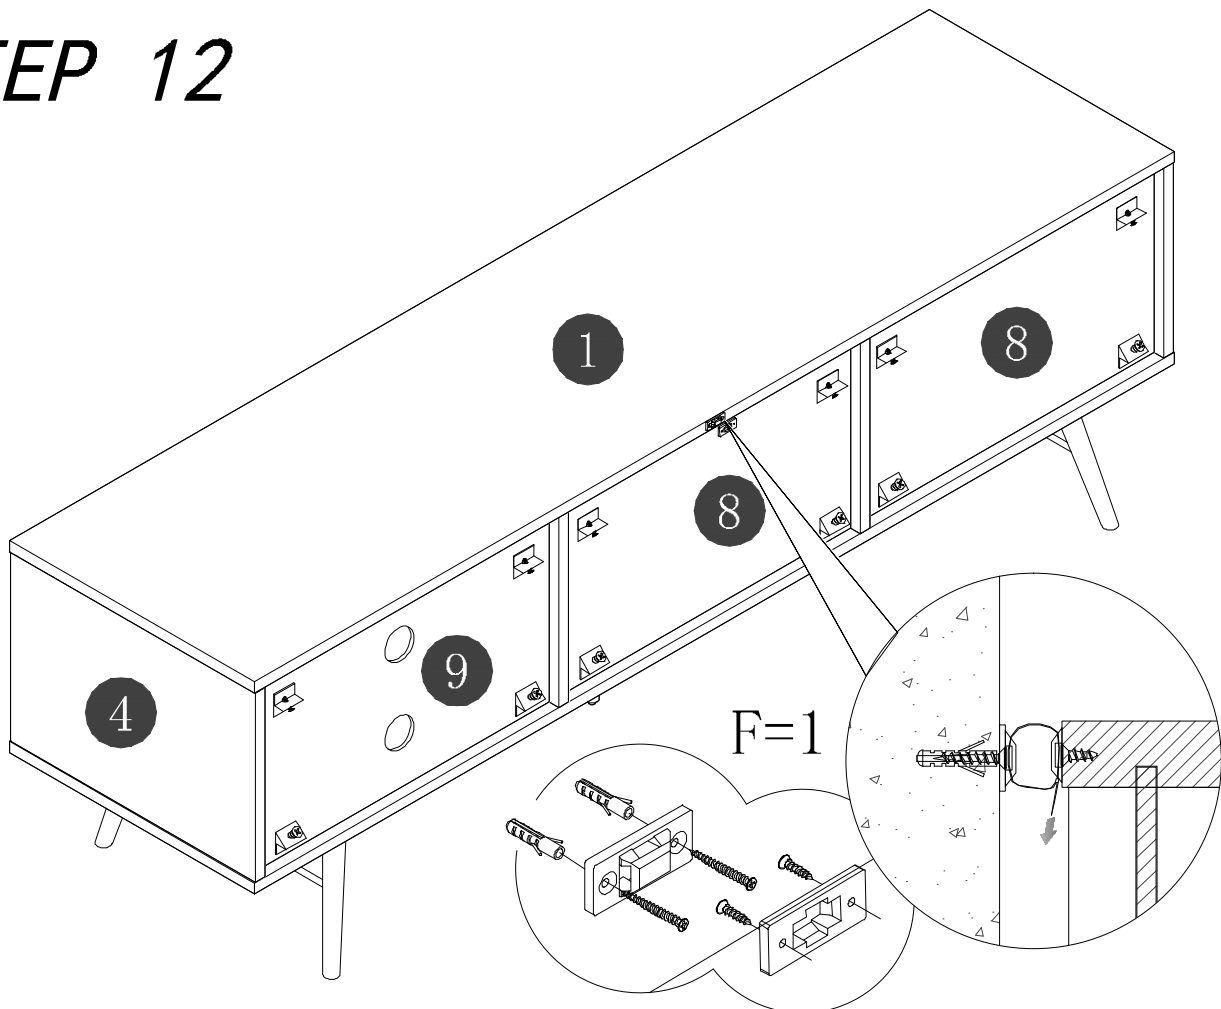


 STEP 13

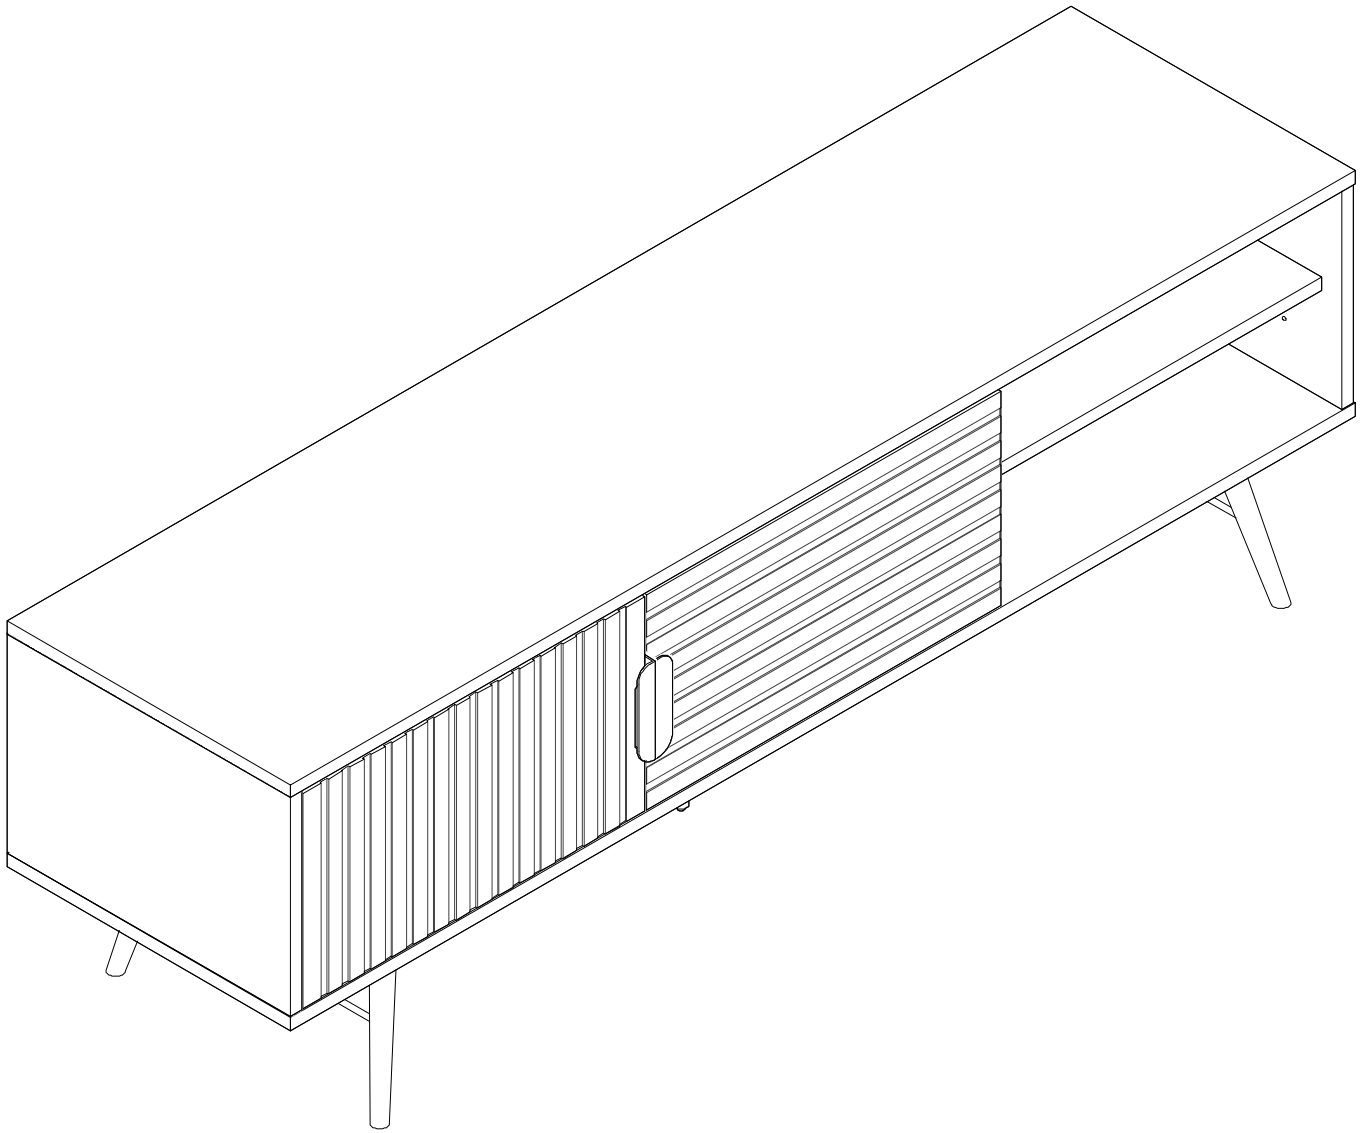

Finish

 皮克斯电视柜W150邮购包装图

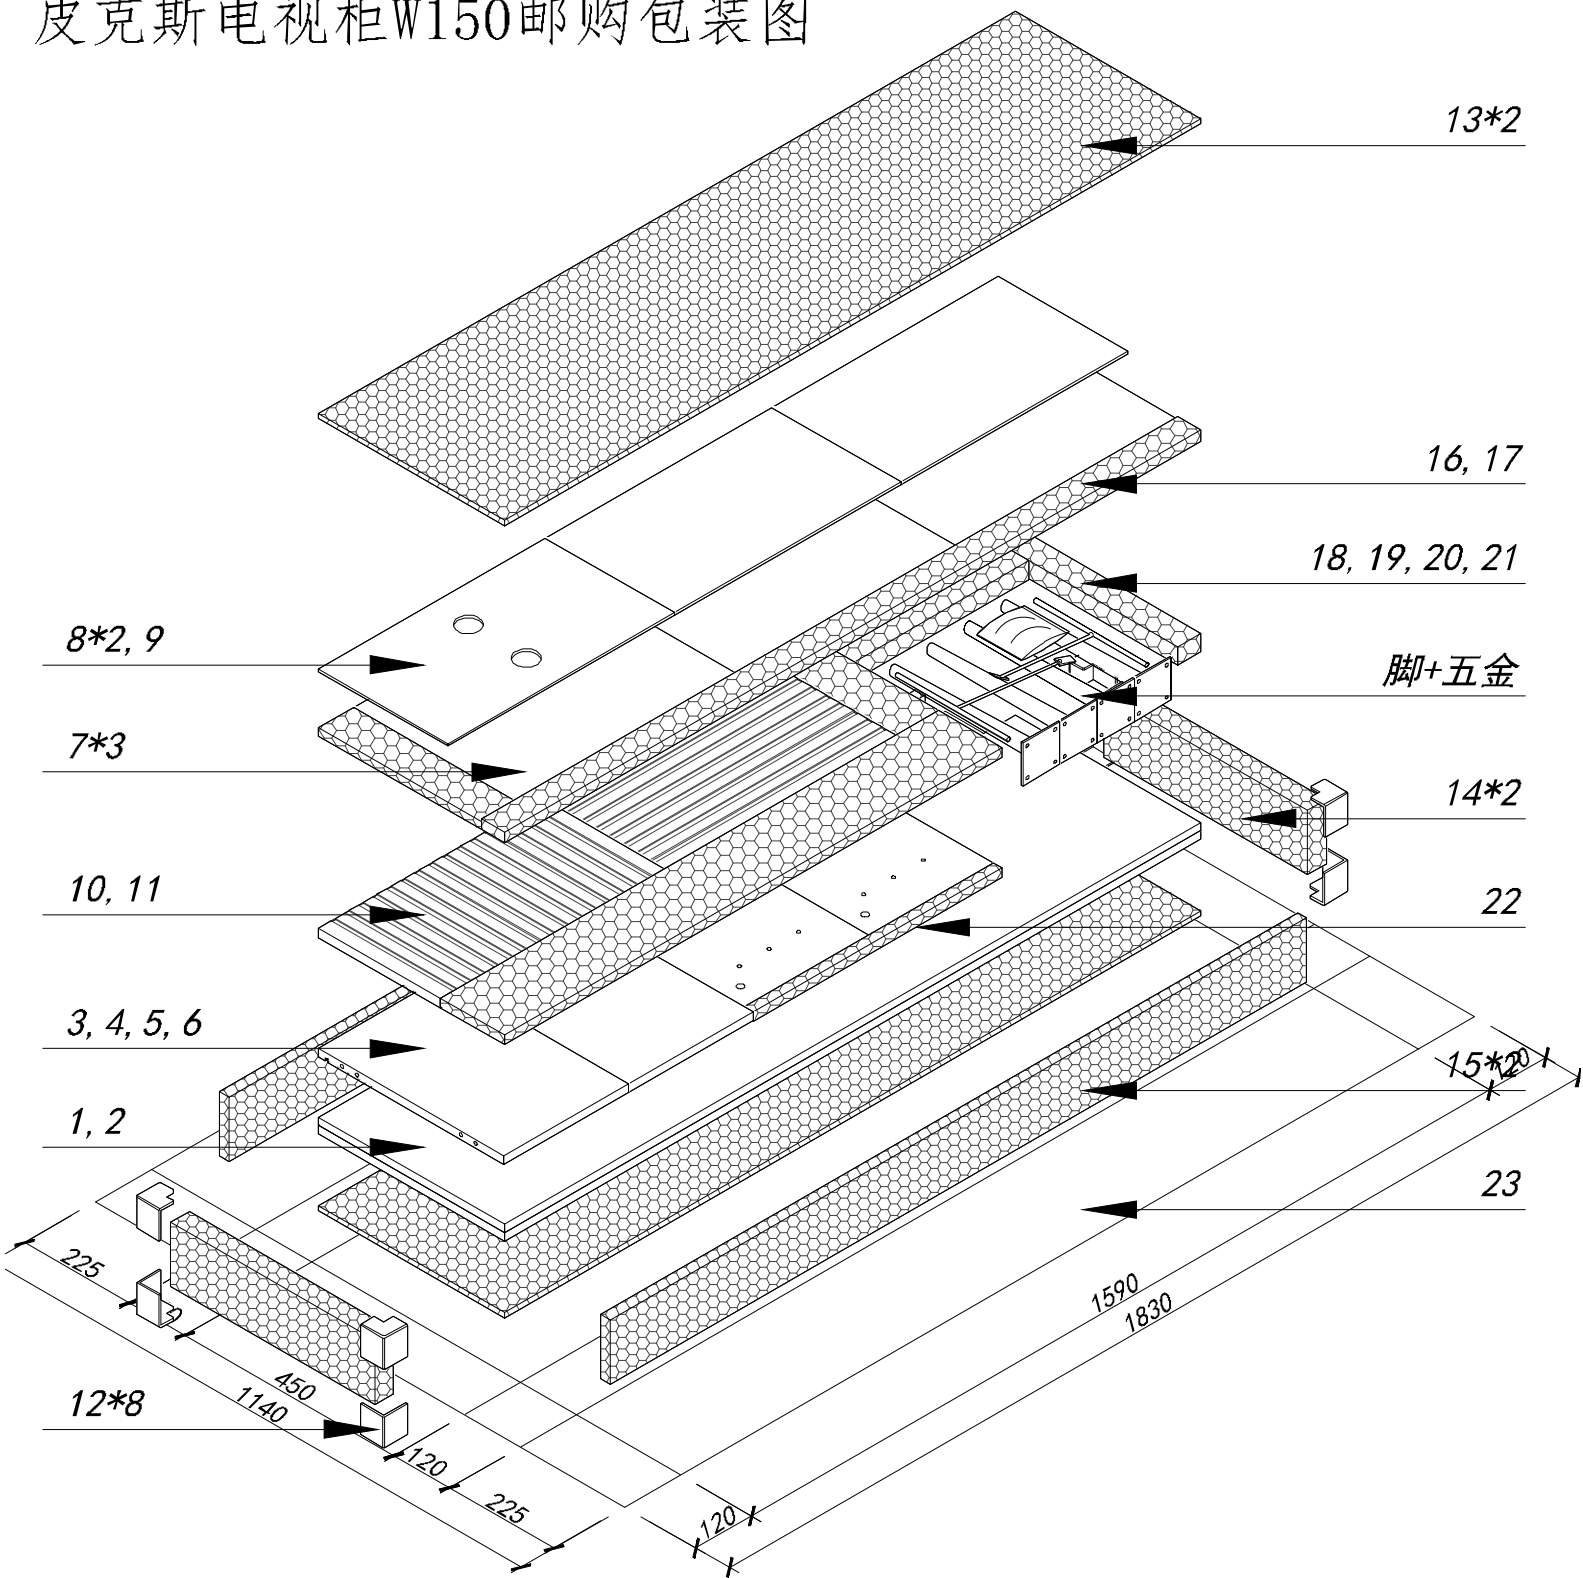

Panel No		Panel Sizes	Quantity
12	护角	50*50*50	8
13	泡沫	1500*400*10	2
14	泡沫	440*110*40	2
15	泡沫	1500*110*20	2
16	泡沫	1500*50*15	1
17	泡沫	350*75*15	1
18	泡沫	400*50*35	1
19	泡沫	378*80*35	1
20	泡沫	262*90*15	1
21	泡沫	1072*137*15	1
22	泡沫	535*20*15	1
23	纸盒	内径1590*450*120	1