 
 
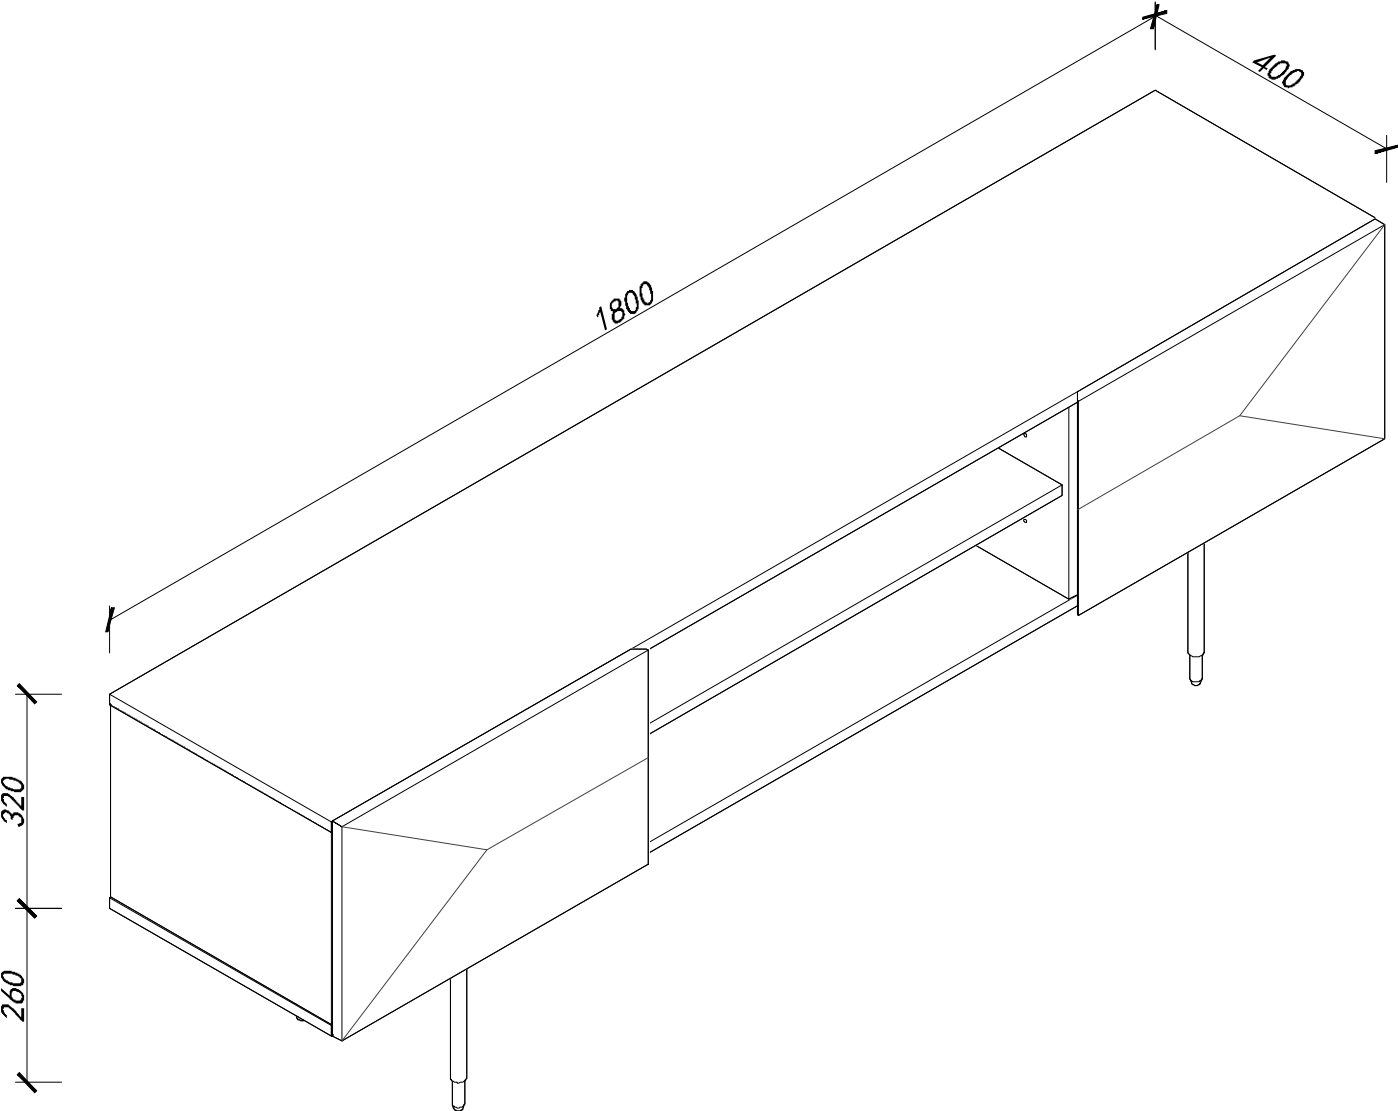 
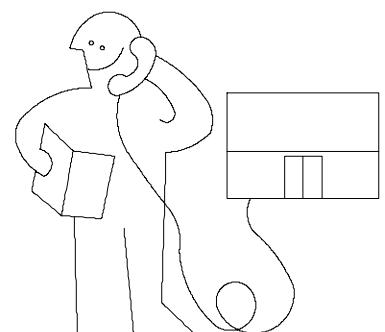 
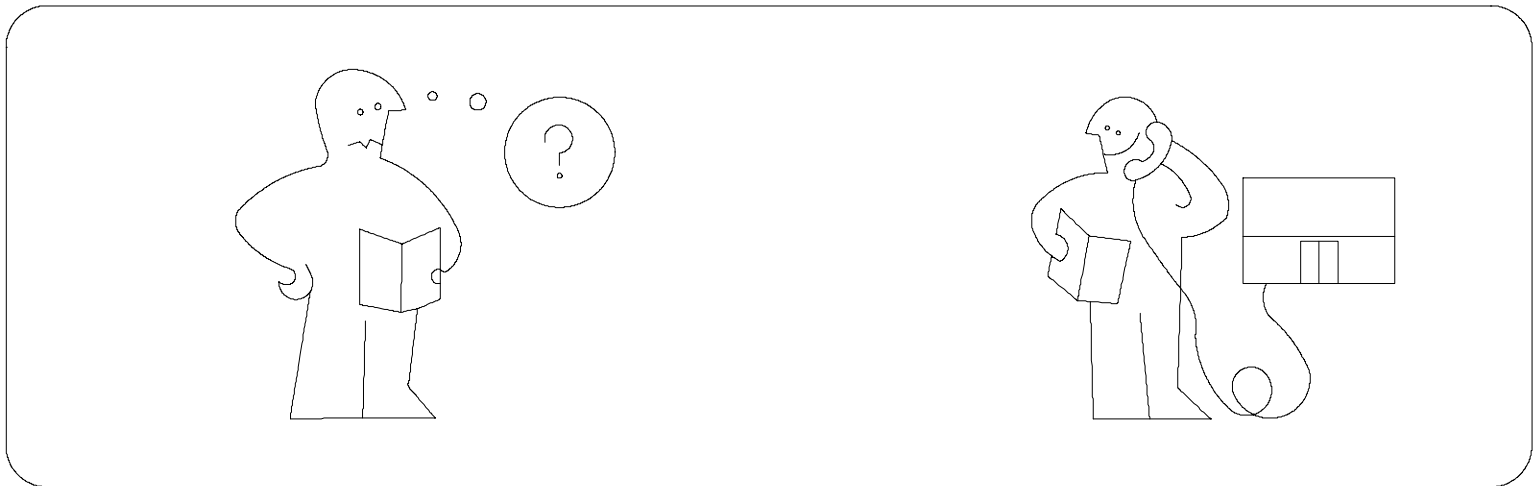 
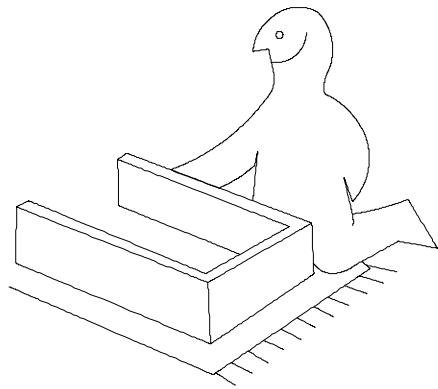 
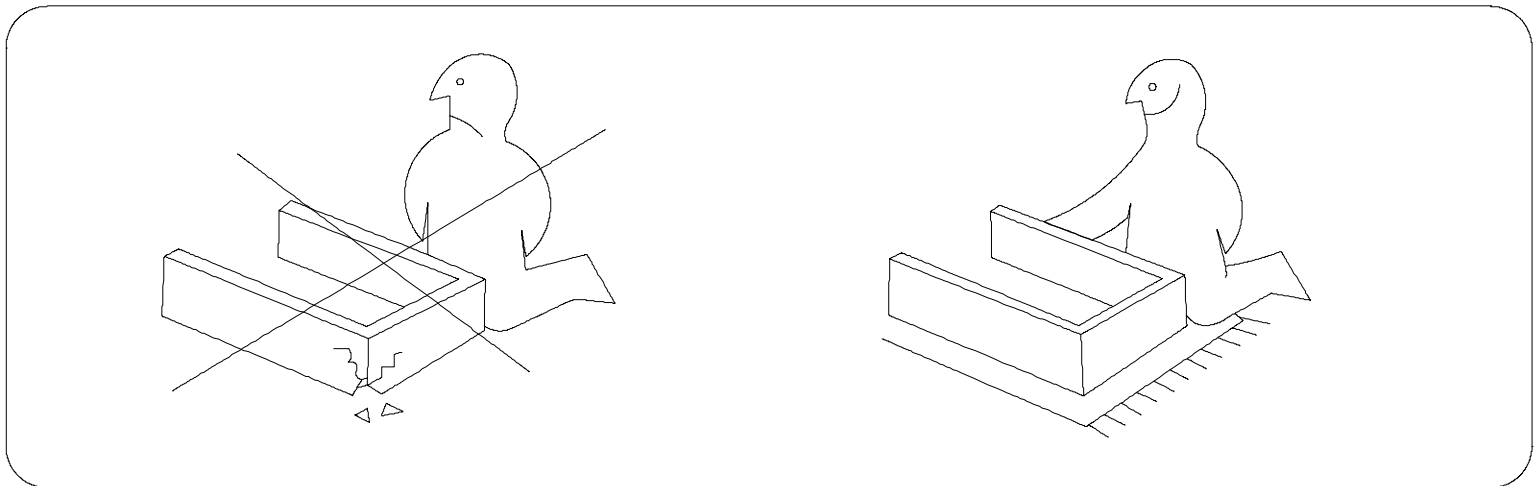 
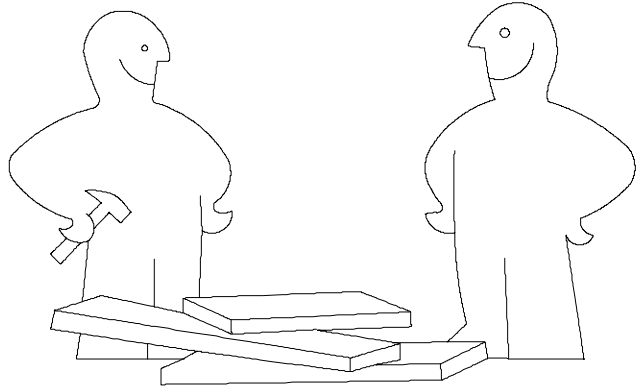 
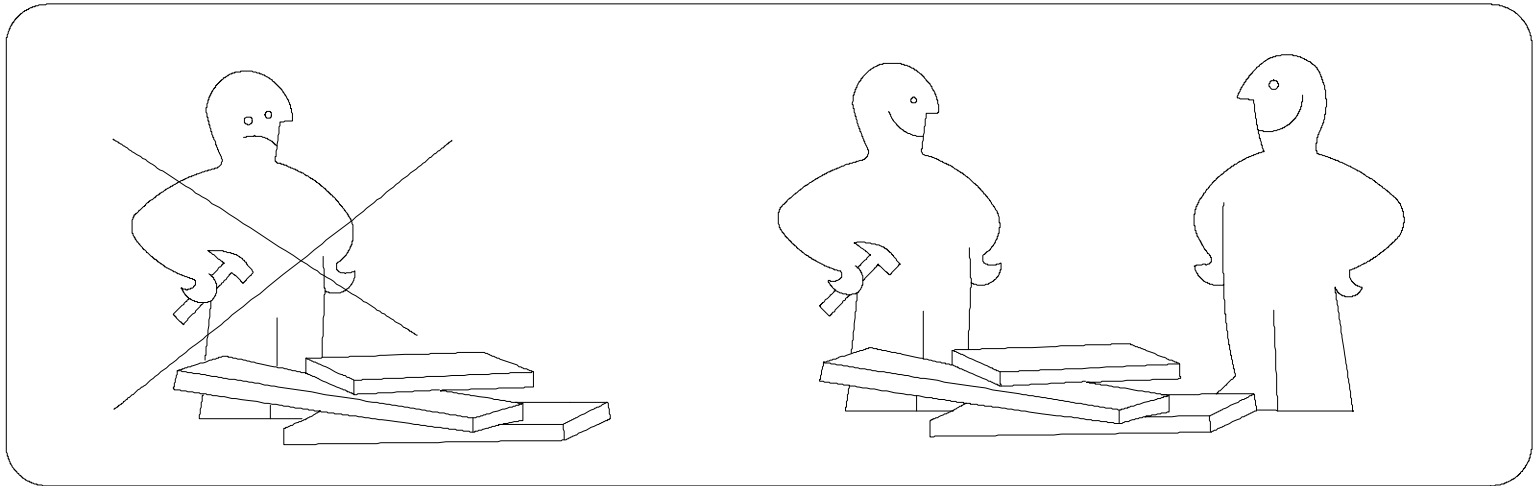 



Assembly Instructions

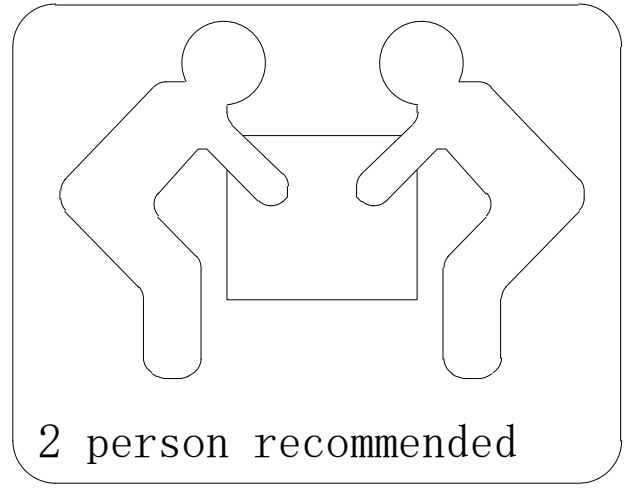

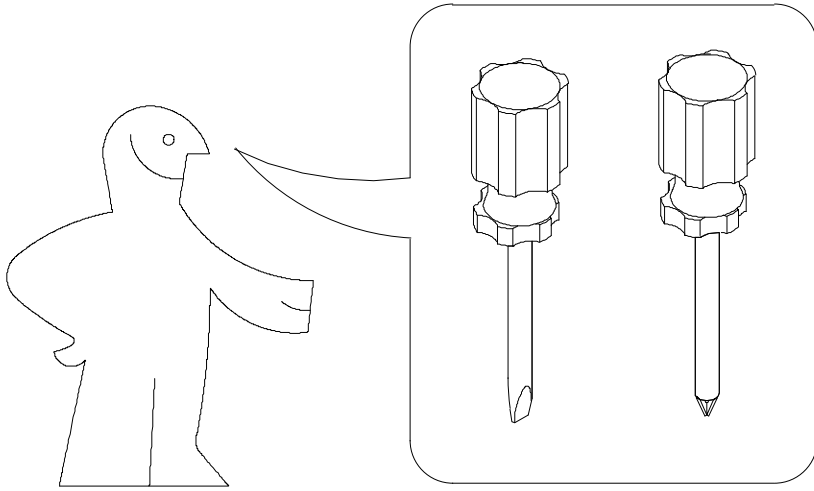


Panel No	Panel Sizes	Quantity
1	1800*382*16	1
2	1800*382*16	1
3	288*381*16	1
4	288*381*16	1
5	288*381*16	1
6	288*381*16	1

Panel No	Panel Sizes	Quantity
7	741*350*16	1
8	492*350*16	2
9	505*298*5	2
10	754*298*5	1
11	527*320*18	1
12	527*320*18	1

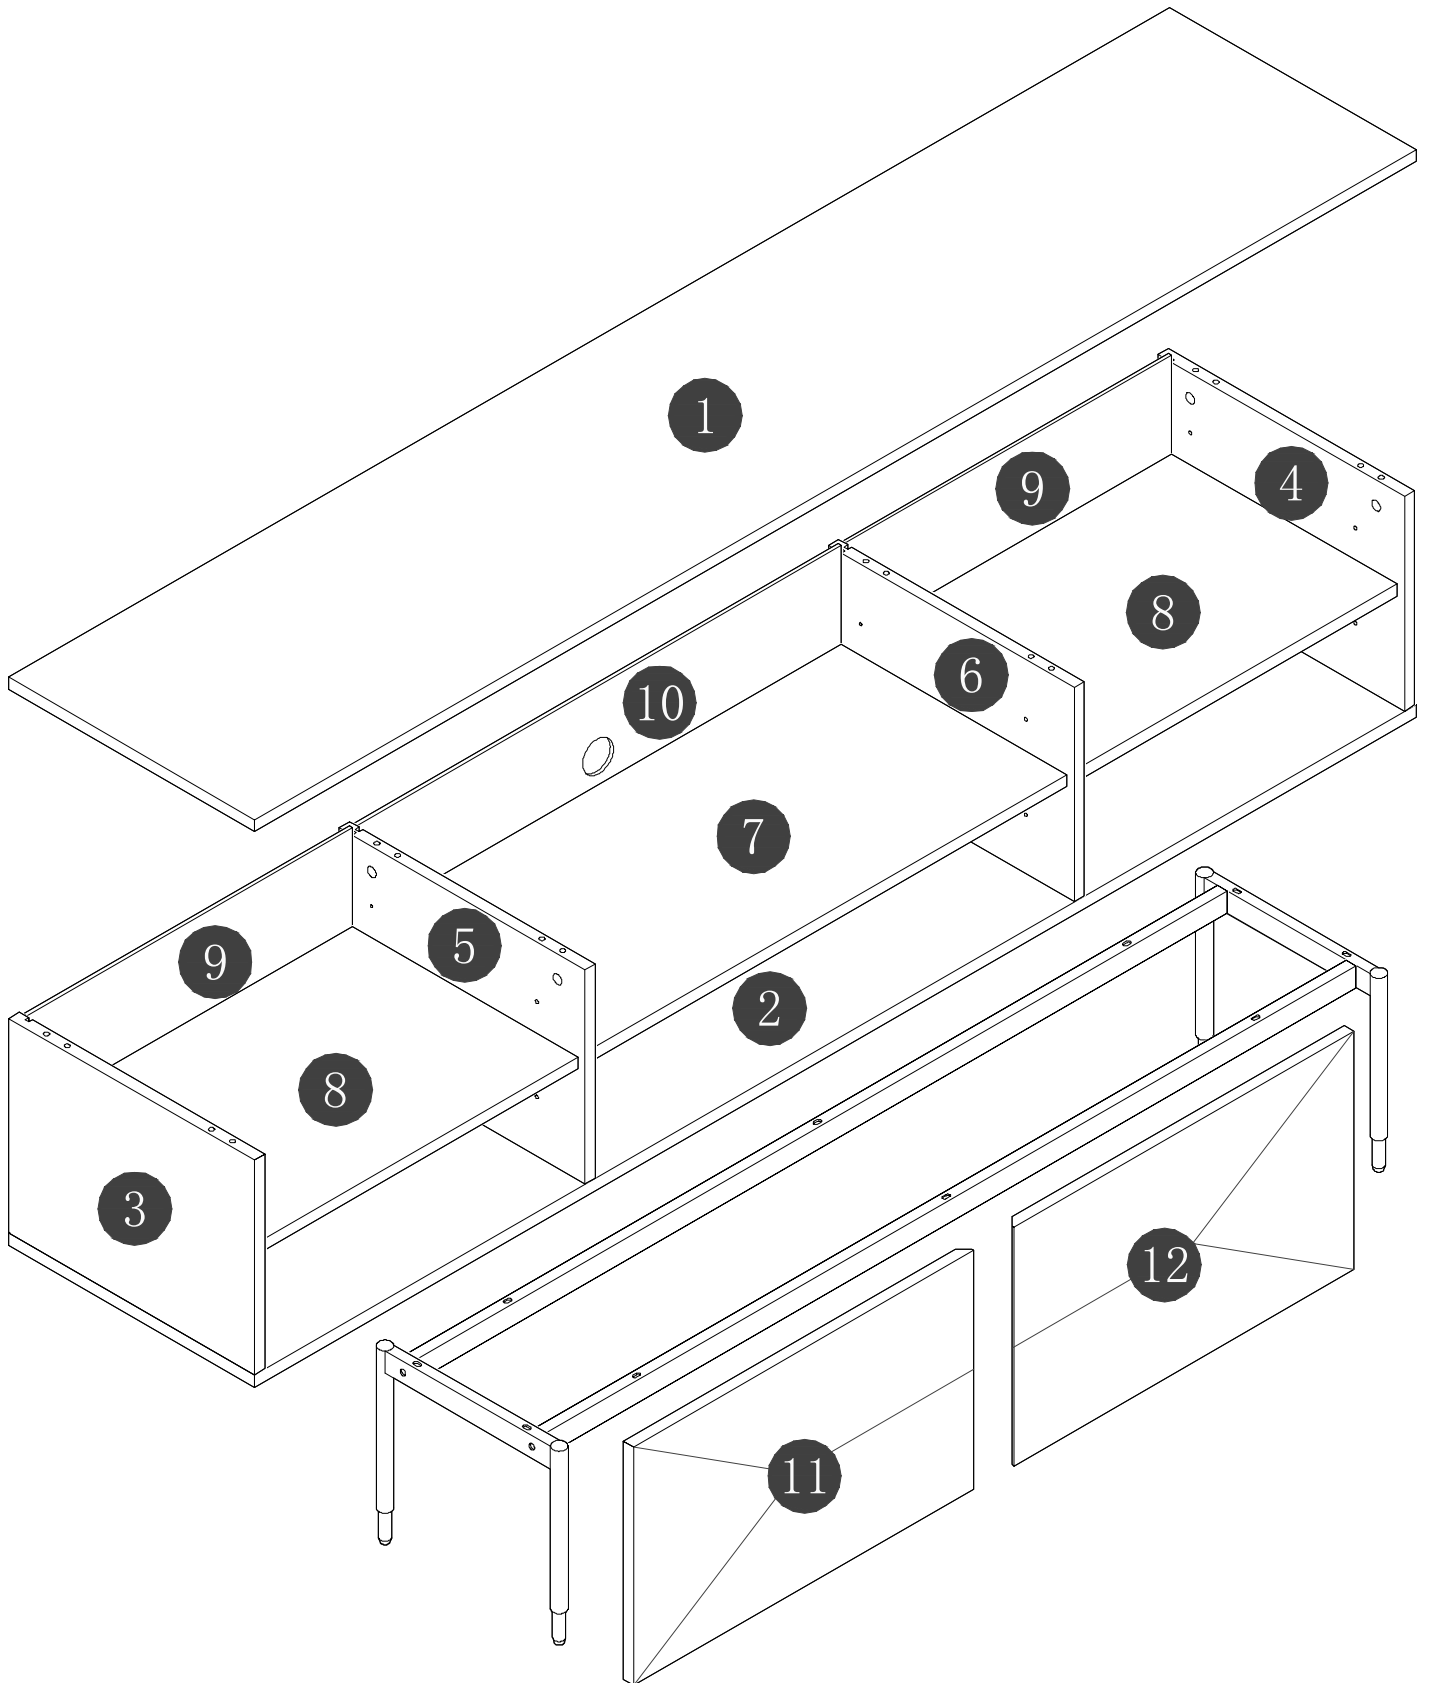 


Fittings

 

A=8



 
B=16

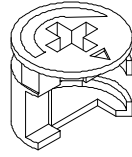


C=8



 D=8

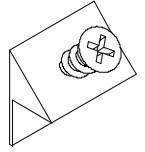

E=14

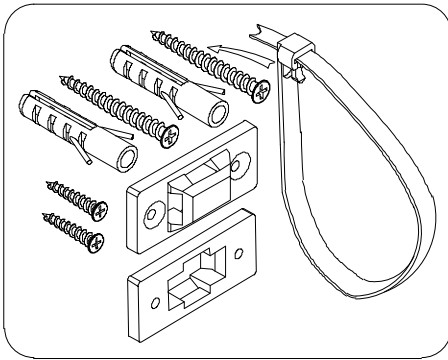 

F=1



 
M6*25

G1=4



M6*45


G2=10

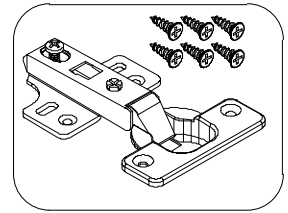

I1=4




 H=1

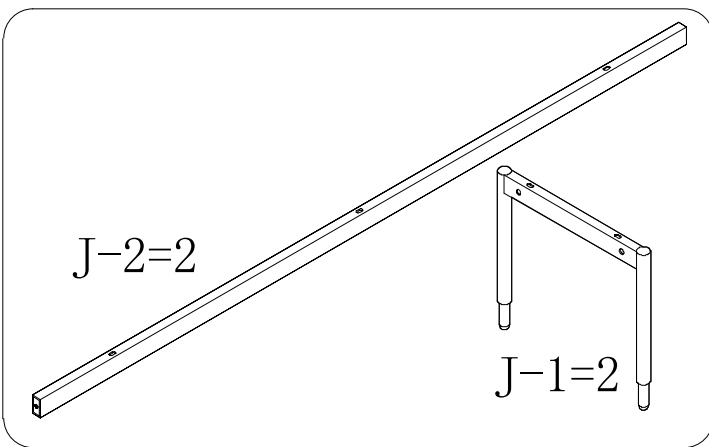

J-2=2

 
J-1=2



L=12



 Z1=10

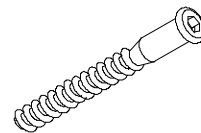


Q=8




Z2=10

 
STEP 1

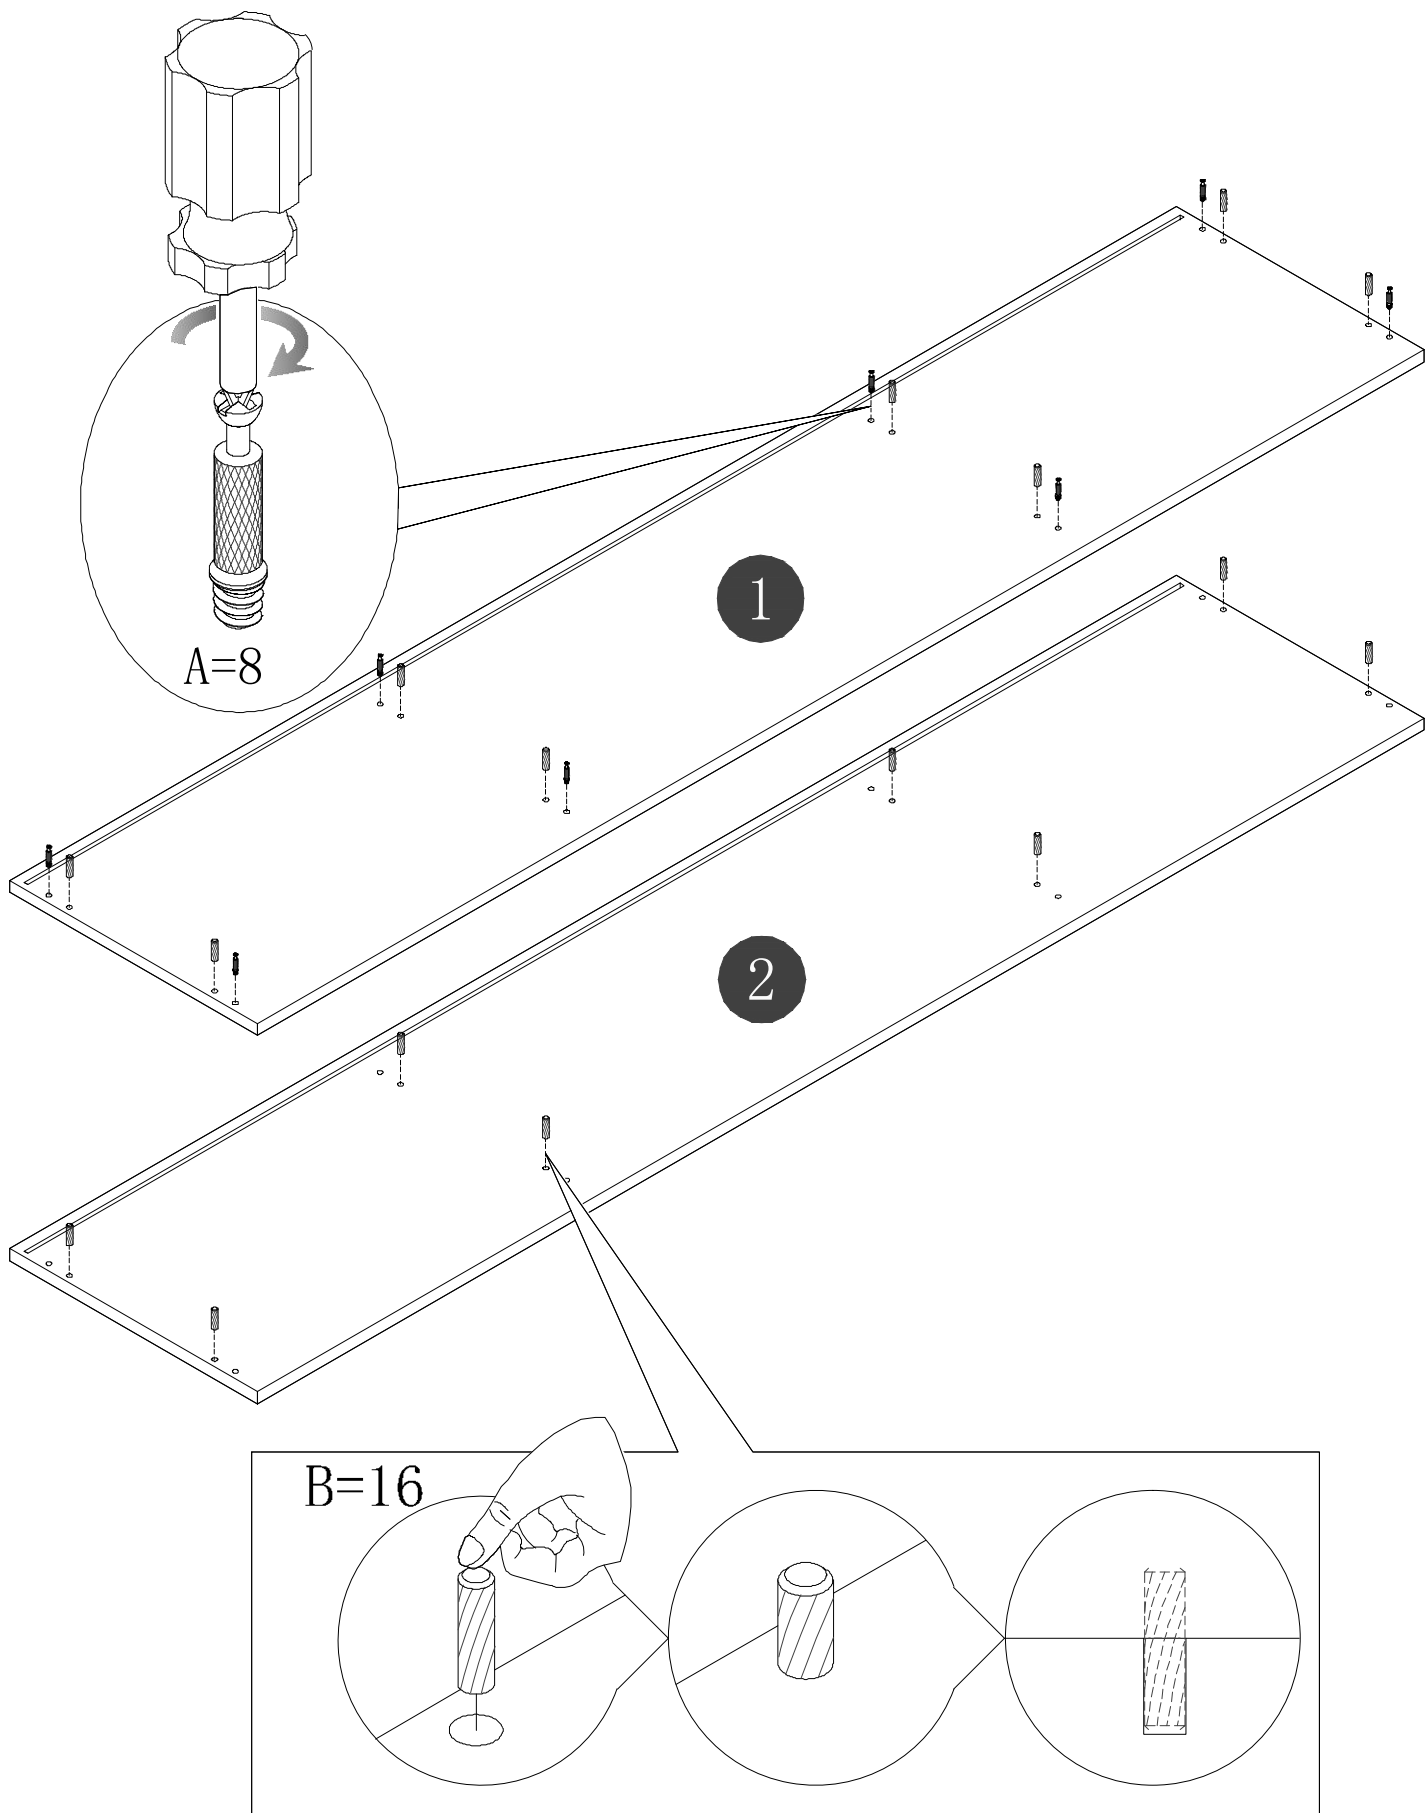

 
STEP 2

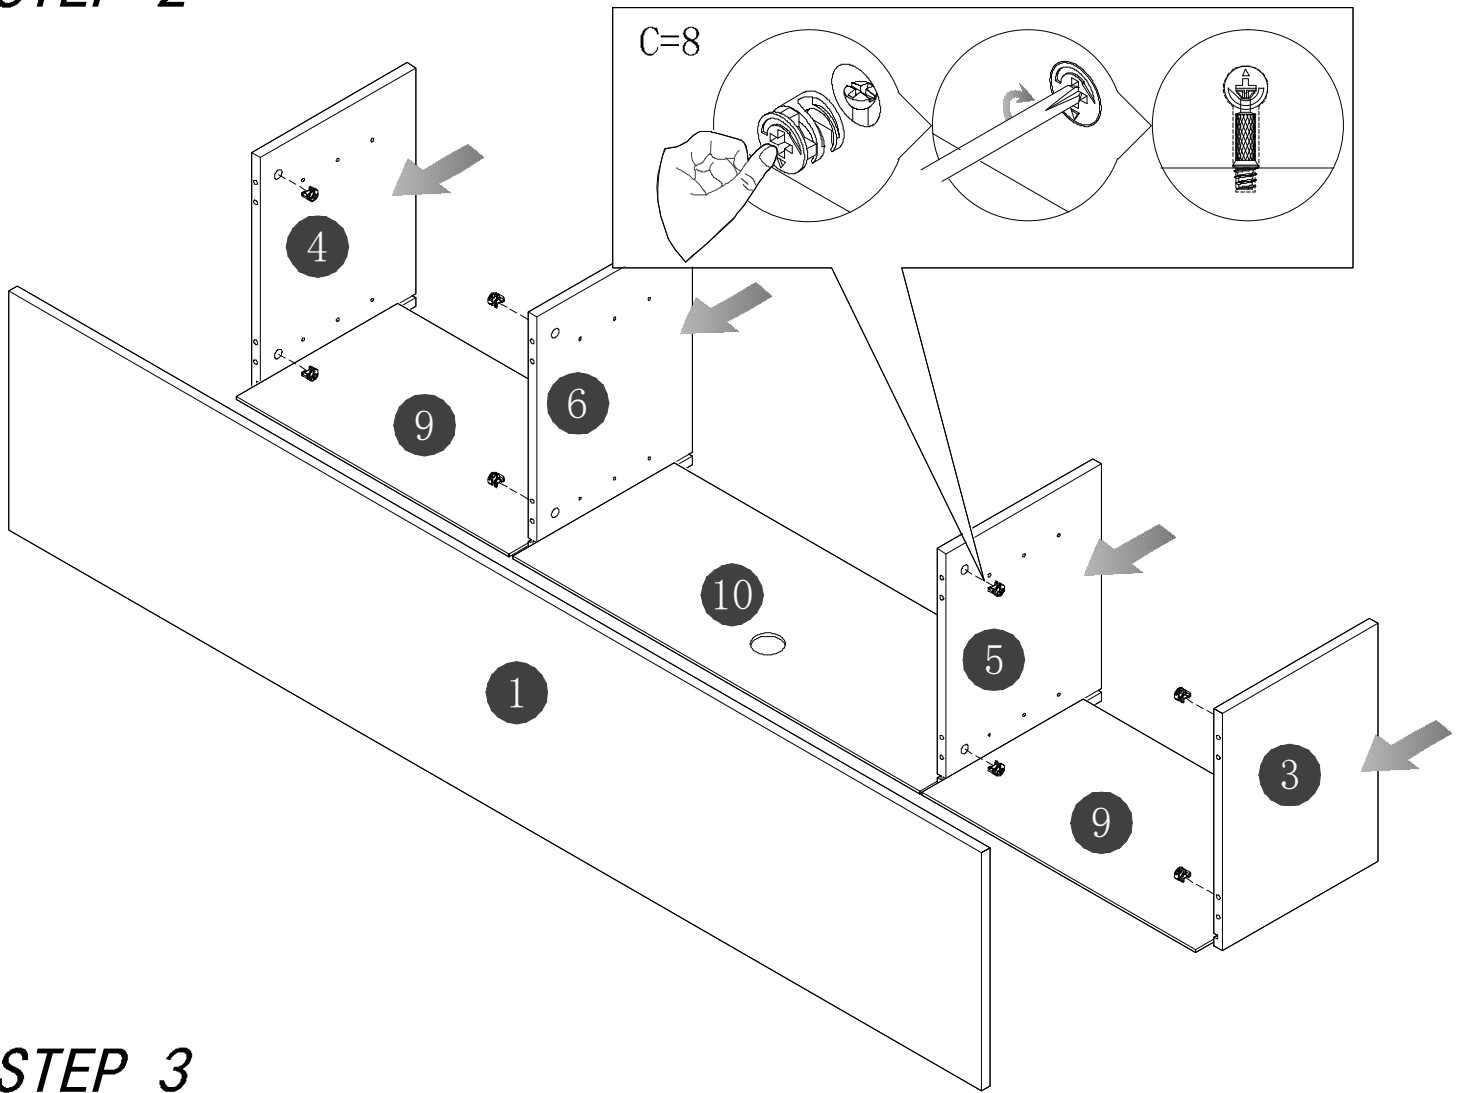

 
STEP 3

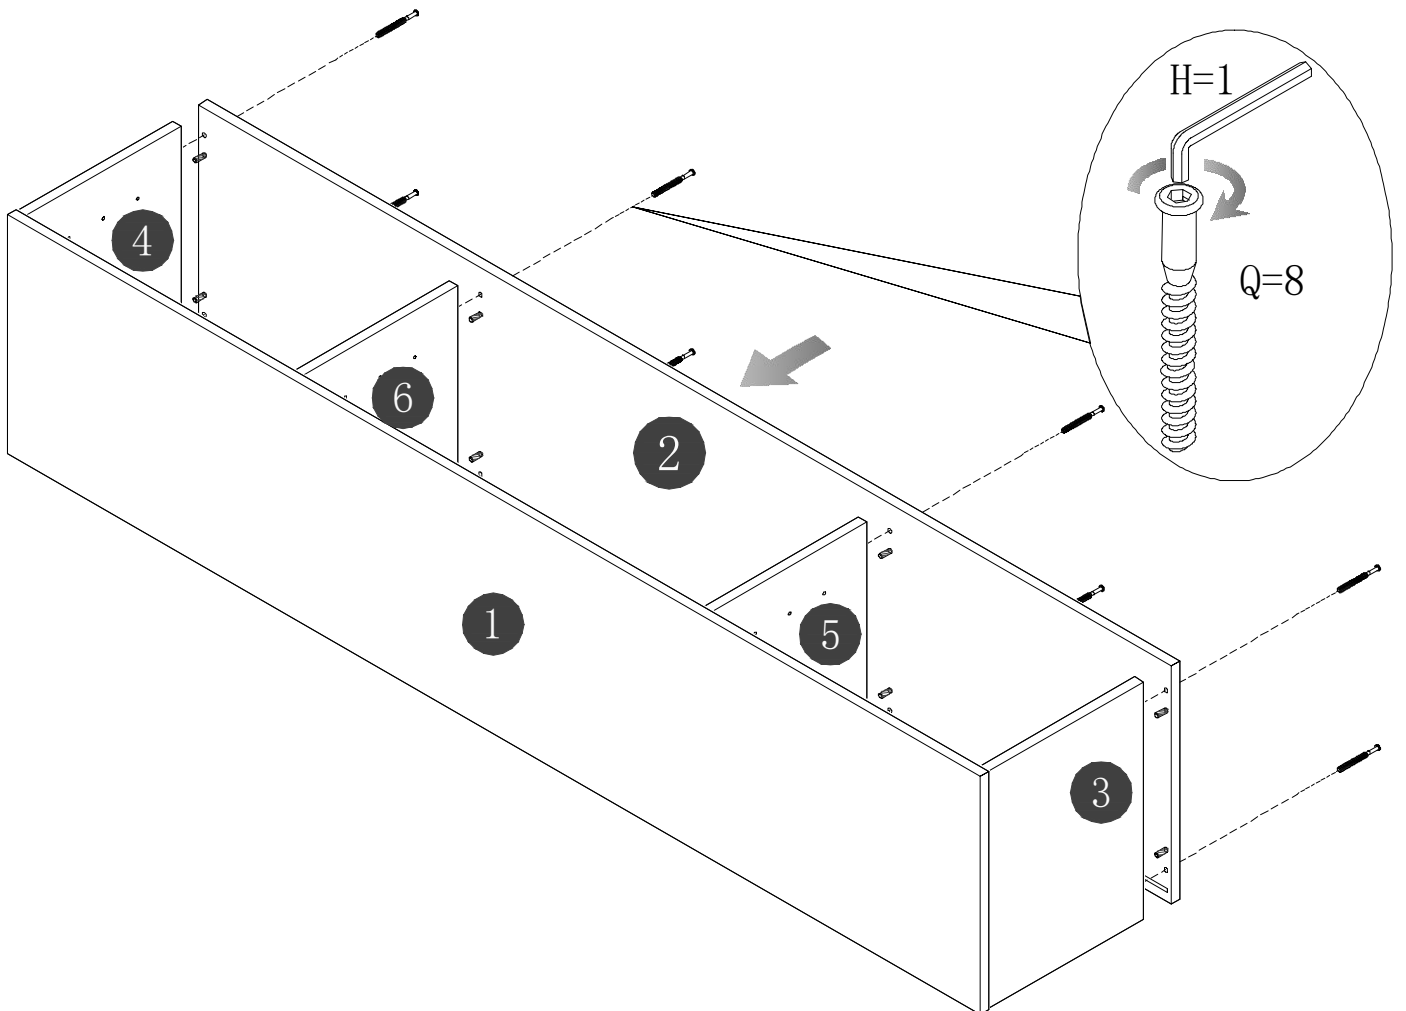

 
STEP 4

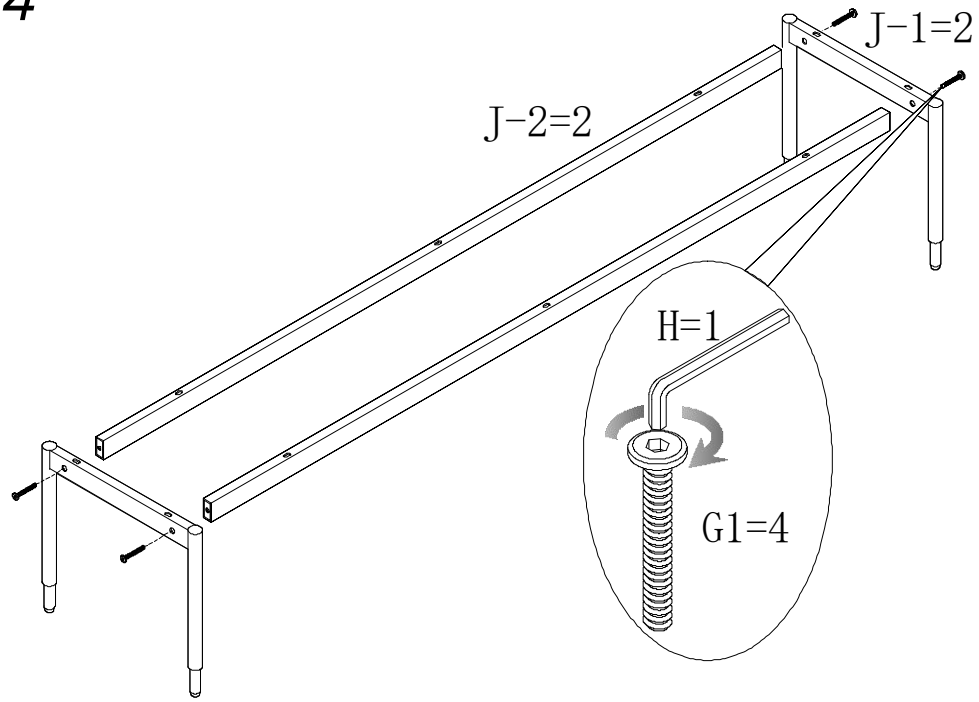

 
STEP 5

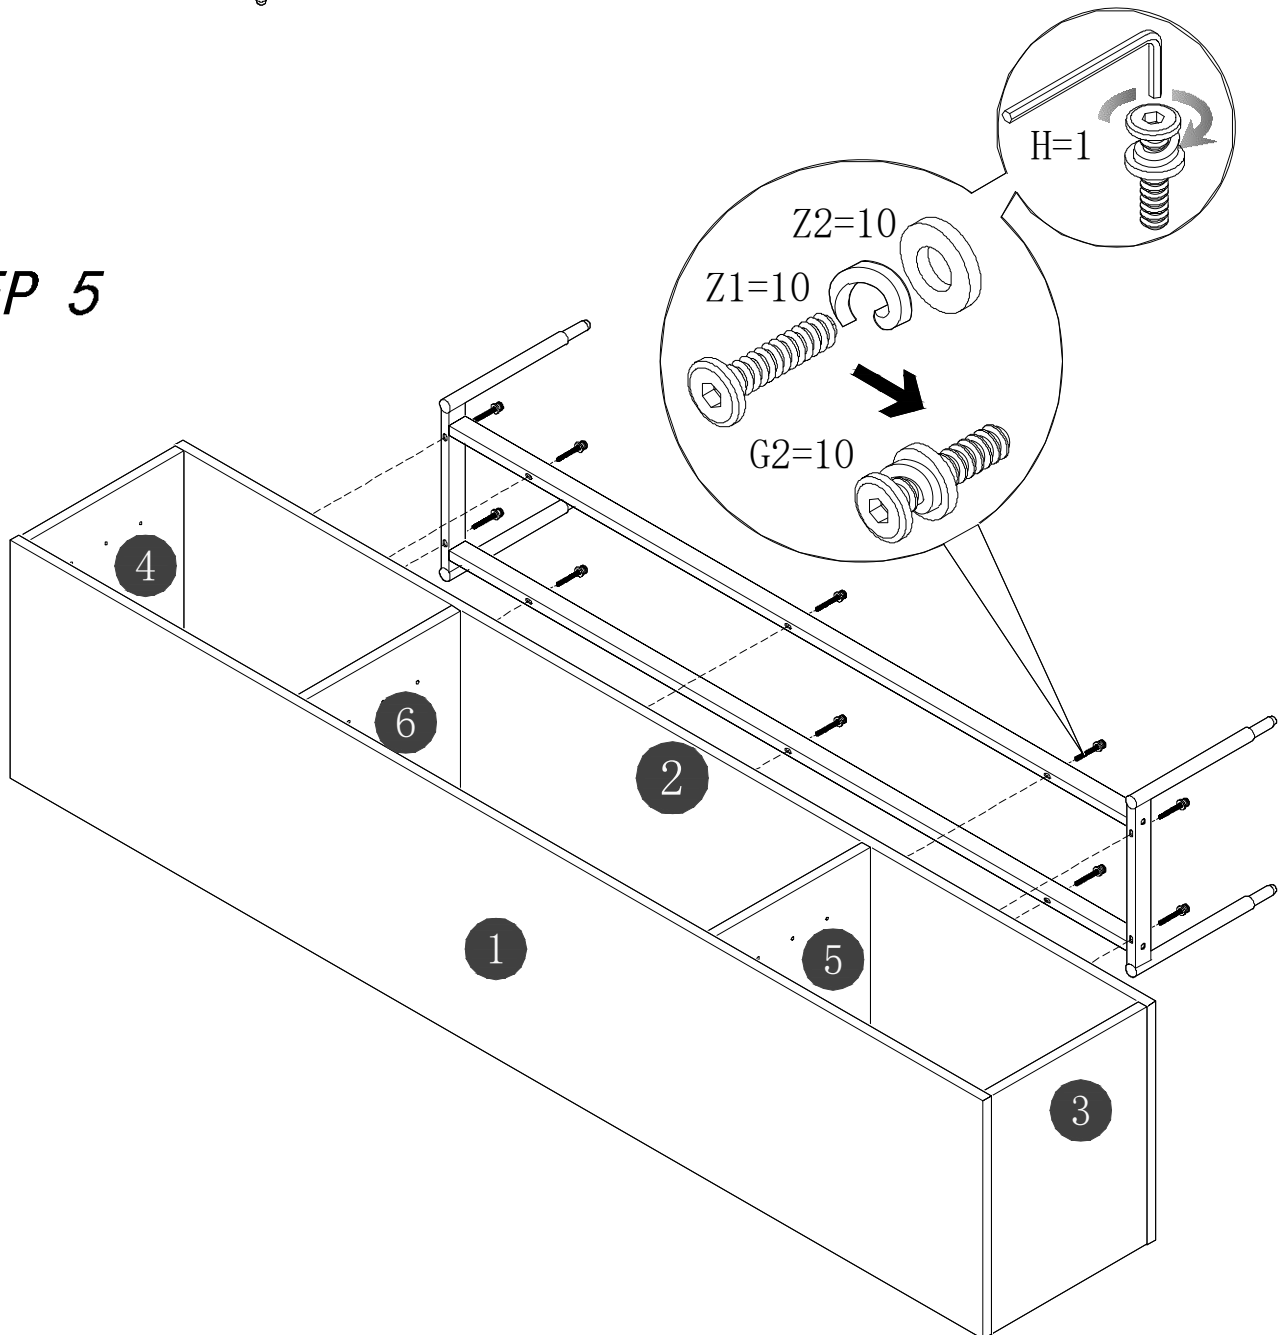

 
STEP 6

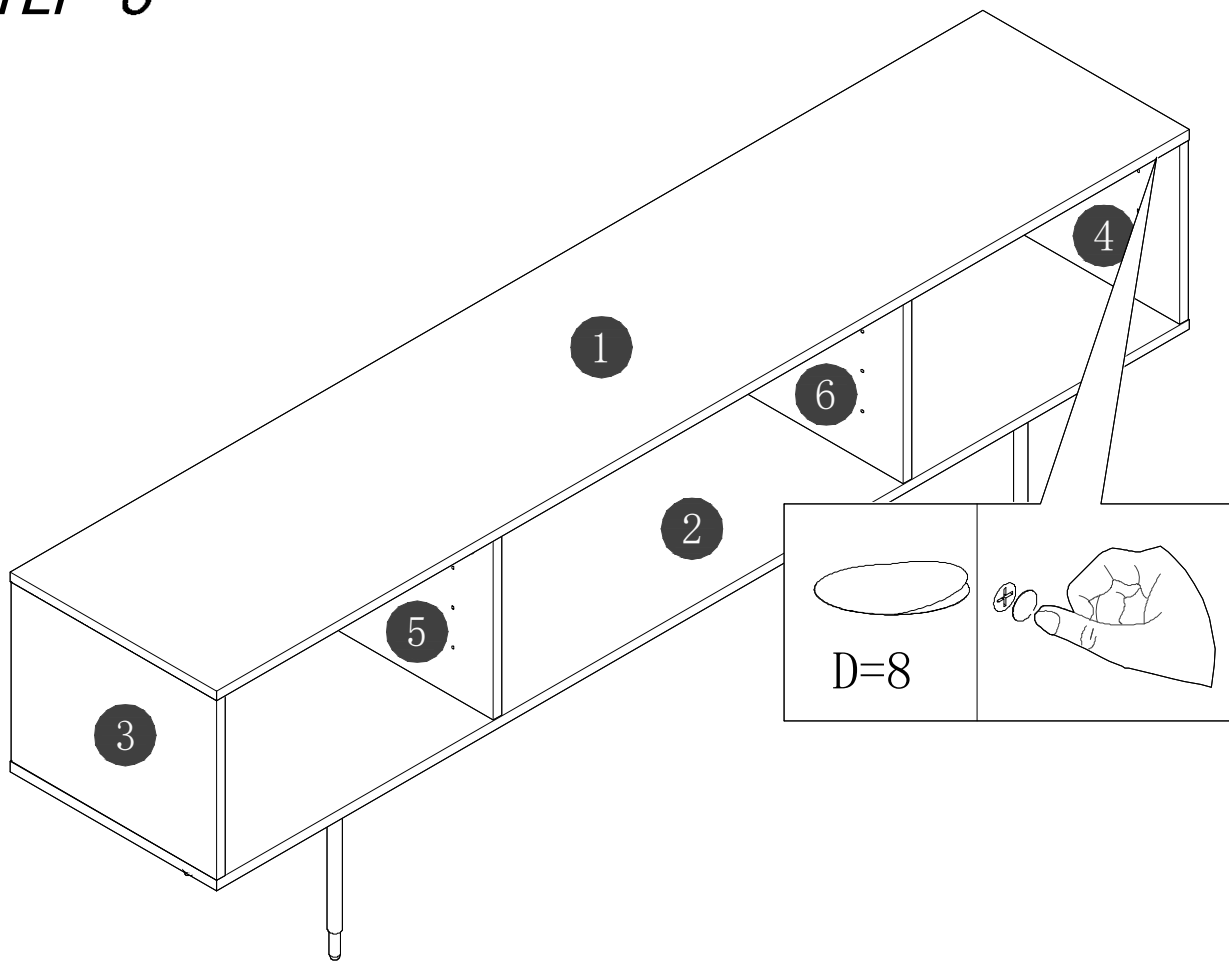

 
STEP 7

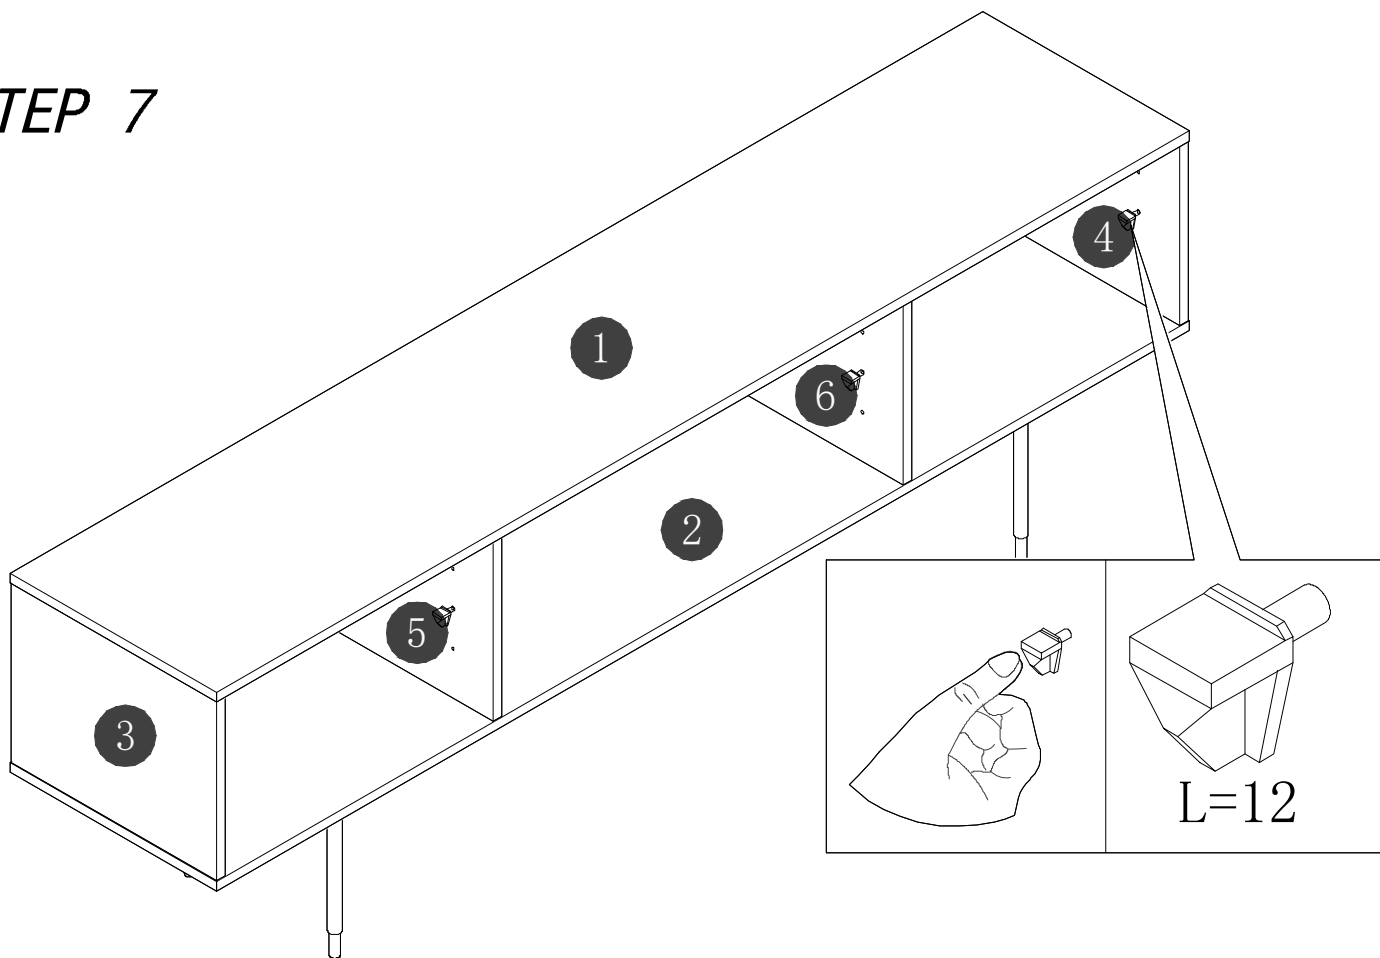

 
STEP 8

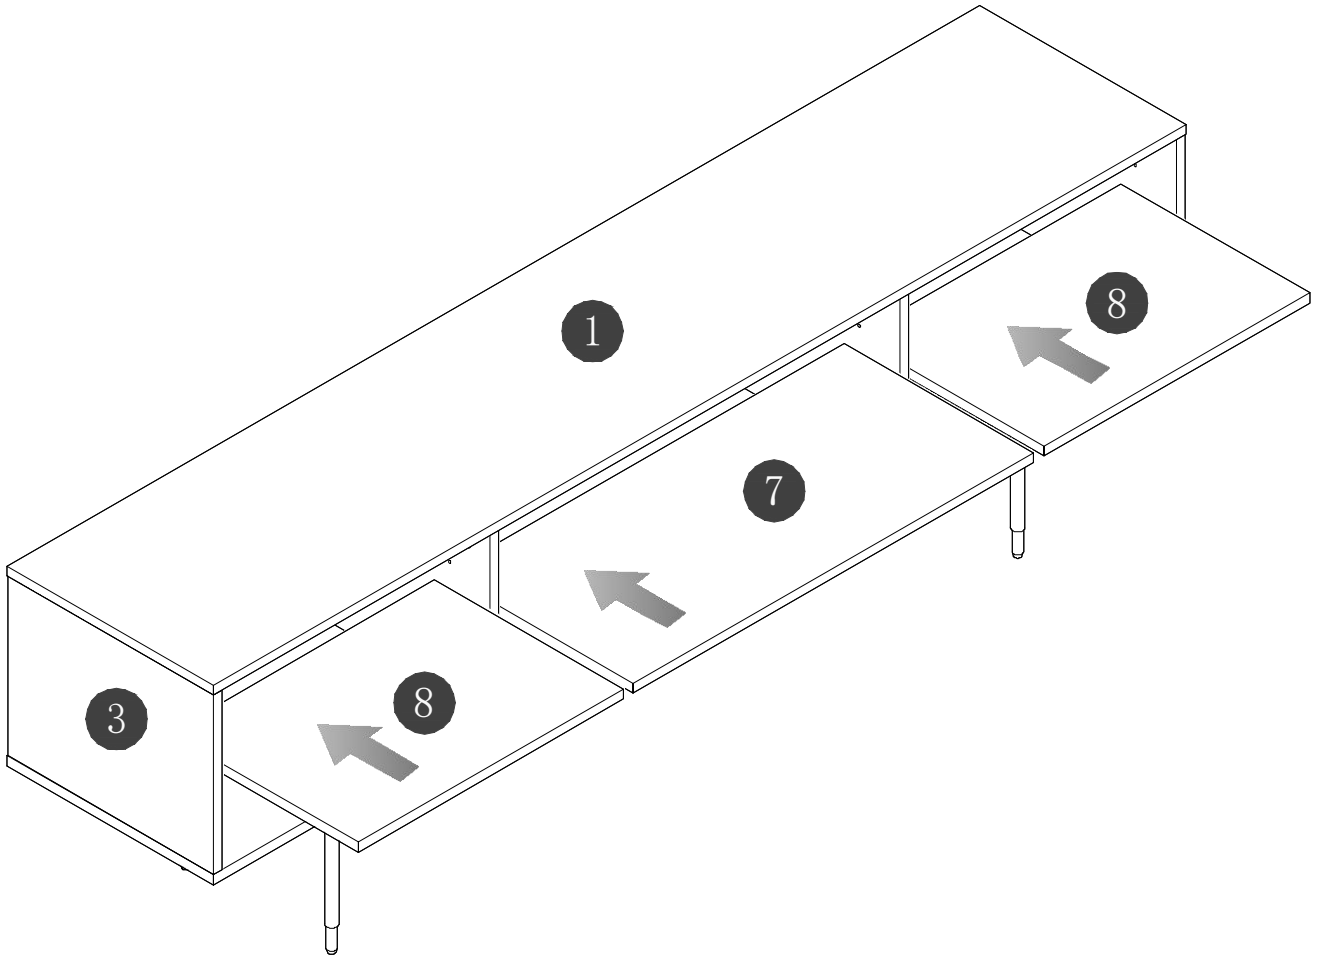




 
STEP 9

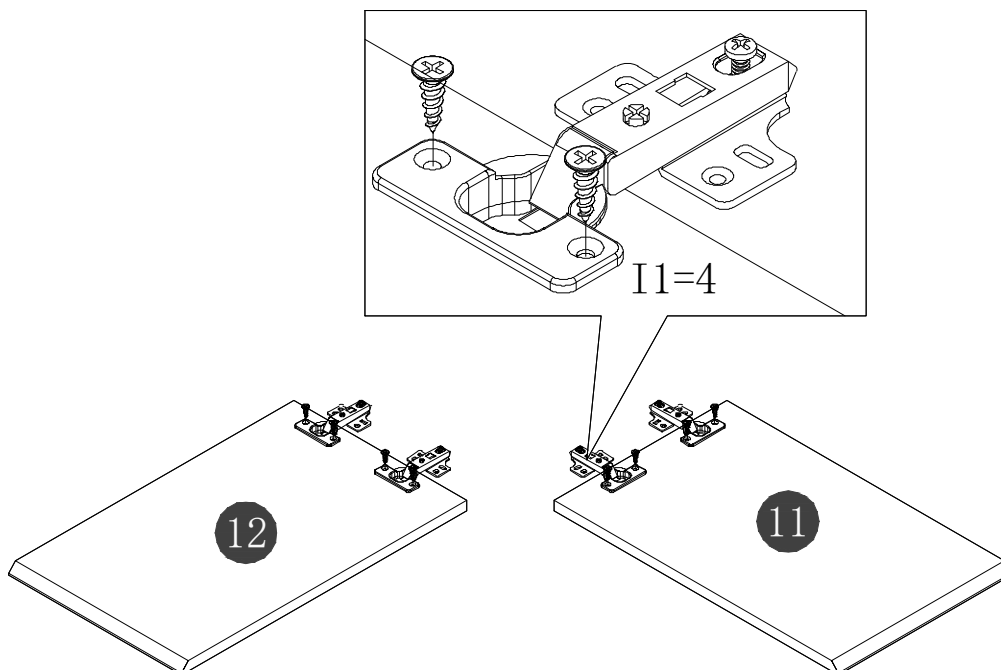

 
STEP 10

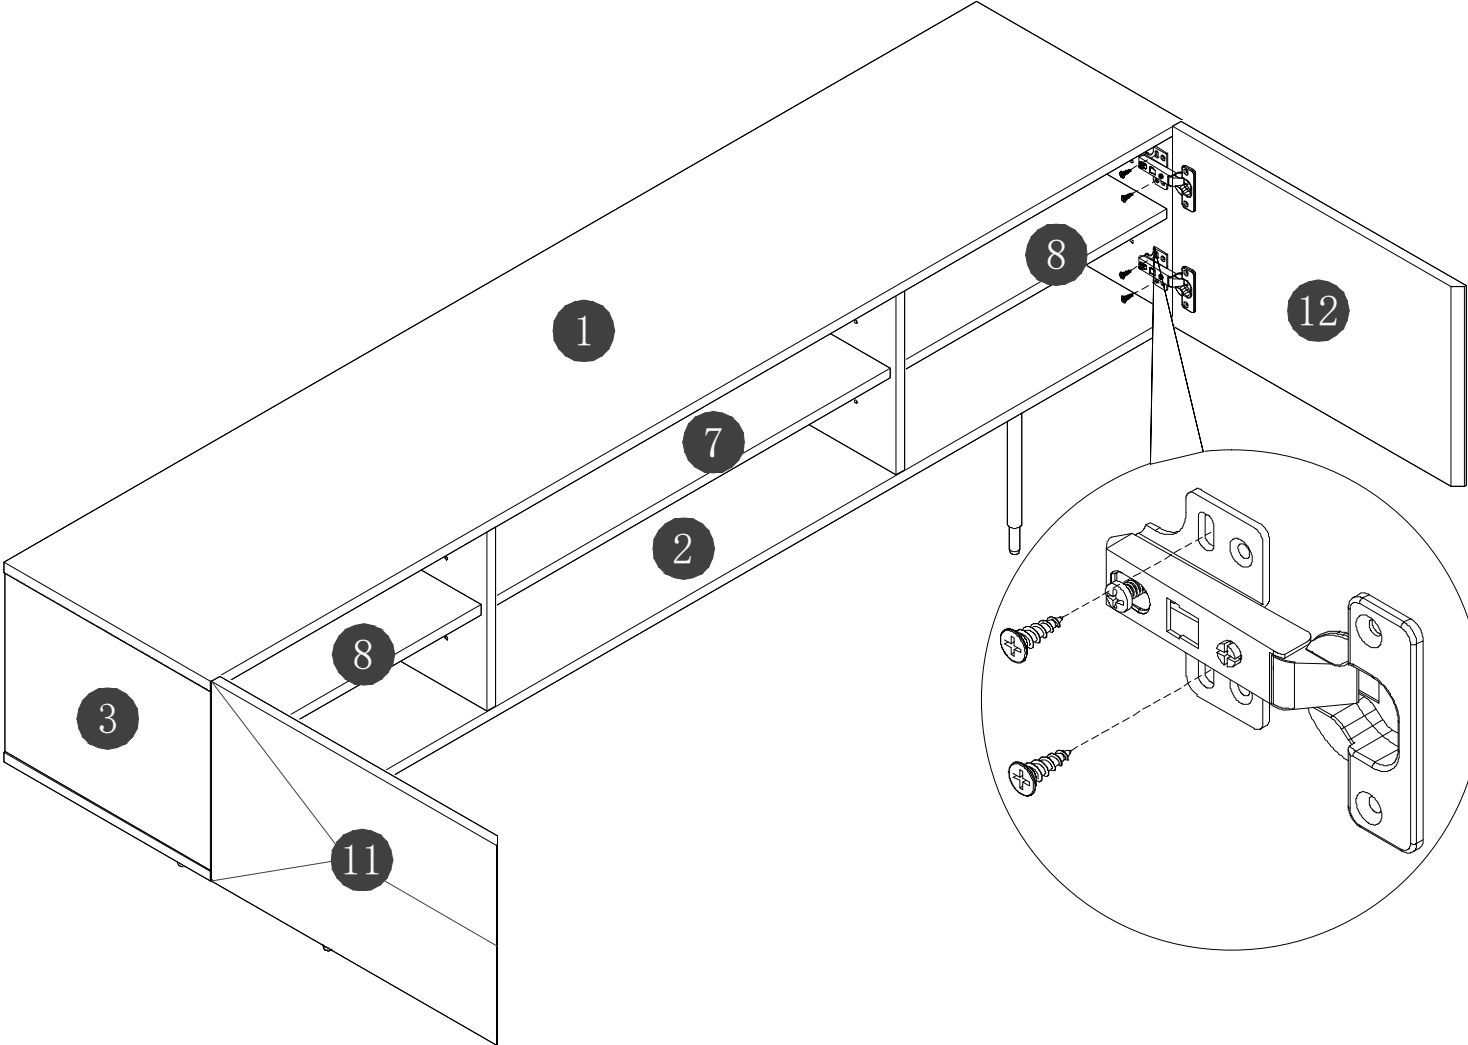

    
STEP 11

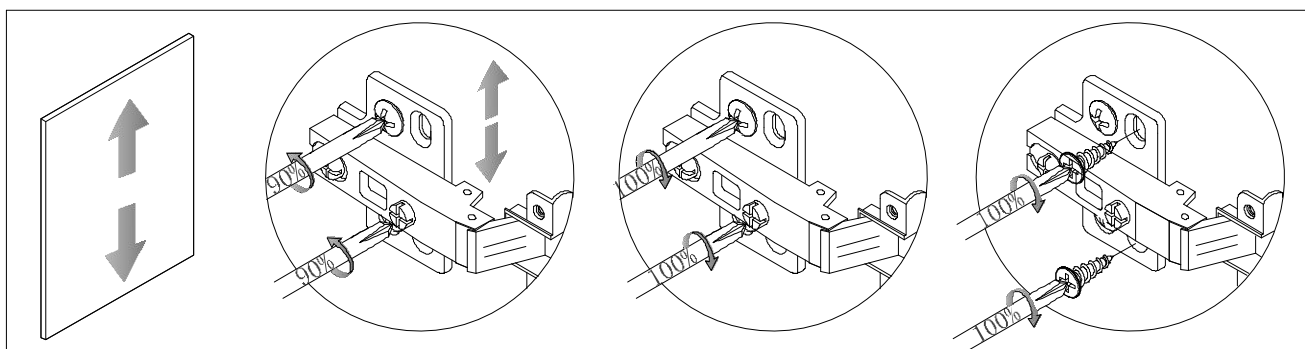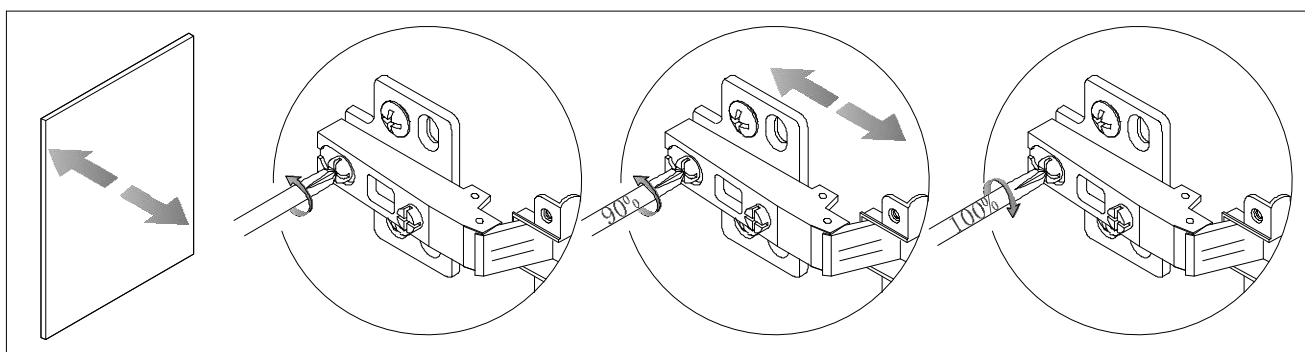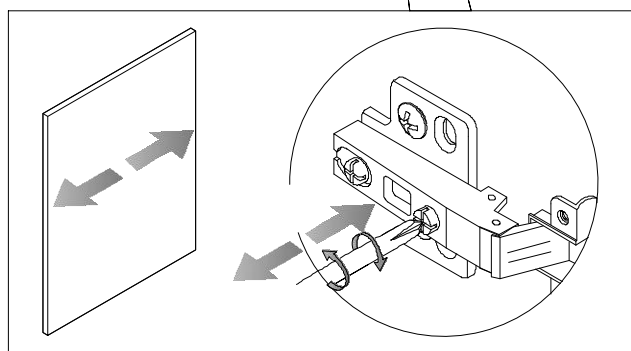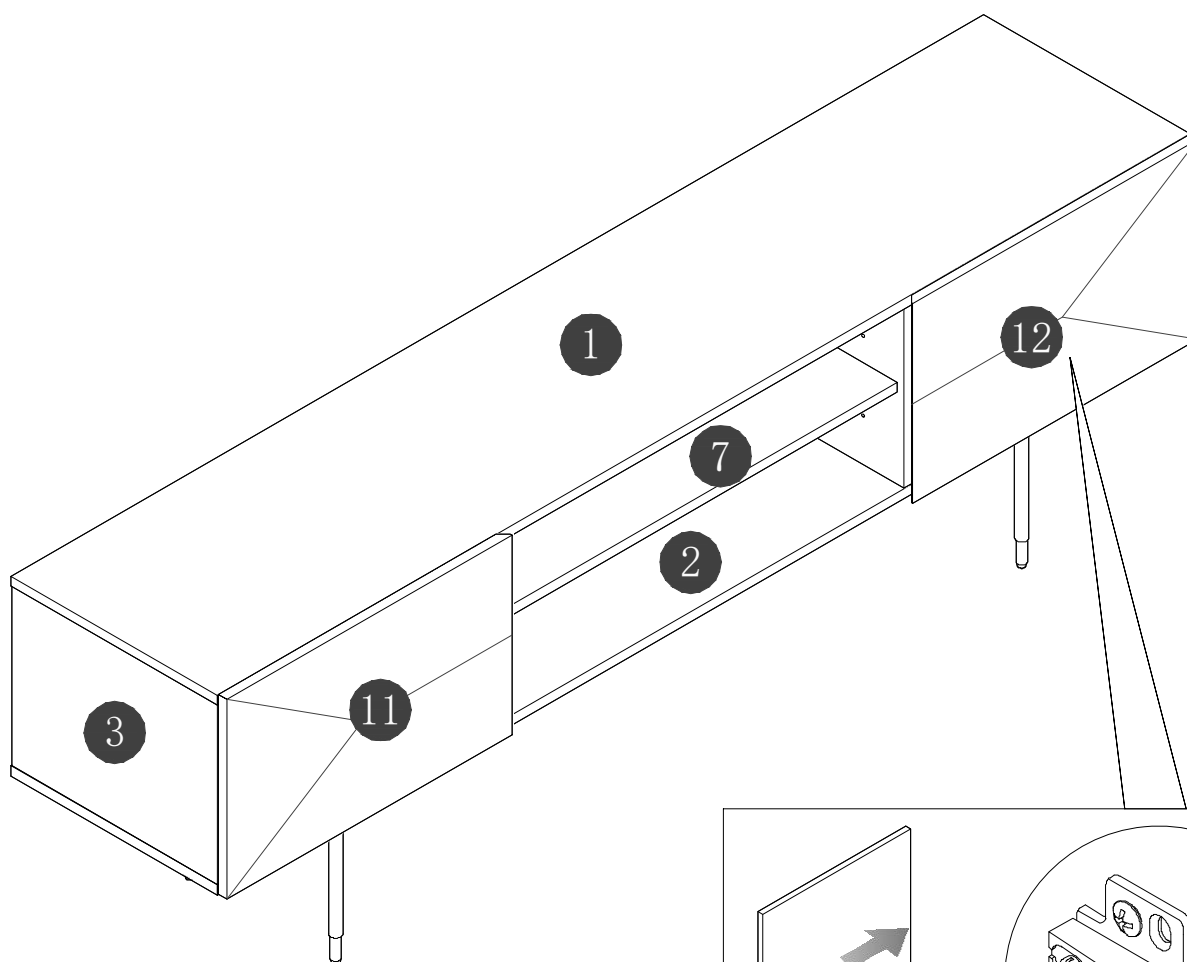

 
STEP 12

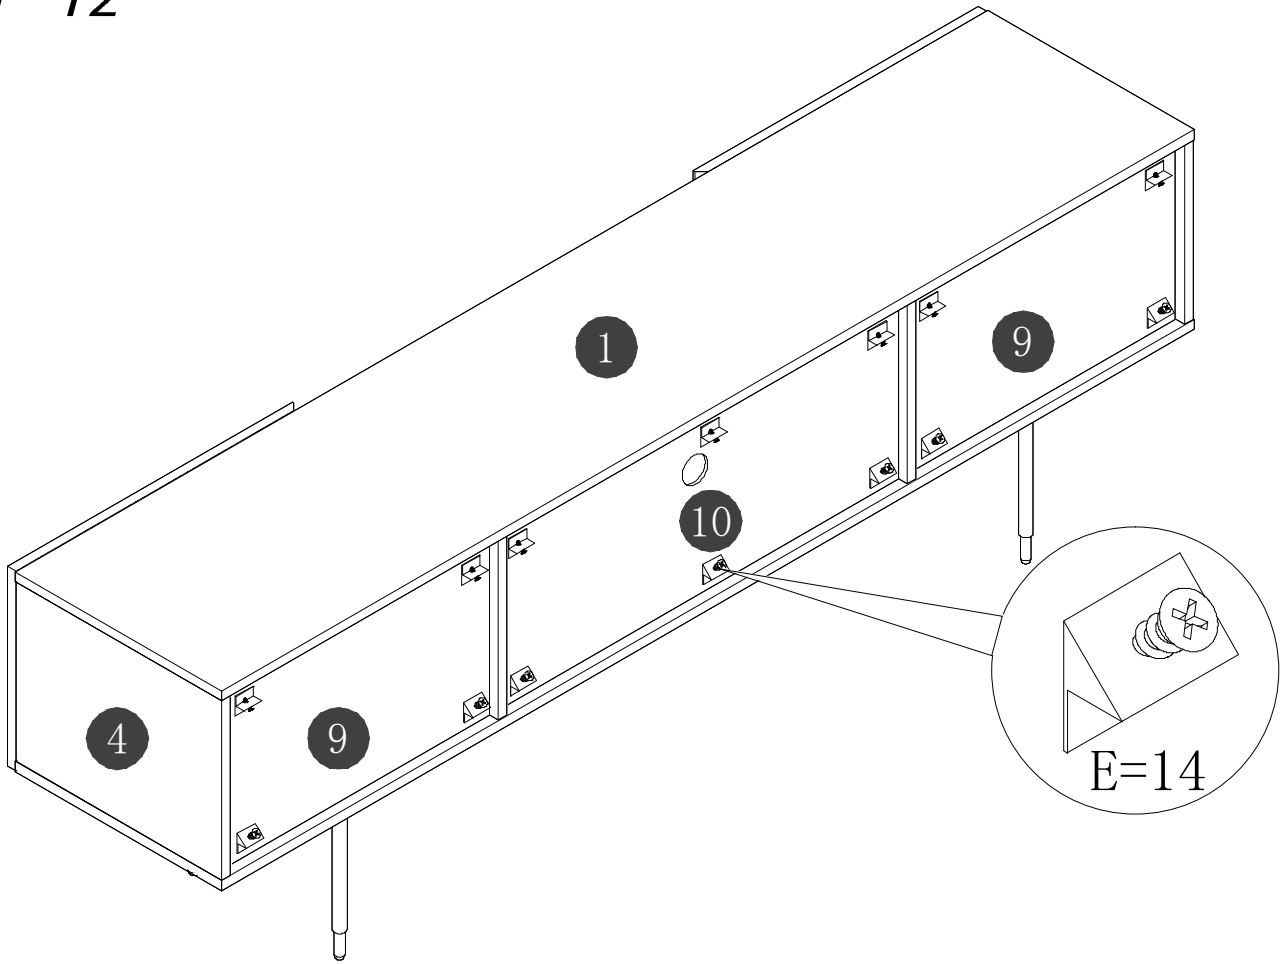

 STEP 13

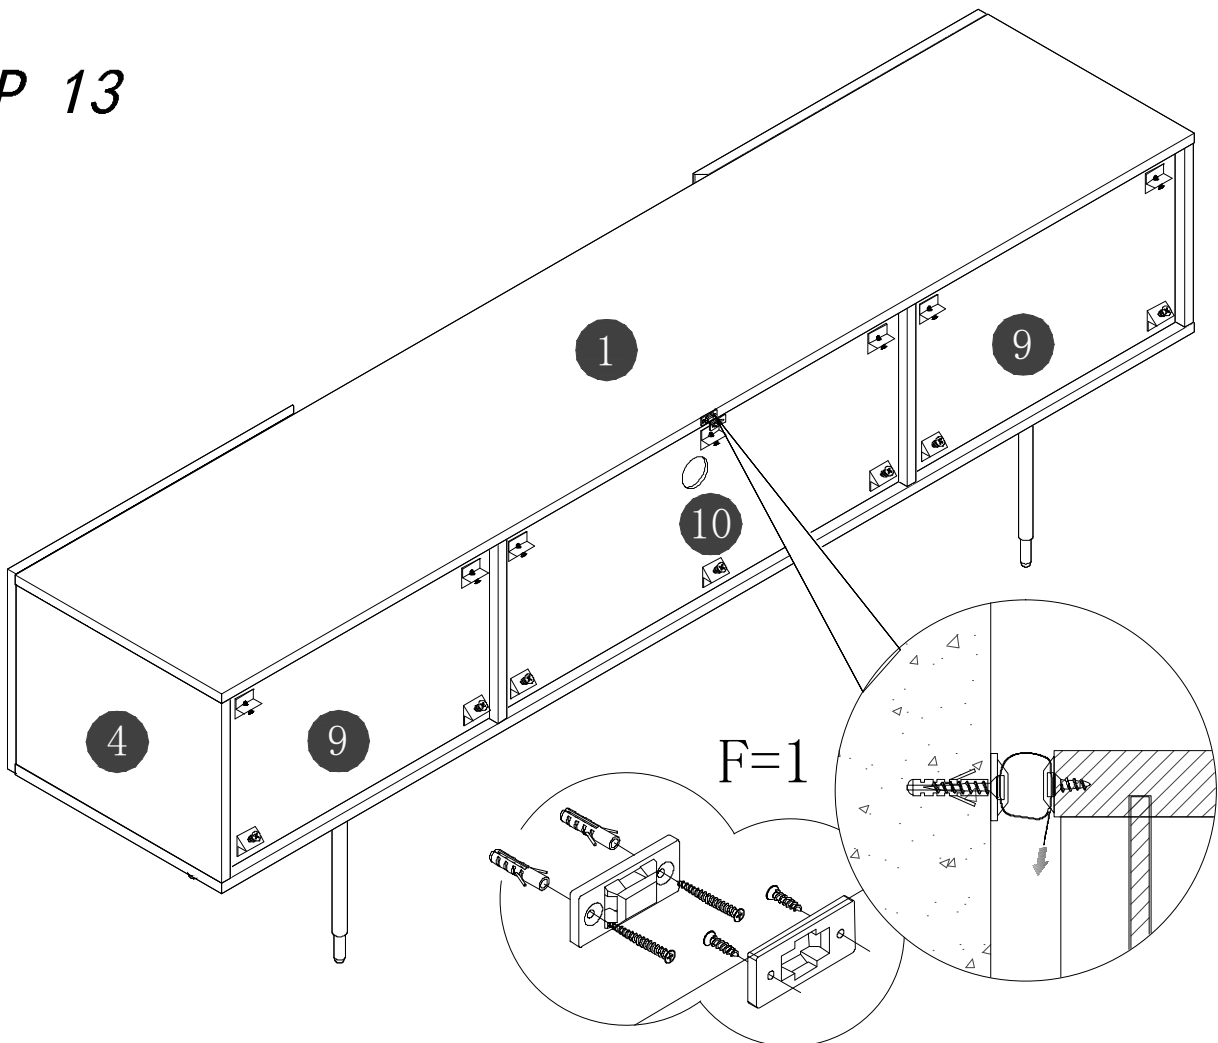


 STEP 14

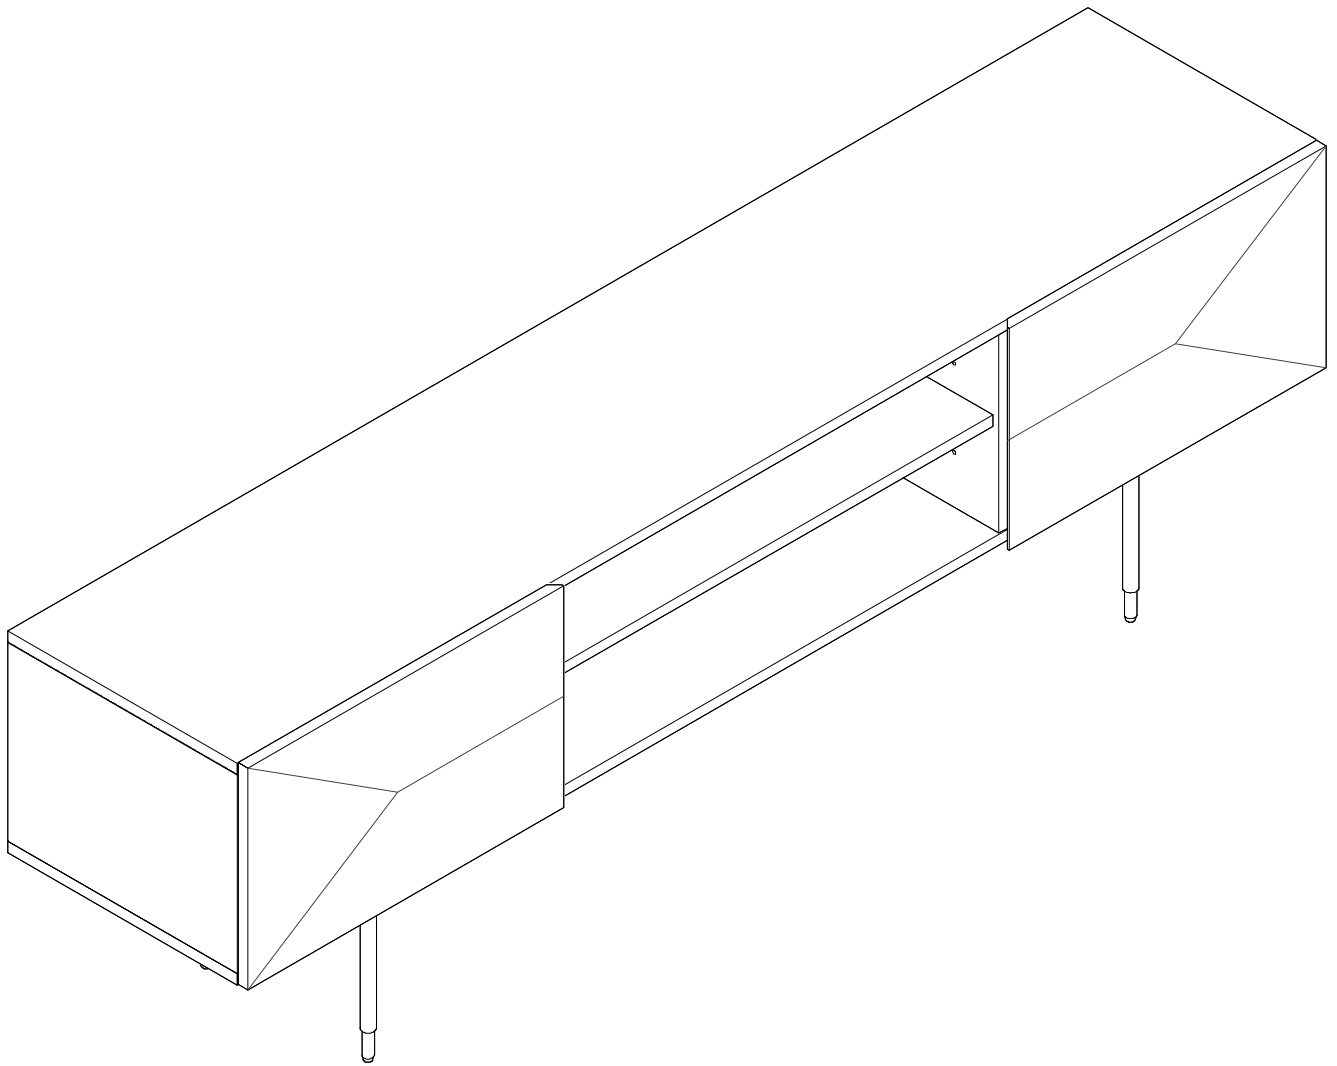

Finish

 耐特电视柜W180邮购包装

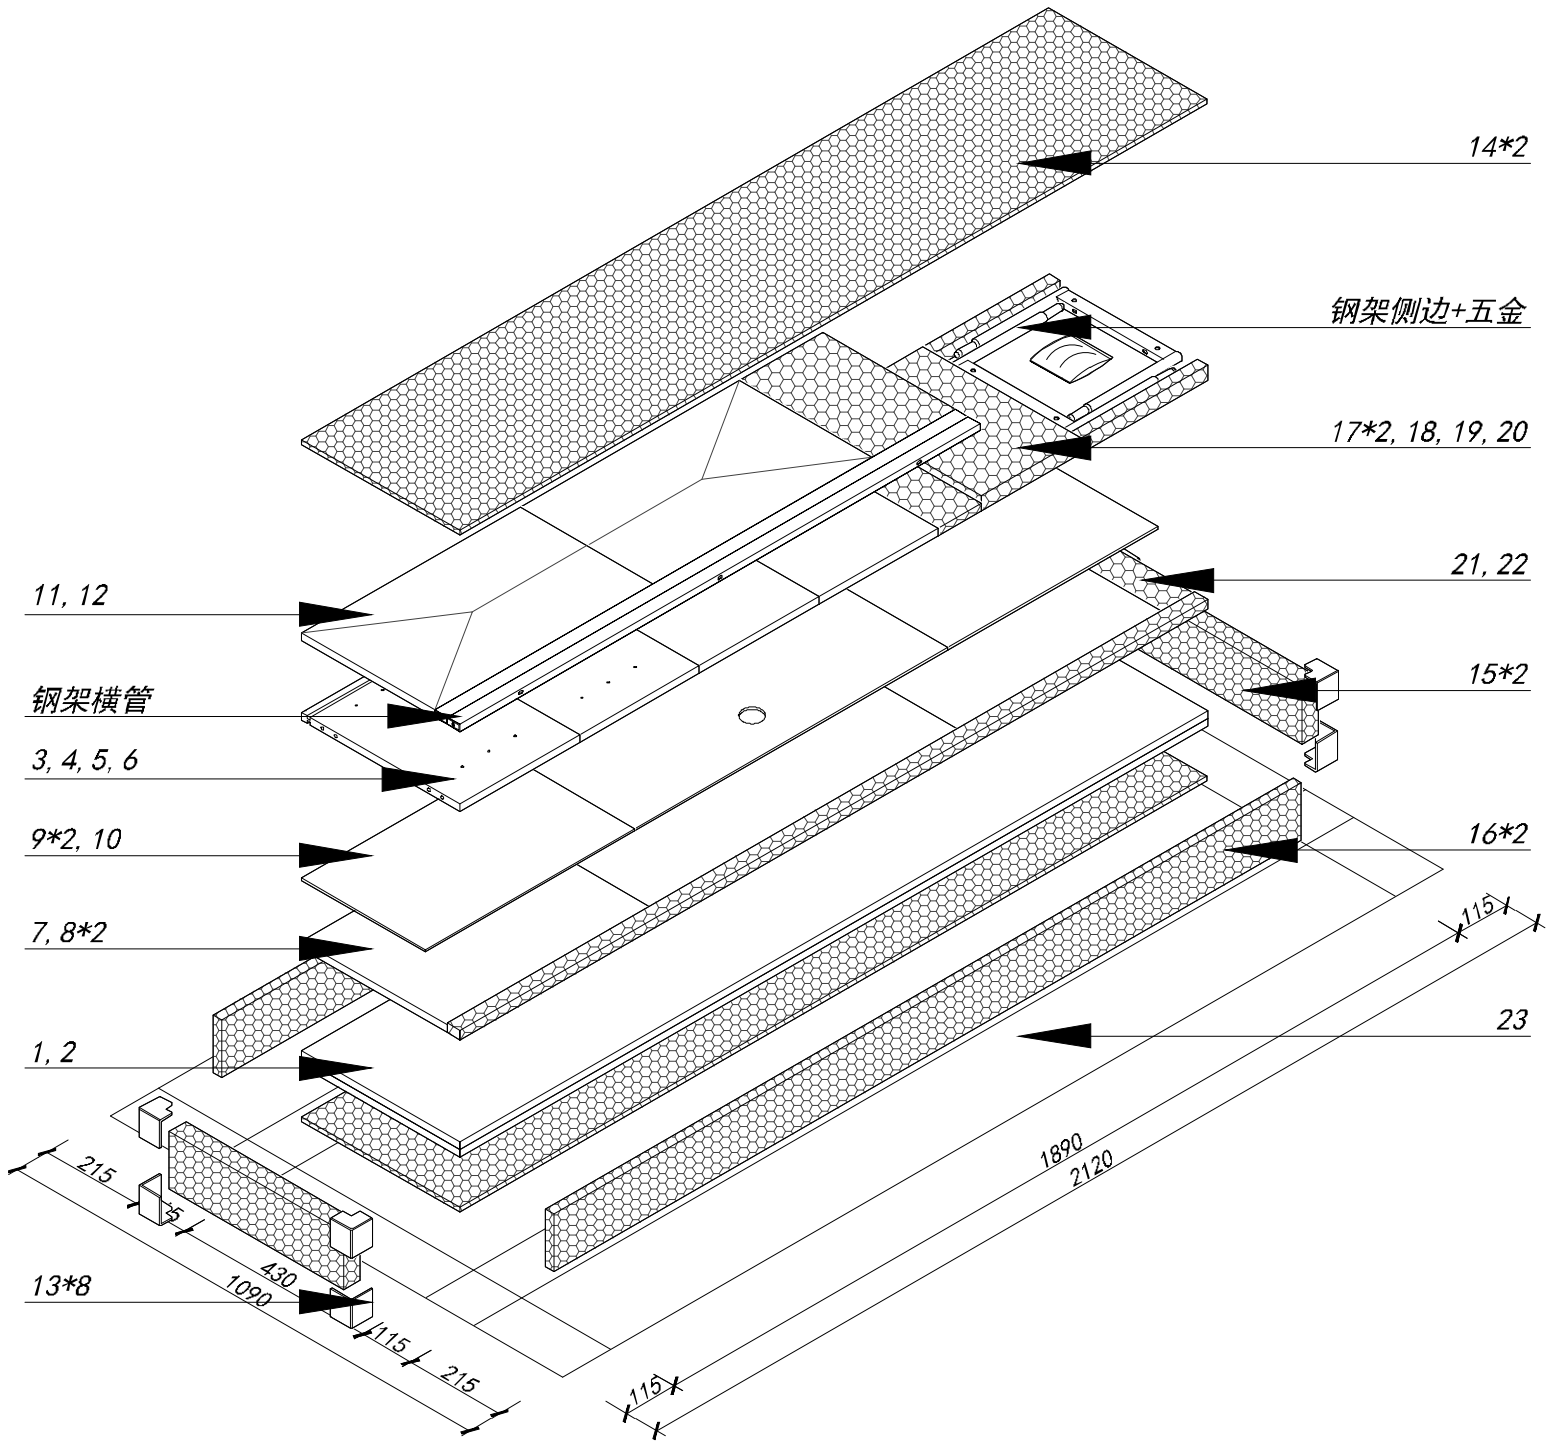

Panel No		Panel Sizes	Quantity
13	护角	50*50*50	8
14	泡沫	1800*380*10	2
15	泡沫	420*105*40	2
16	泡沫	1800*105*20	2
17	泡沫	305*25*30	2
18	泡沫	380*240*30	1
19	泡沫	380*102*15	1

Panel No		Panel Sizes	Quantity
20	泡沫	320*200*15	1
21	泡沫	350*75*15	1
22	泡沫	1800*30*20	1
23	纸盒	内径1890*430*115	1