






TOOL JOY / CHAIR JOY 20852

NR NO	DETAIL ITEM	NIMETUS DESCRIPTION	KOGUS QTY
A		M6x45mm JCBC KRUVI M6x45mm JCBC SCREW	10
B		VEDRUSEIB SPRING WASHER	10
C		SEIB WASHER	10
D		M4x32mm KRUVI M4x32mm SCREW	6
E		M4 6-KANTVÕTI M4 ALLEN KEY	1



ESIMENE JALG 2TK
FRONT LEG 2PCS




ALUMINE RAAM
LOWER FRAME

ISTME RAAM
BOX SEAT

SAMM 1/STEP 1



SELJATUGI 1TK
BACK PANEL 1PC

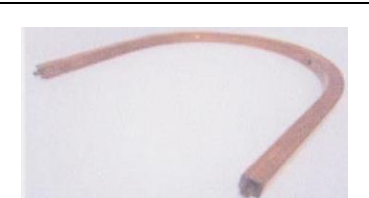


ALUMINE RAAM 1TK
LOWER FRAME 1PC





ISTMERAAM 1TK
BOX SEAT 1PC



ISTE 1TK
CUSHION SEAT 1PC

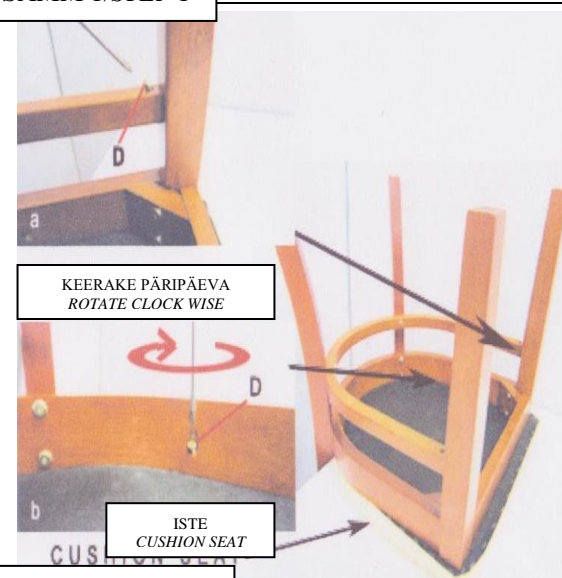

SAMM 3/STEP 3

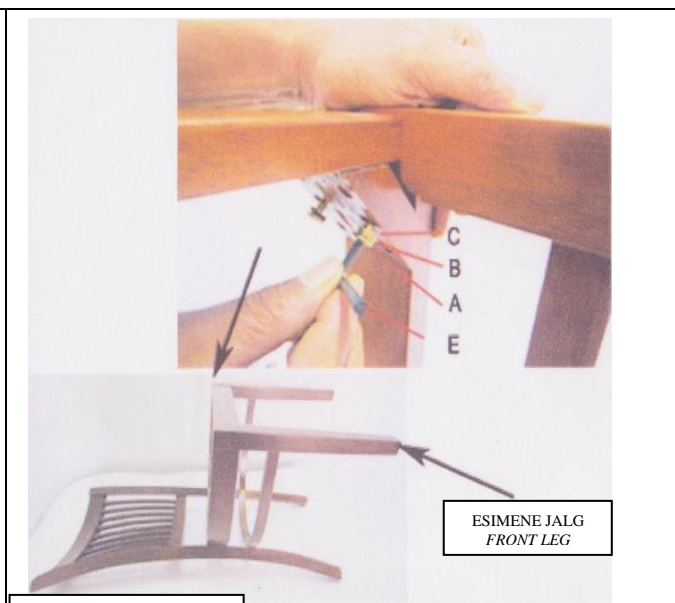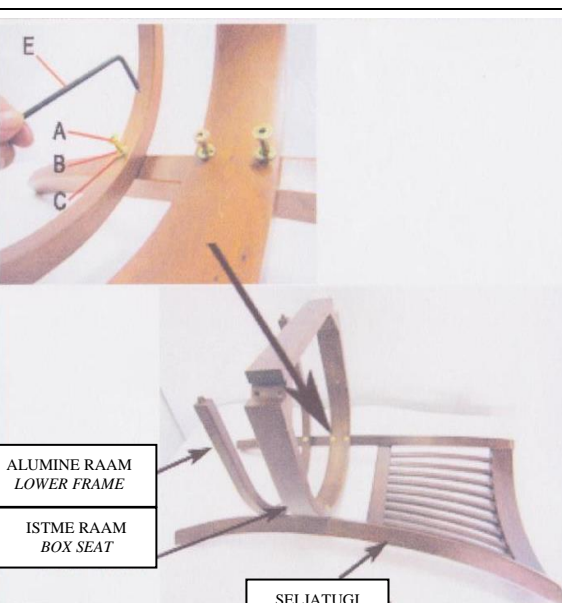

SAMM 2/STEP 2



TOOL JOY / CHAIR JOY 20852

SAMM 1

Kinnitage istmeraam ja alumine raam seljatoe külge. Kasutage kinnitamiseks M6x45mm kruvisid, vedruseibe ja seibe (x6).

SAMM 2

Kinnitage esimesd jalad istmeraami külge. Kasutage kinnitamiseks M6x45mm kruvisid, vedruseibe ja seibe (x4).

SAMM 3

Kinnitage alumine raam esimeste jalgade külge. Kasutage M4x32mm kruvisid (x2).

Asetage iste tagurpidi laua peale ja paigaldage eelnevalt kokkupandud tooliraam istme peale. Kinnitage iste tooliraami külge M4x32mm kruvidega (x4).

M4x32mm kruvide keeramiseks on tarvis kruvikeerajat. **Kruvikeeraja ei kuulu komplekti.**

STEP 1

Screw on the box seat and lower frame to back panel with M6x45mm screw, spring washer, and washer (x6).

STEP 2

Following by tightening the front leg with an M6x45mm screw, spring washer, and washer (x4).

STEP 3

Screw on the lower frame with an M4x32mm screw (x2).

Put the cushion seat onto the table then turn around the chair and screw on with an M4x32mm screw to the cushion seat (x4).

*Screwdriver required. **A screwdriver is not included.***