

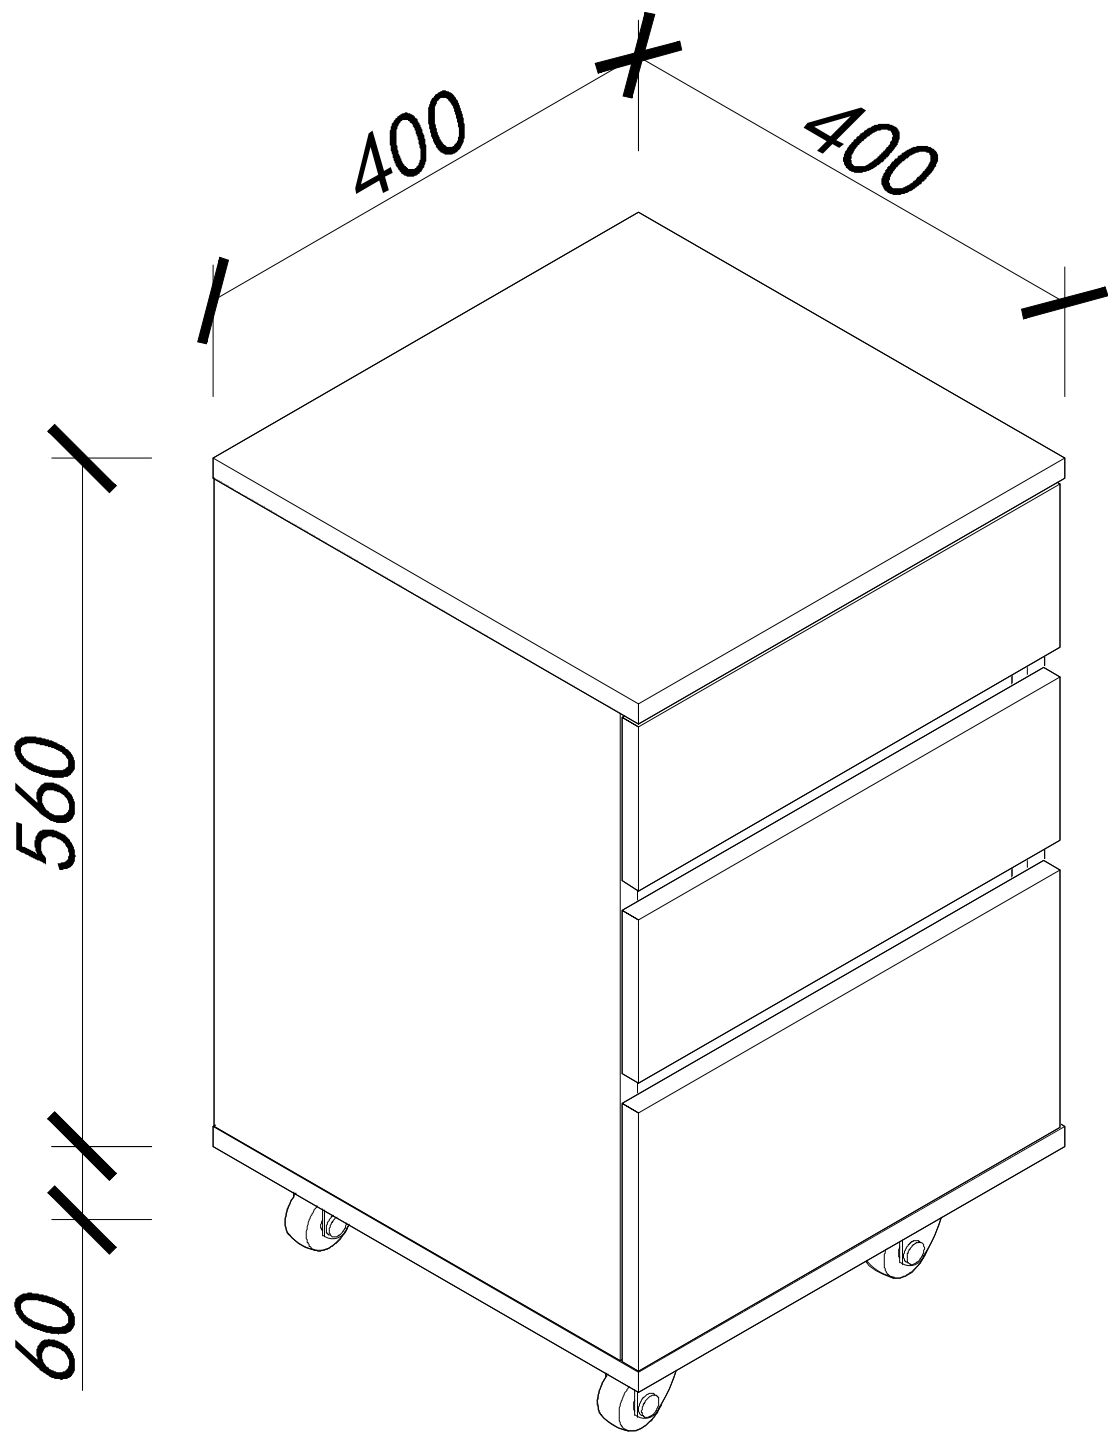
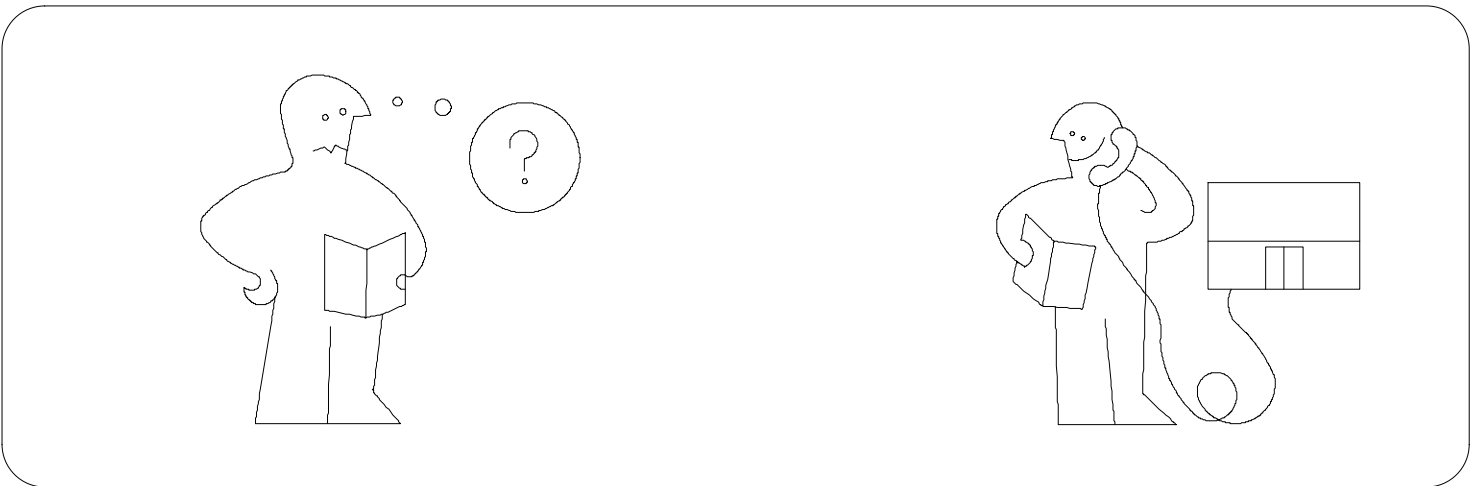
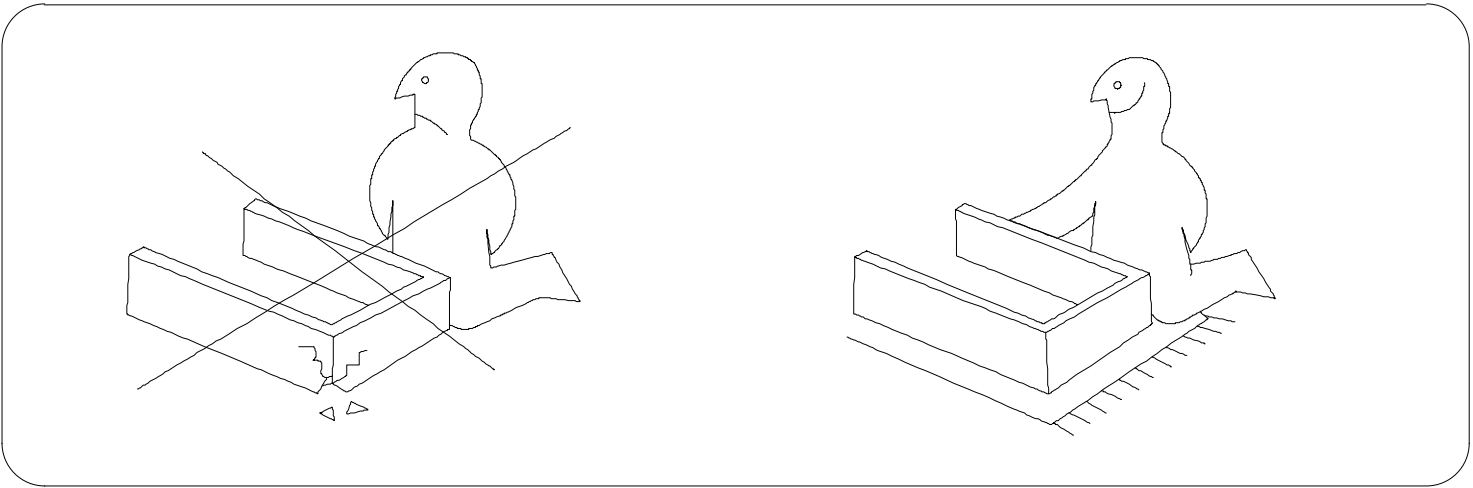



Assembly Instruction

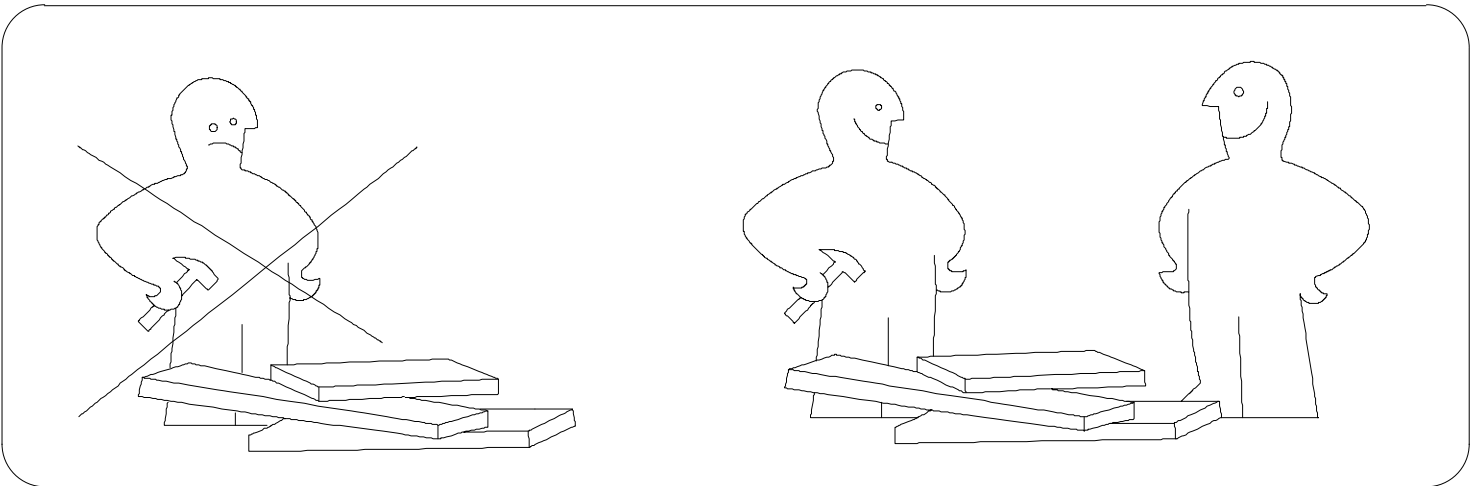

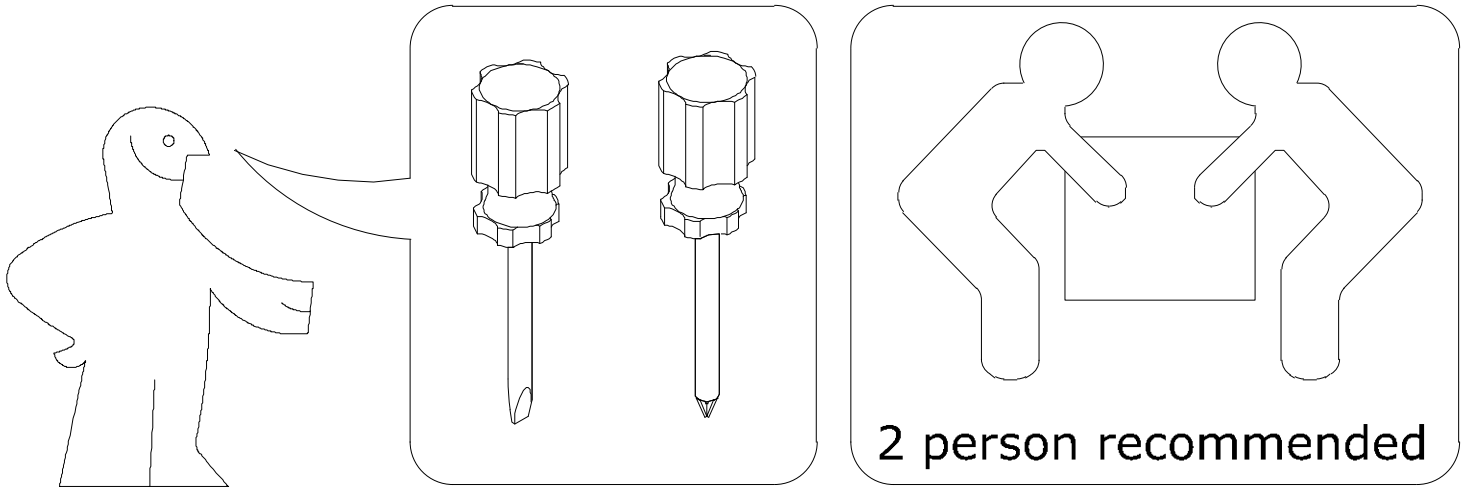


Panel No	Panel Sizes	Quantity
1	400*400*16	1
2	400*400*16	1
3	528*382*16	1
4	528*382*16	1
5	366*60*16	2
6	538*376*5	1
7	396*133*16	2
8	396*210*16	1

Panel No	Panel Sizes	Quantity
9	316*70*12	2
10	316*120*12	1
11	350*70*12	2
12	350*70*12	2
13	350*120*12	1
14	350*120*12	1
15	326*348*5	3

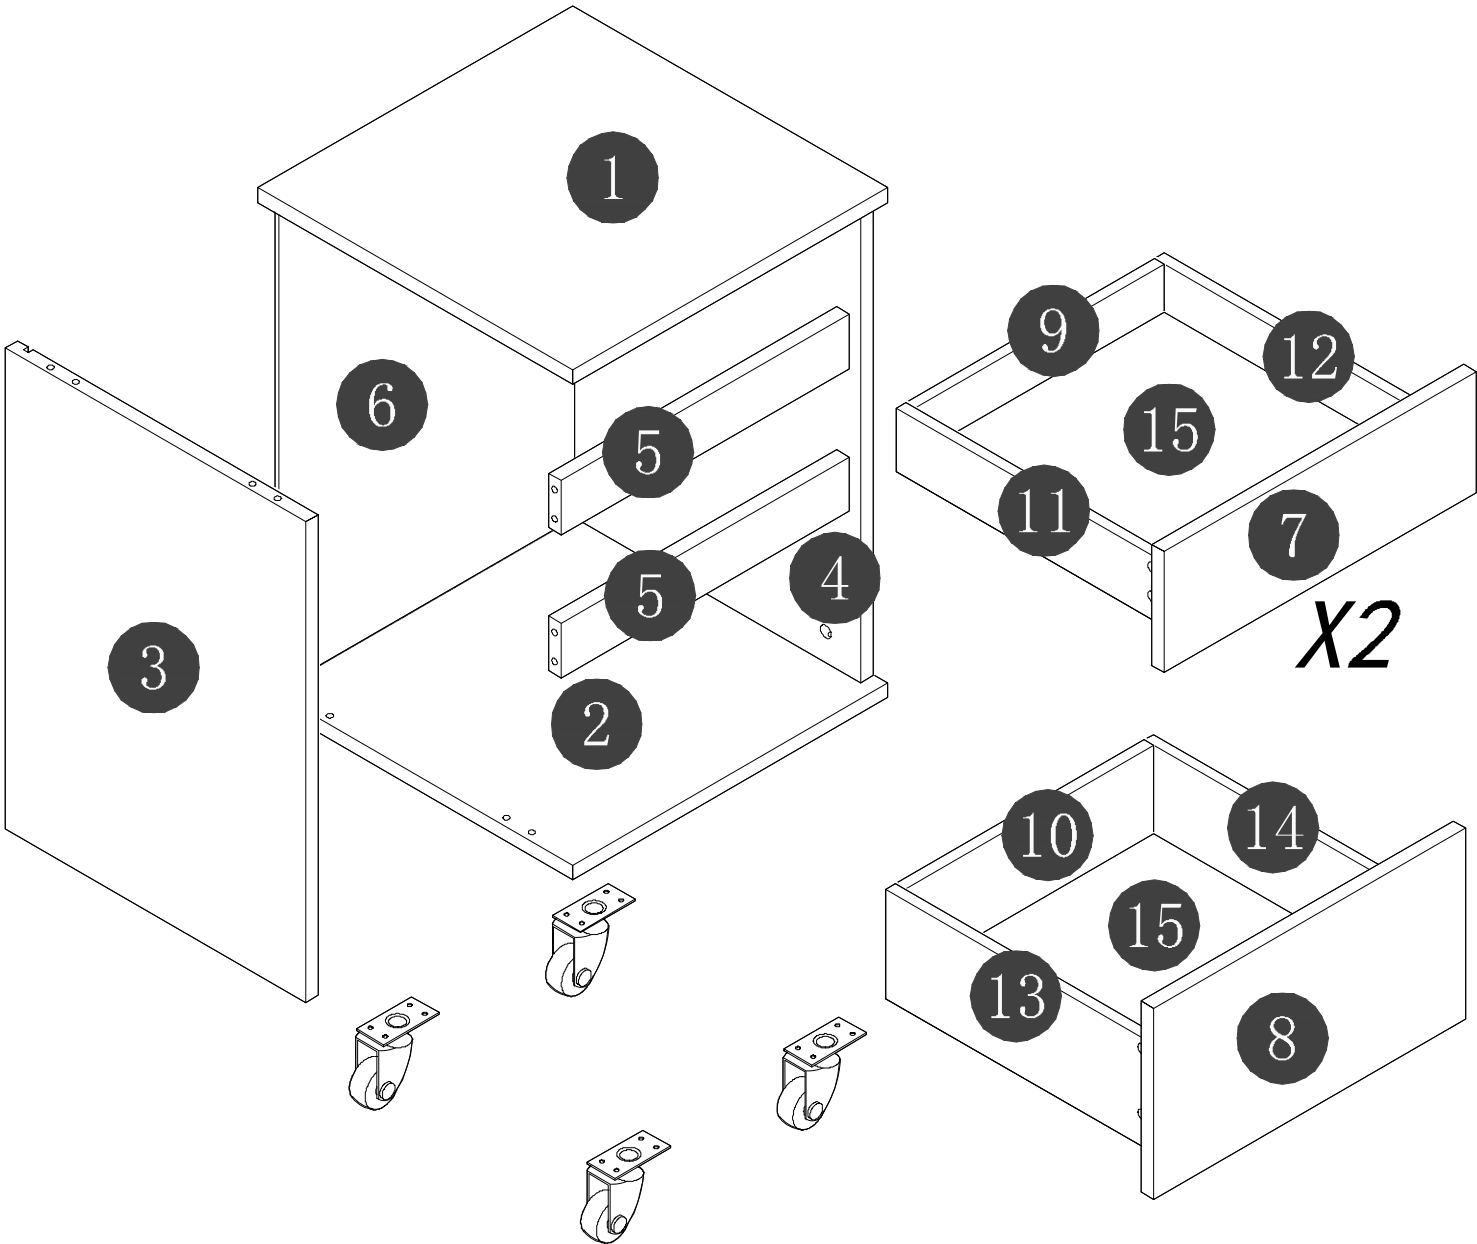


Fittings




M6*40

A=12



$\Phi 8*30$

B=12

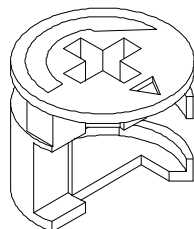


$\Phi 15*12$

C=12




$\Phi 21$


D=36

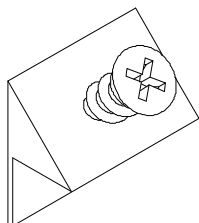

E=4

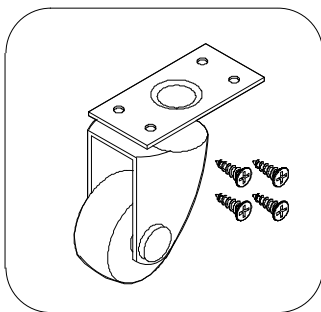

J=4

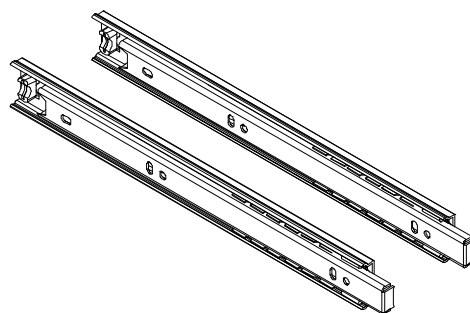


N=3



M6*34

O=24



$\Phi 12*10.5$


P=24








M3.5*12

V1=24


STEP 1

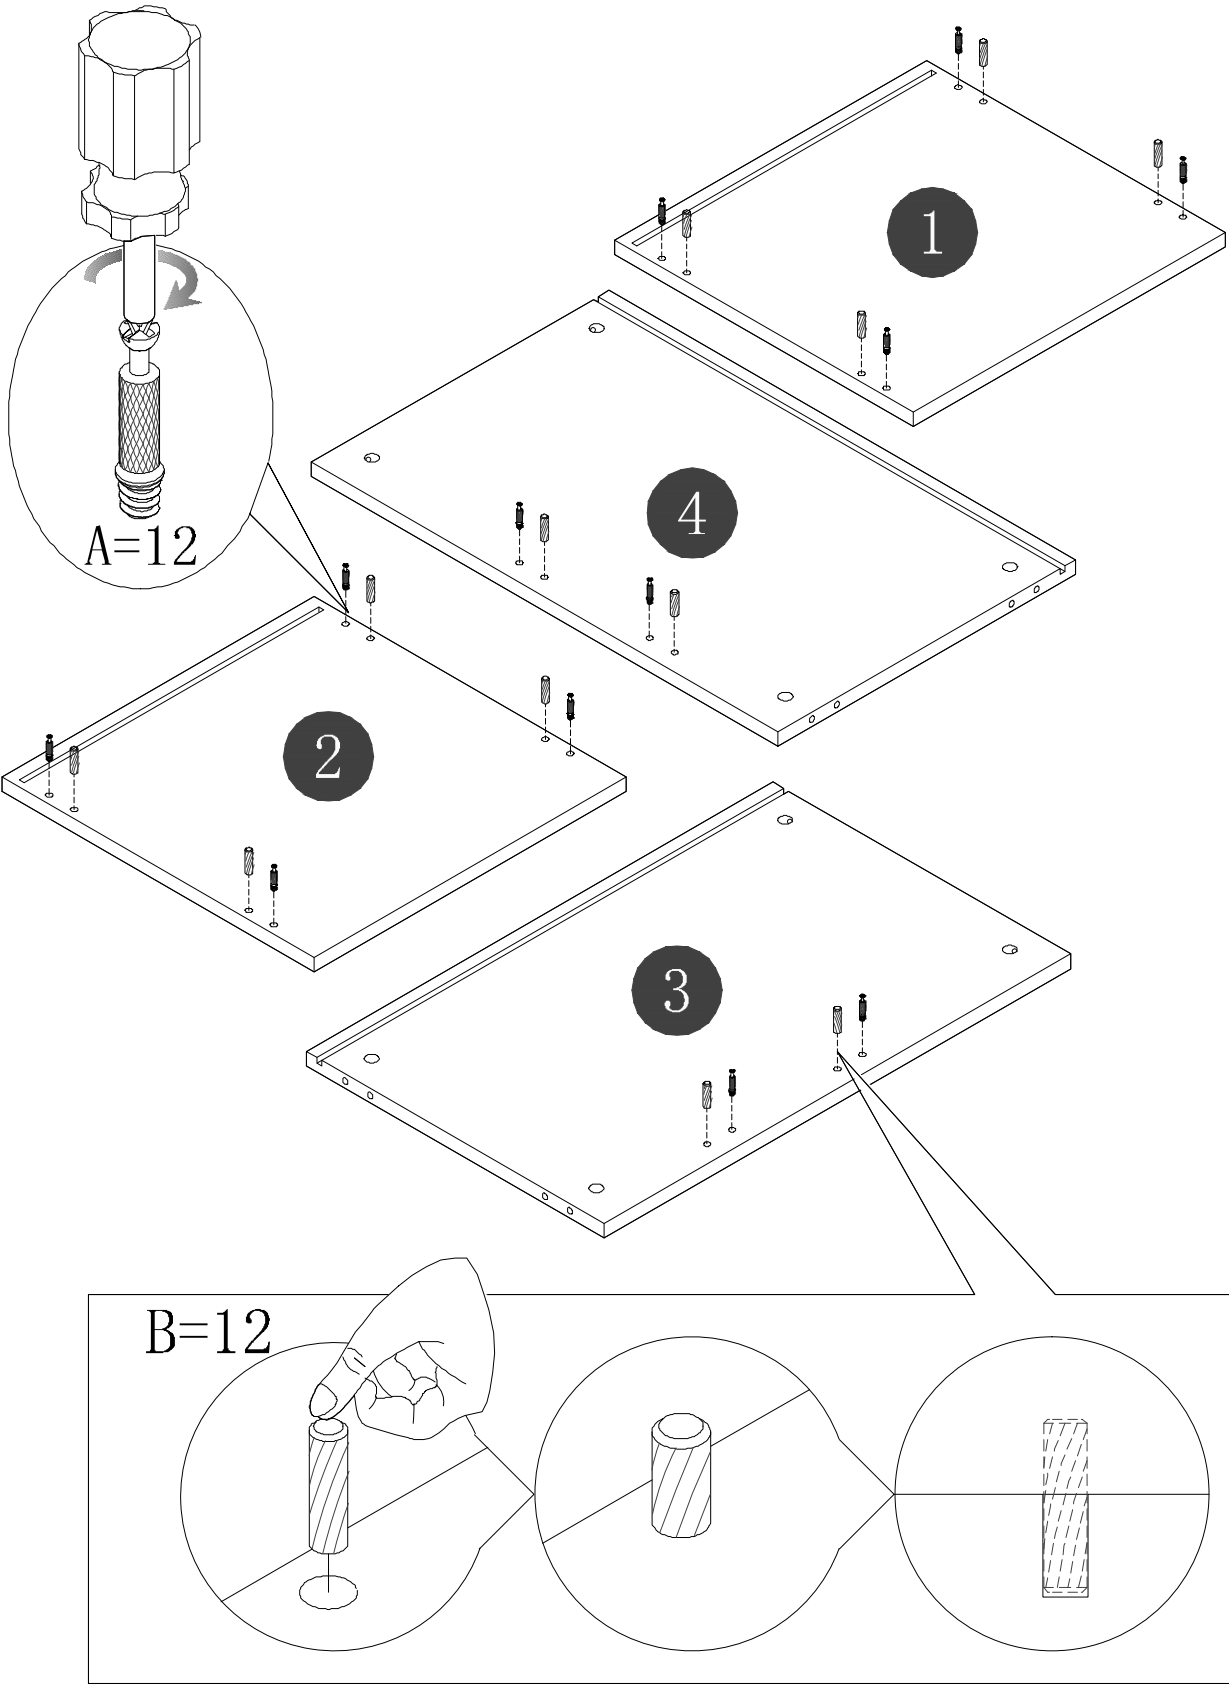


STEP 2

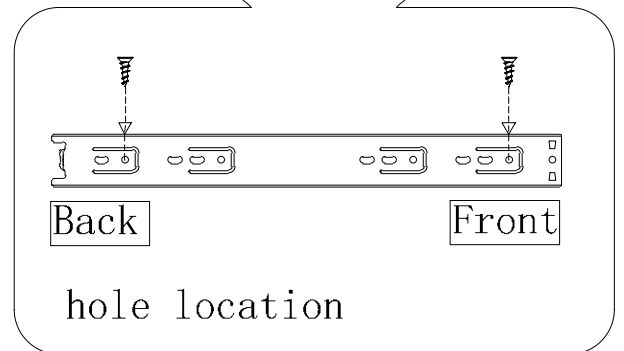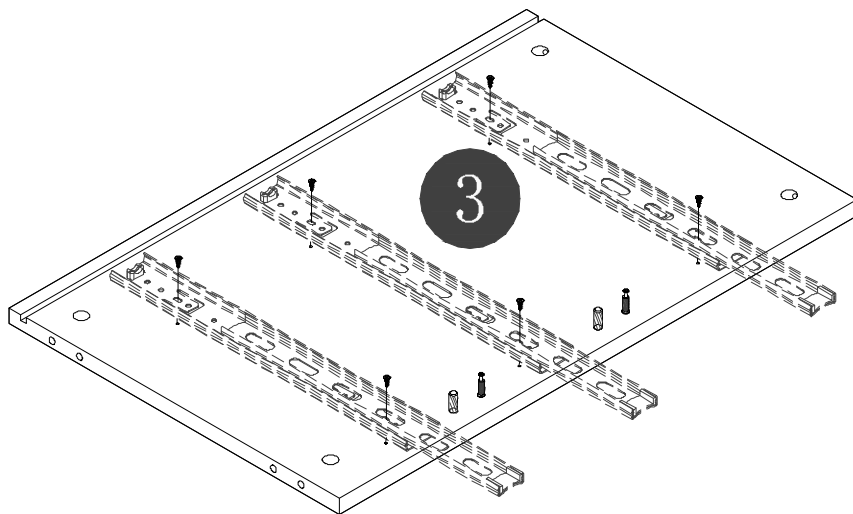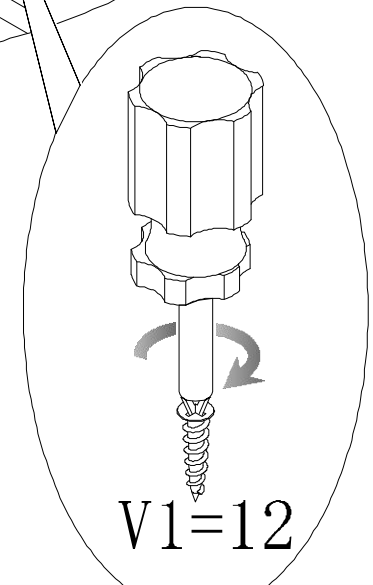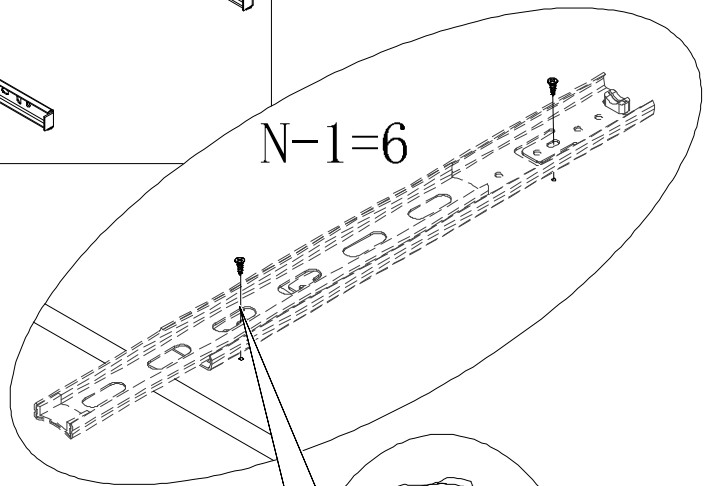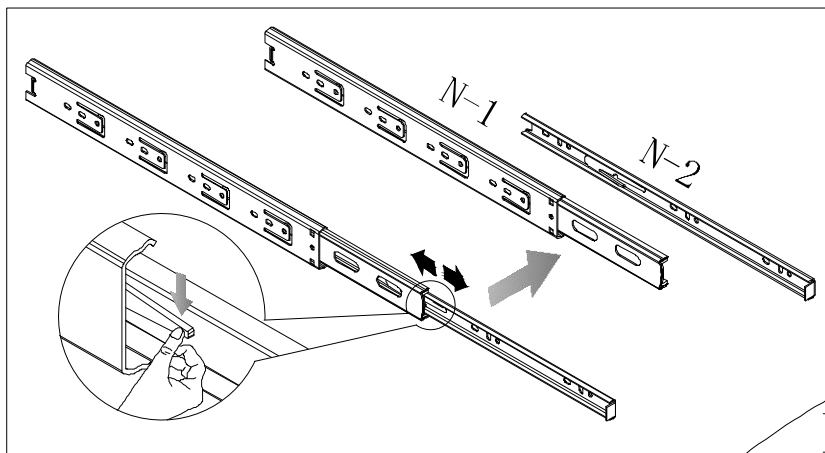


STEP 3

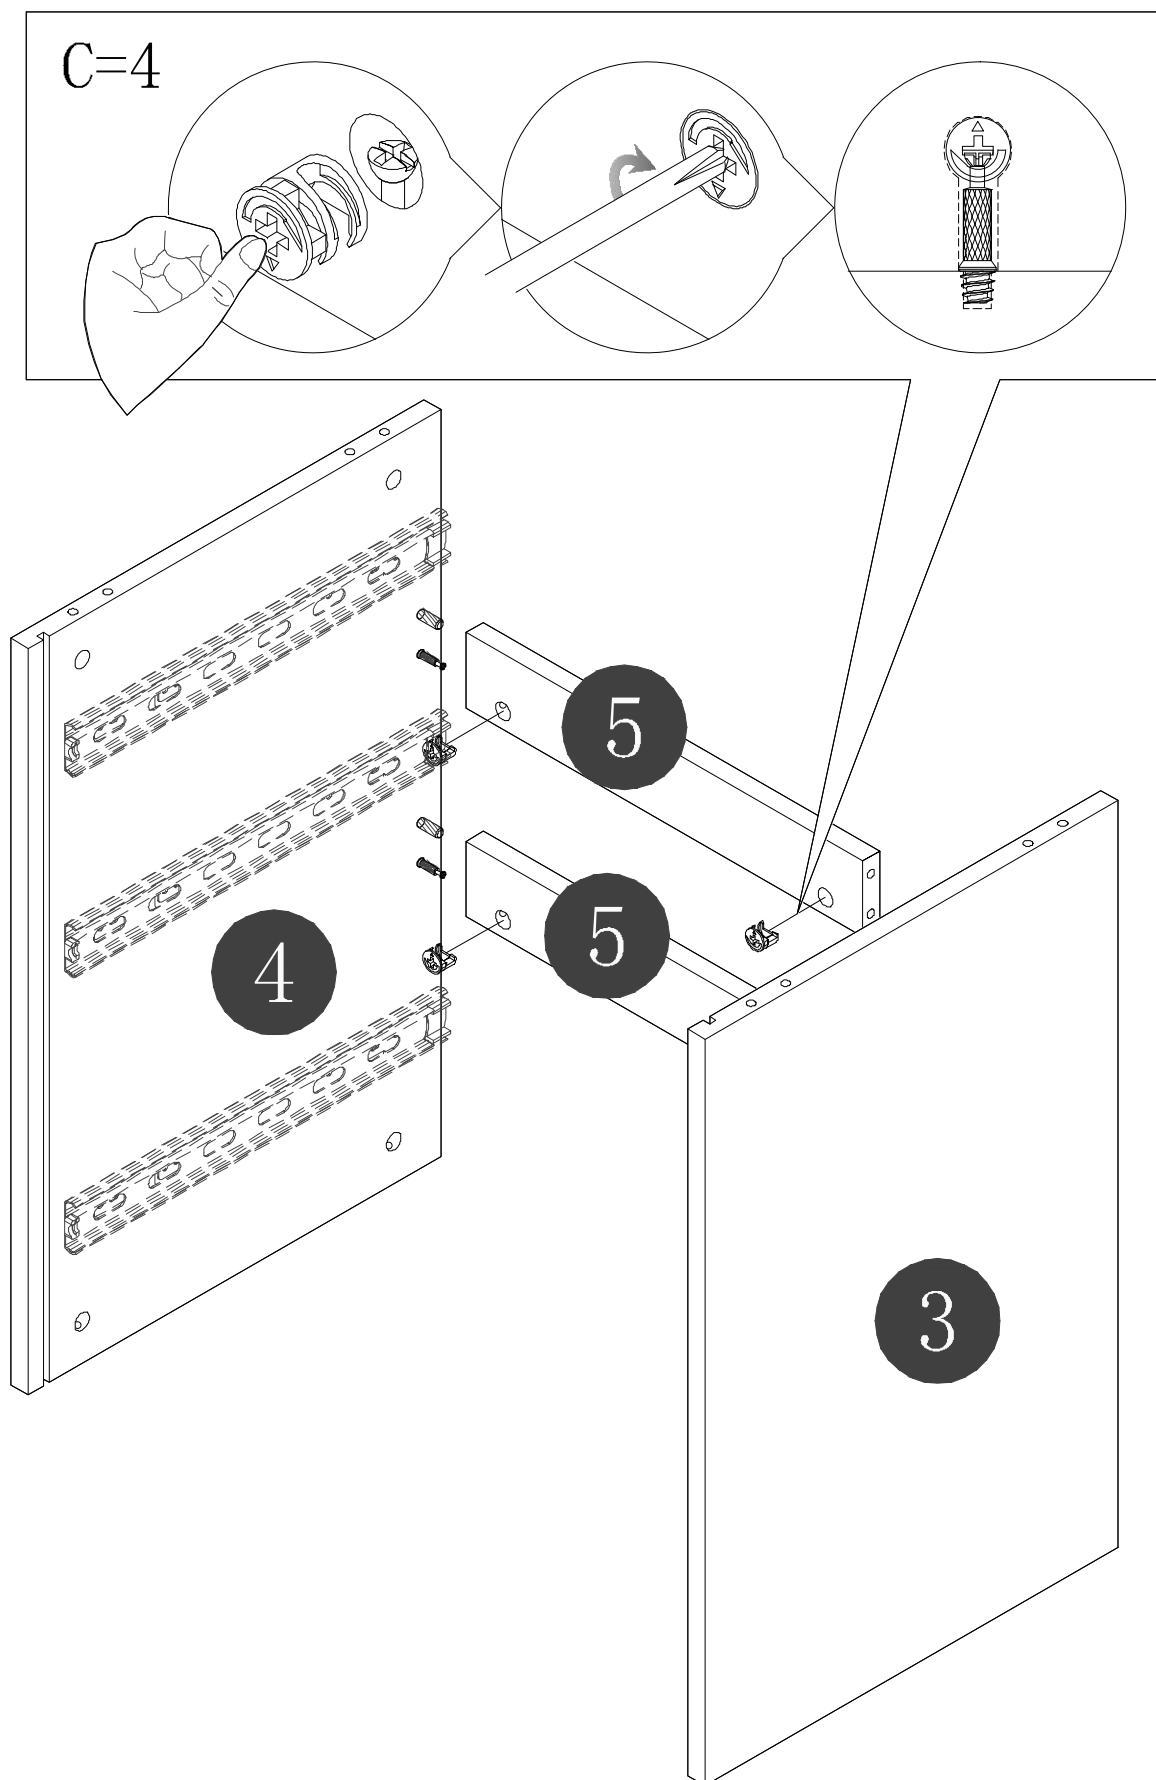



STEP 4

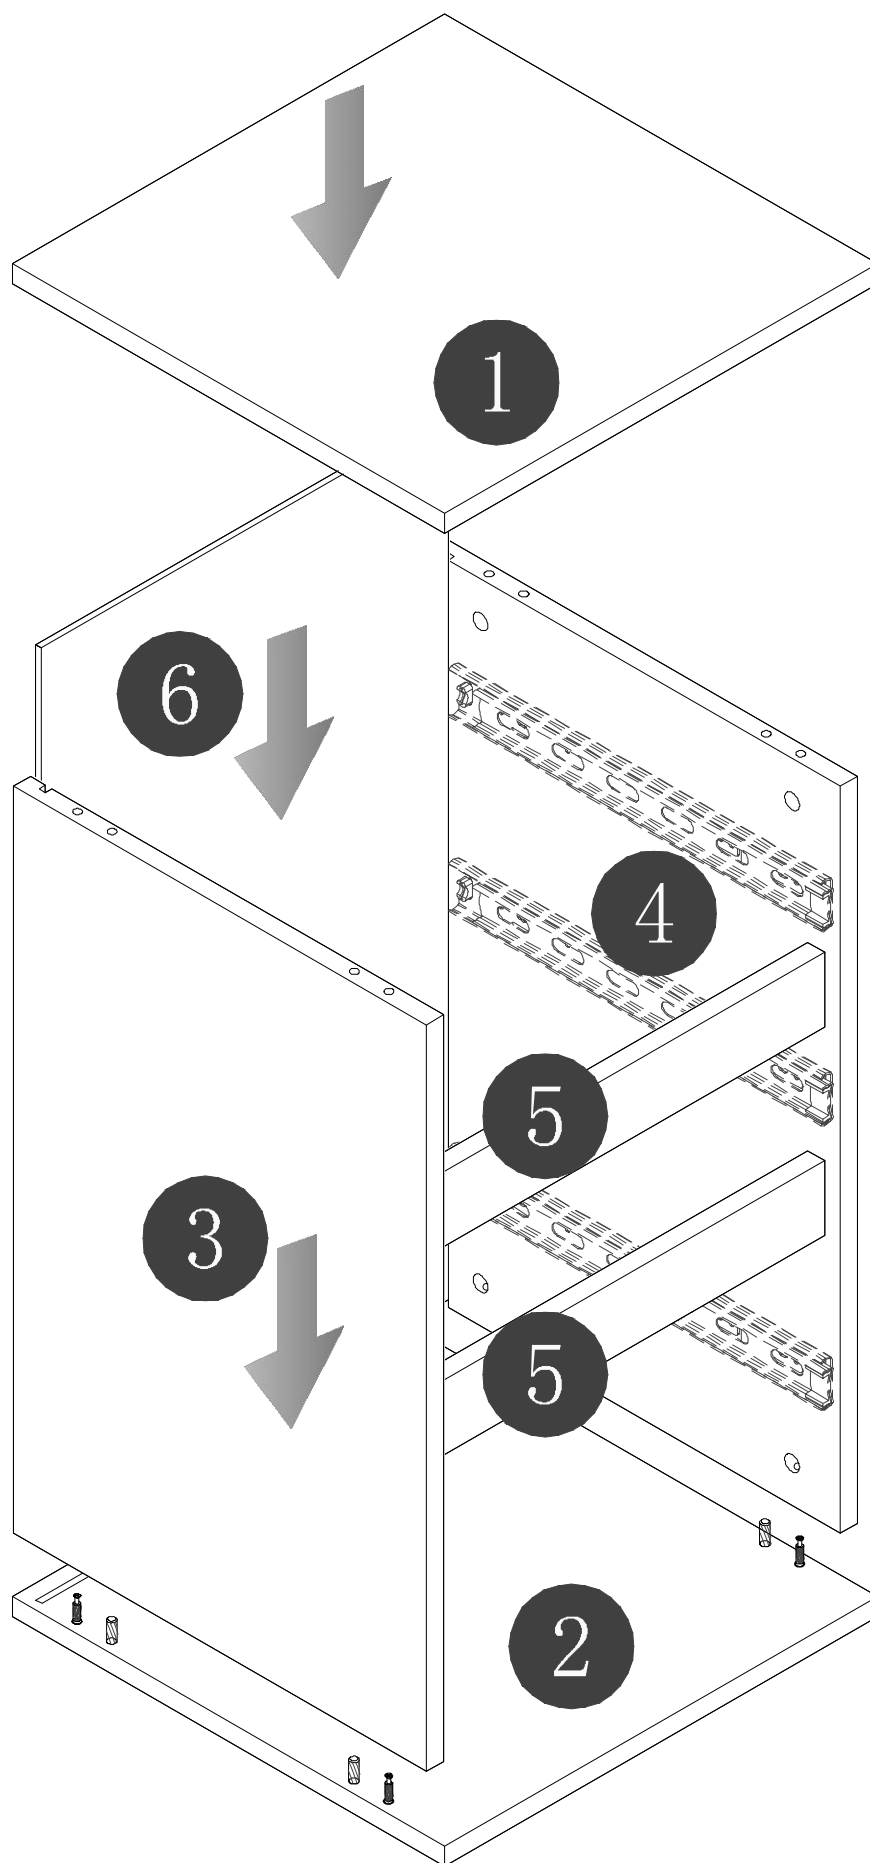


STEP 5

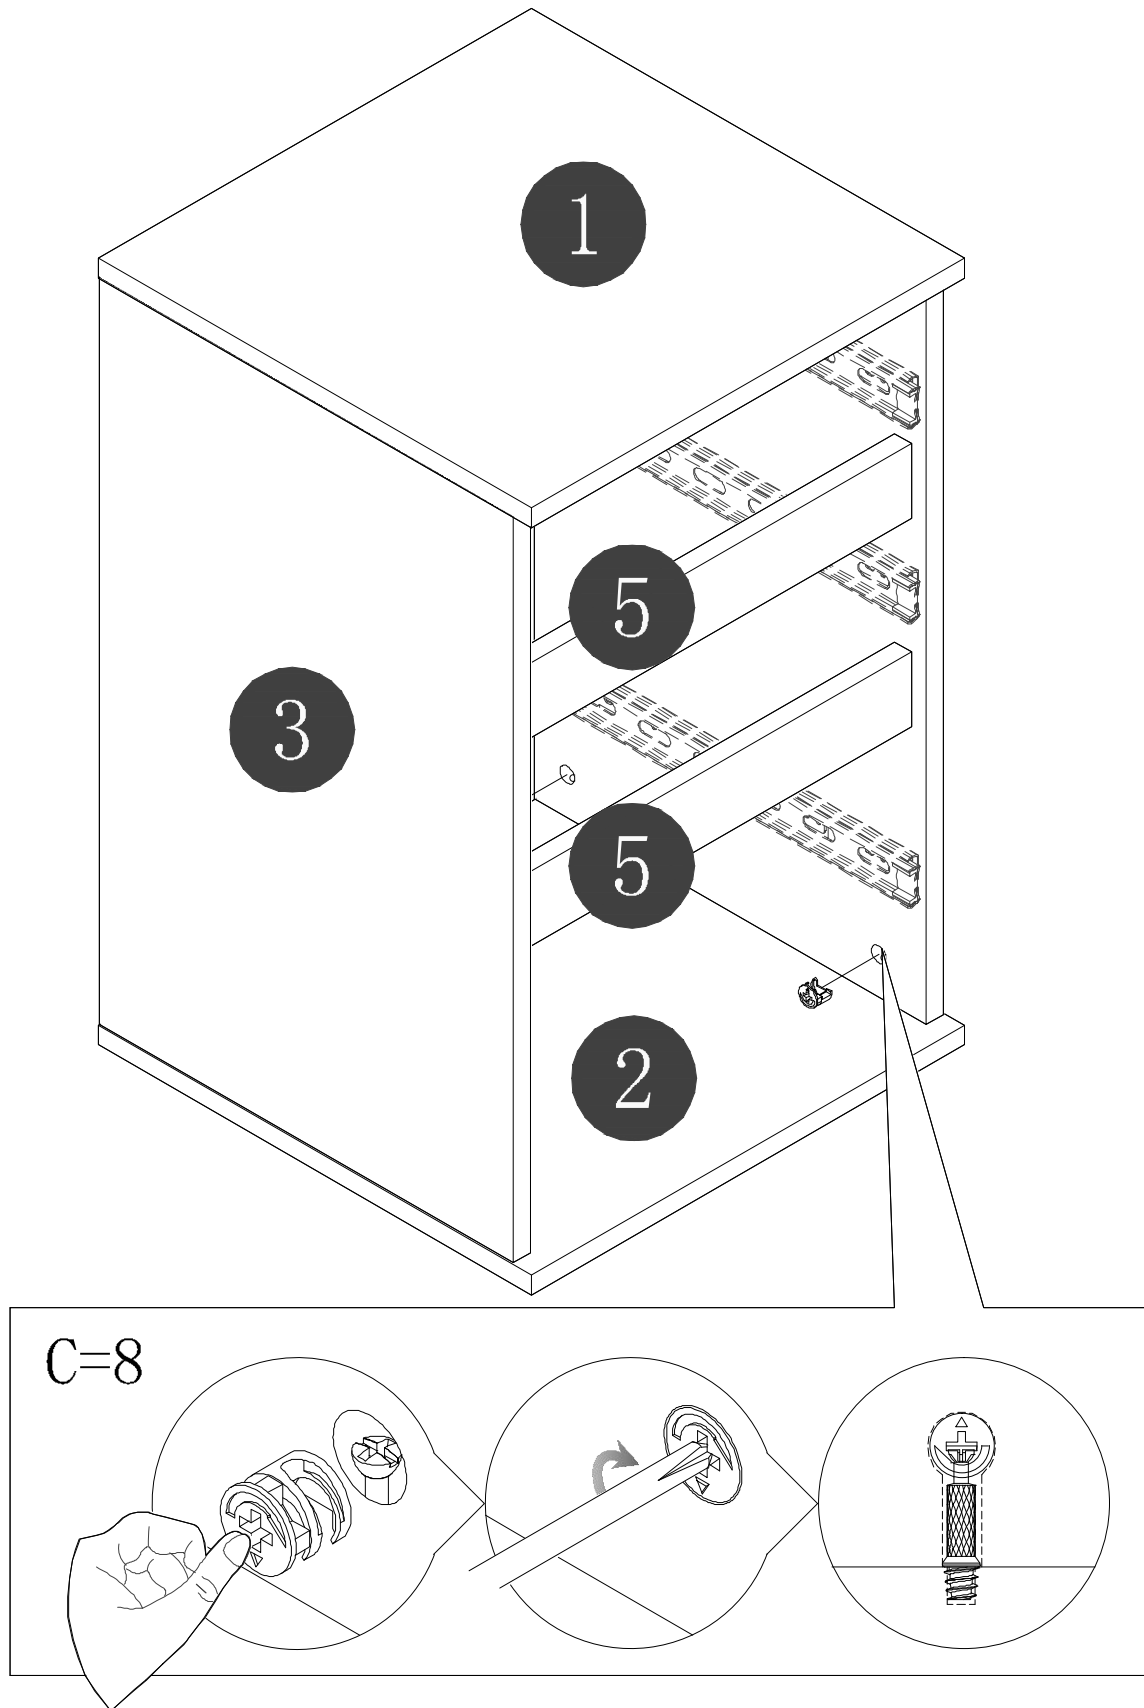

STEP 6

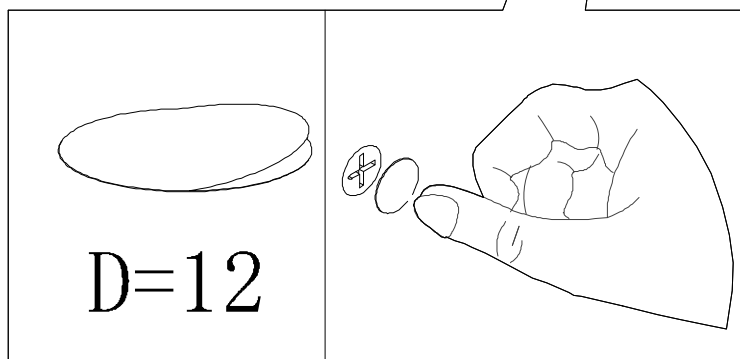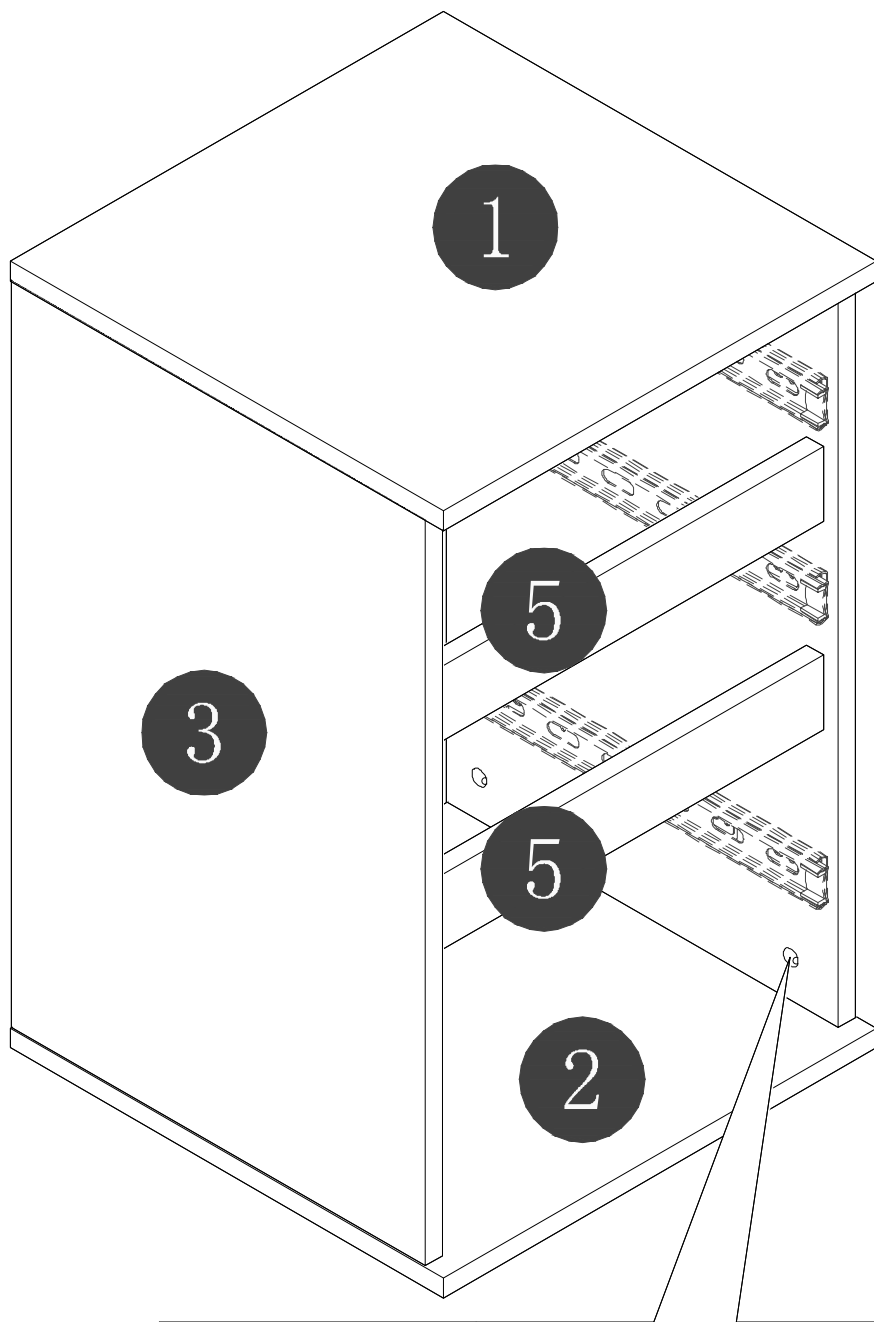


STEP 7

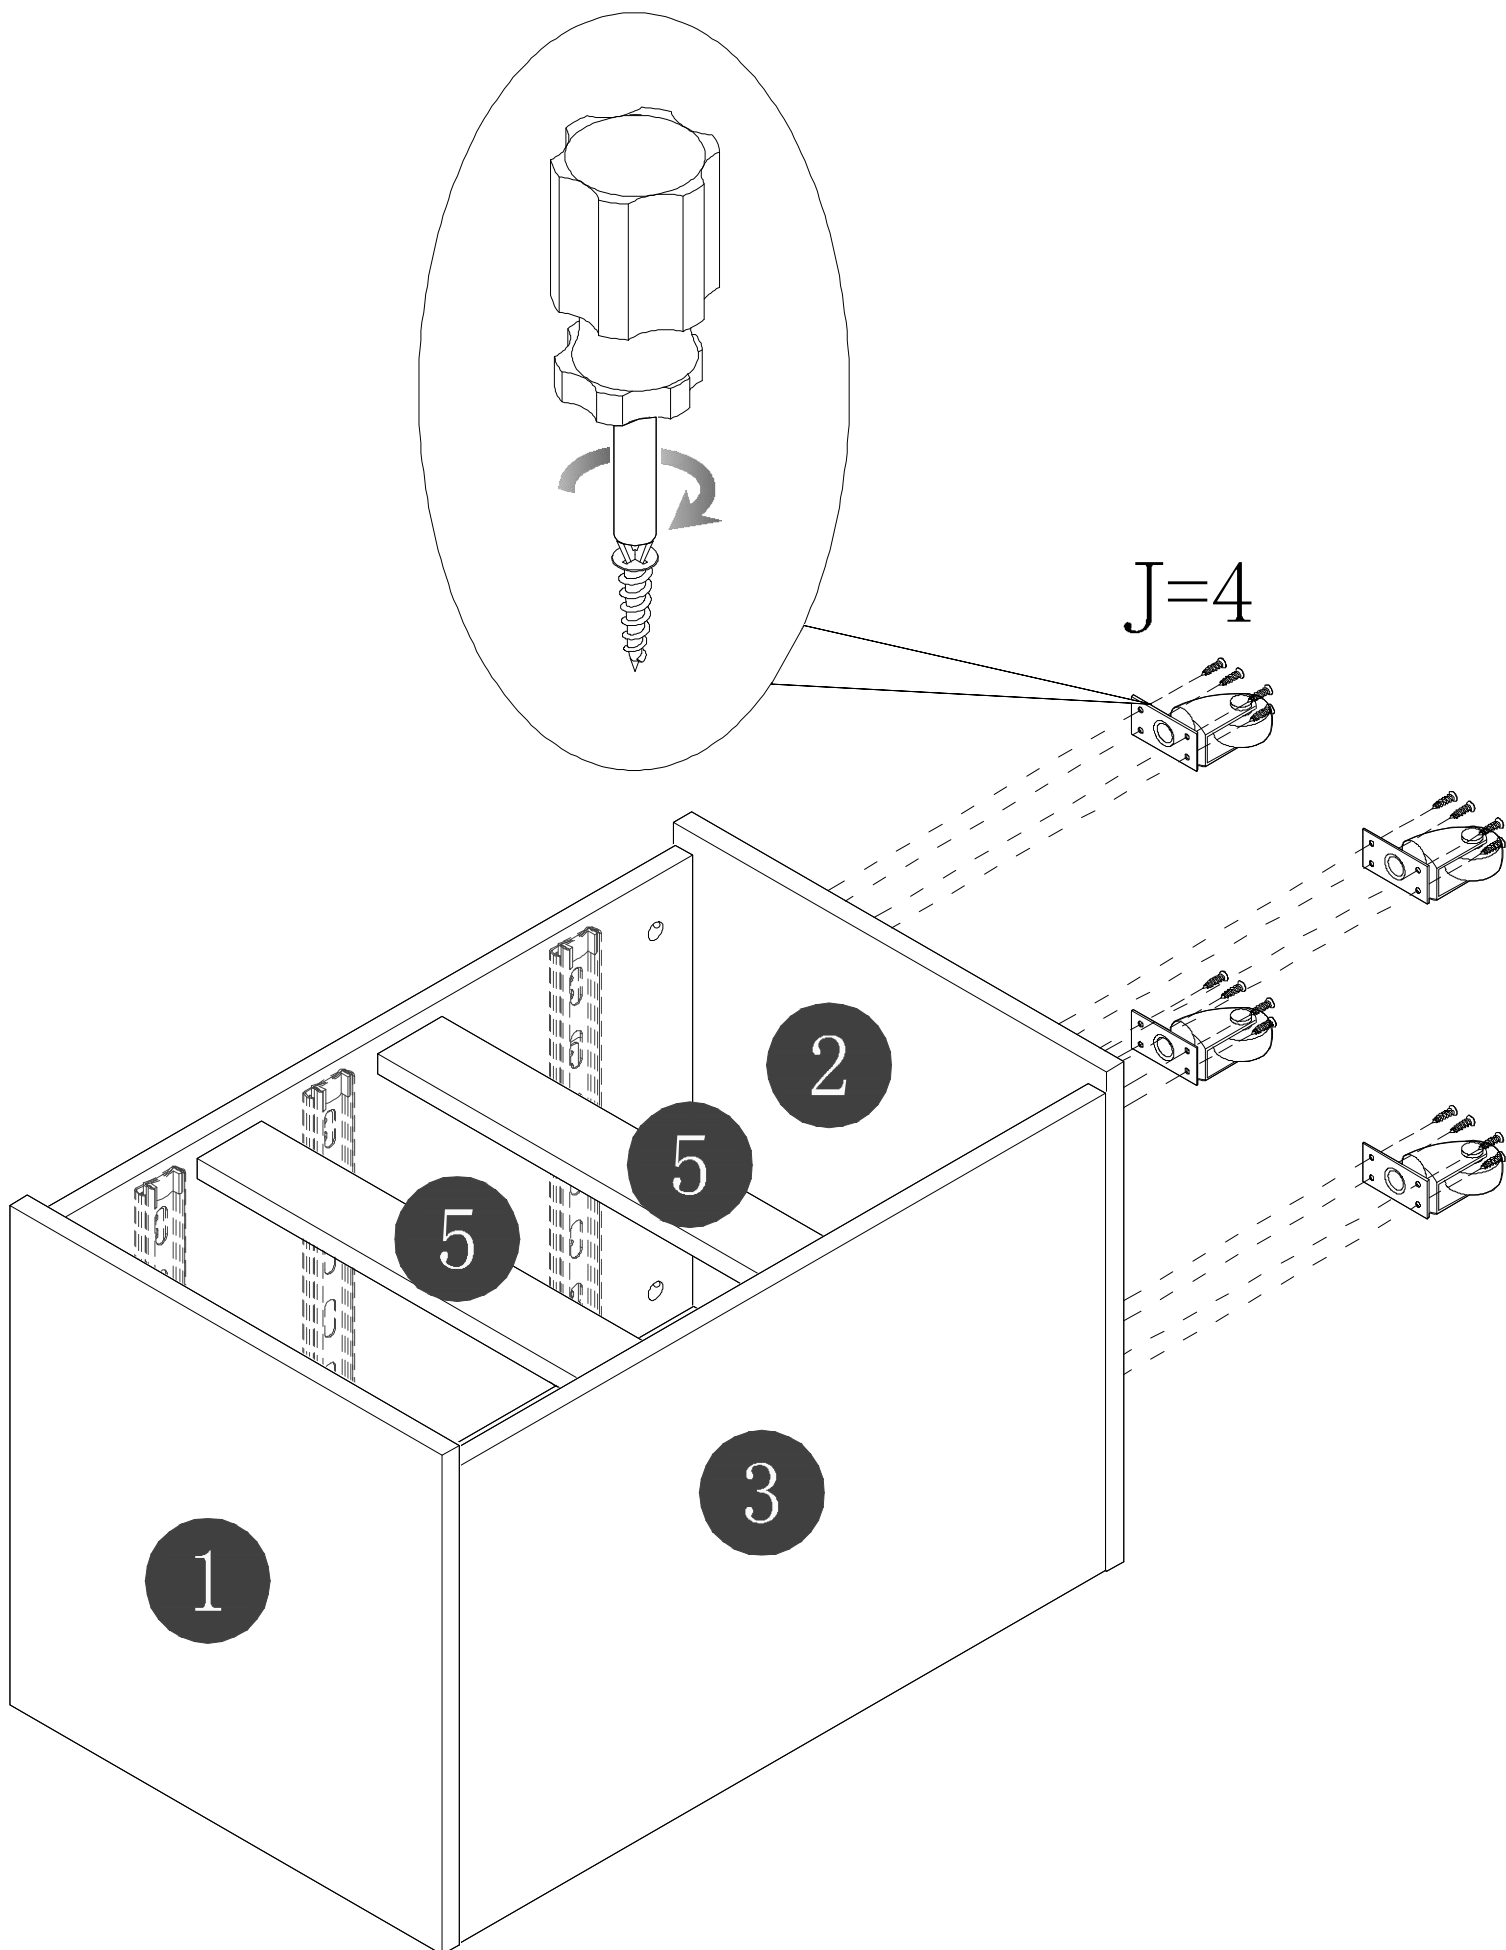


STEP 8


8-1

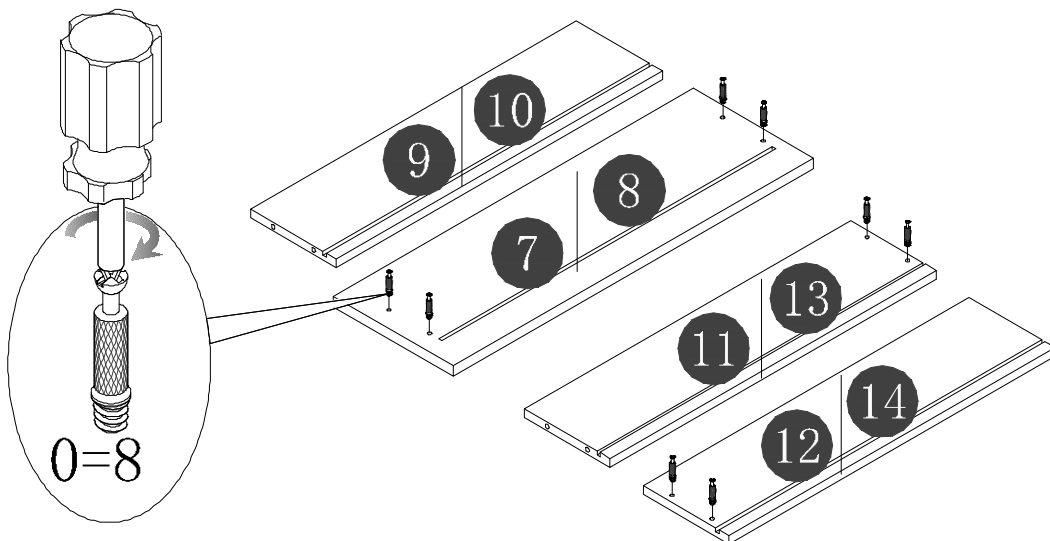

8-2

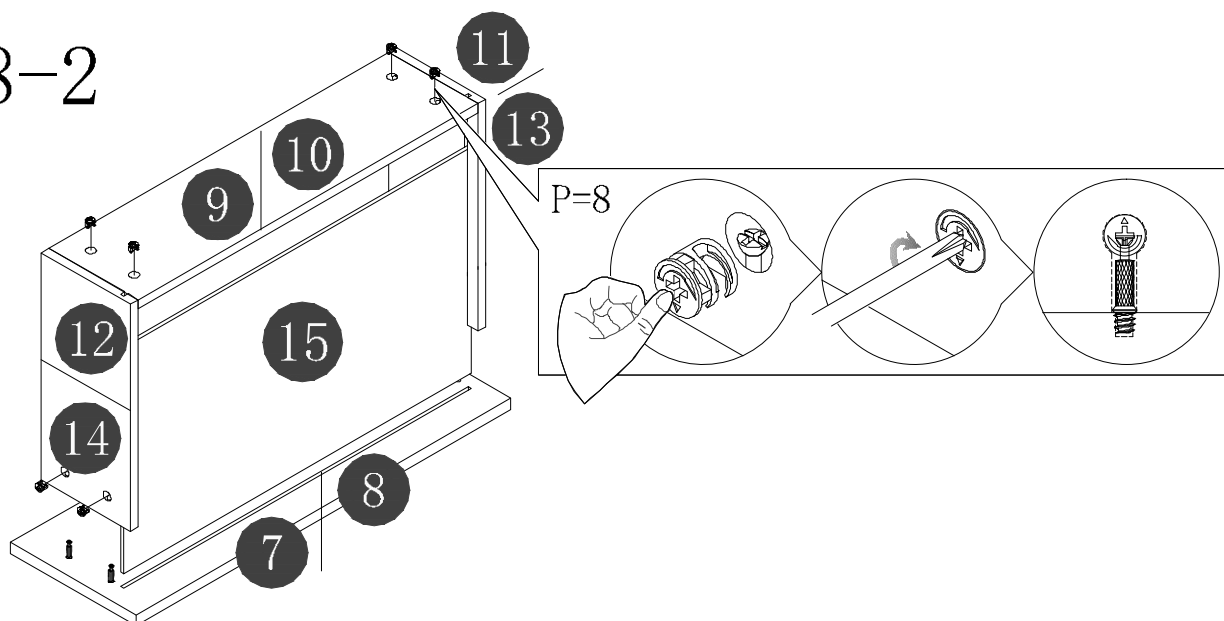


8-3

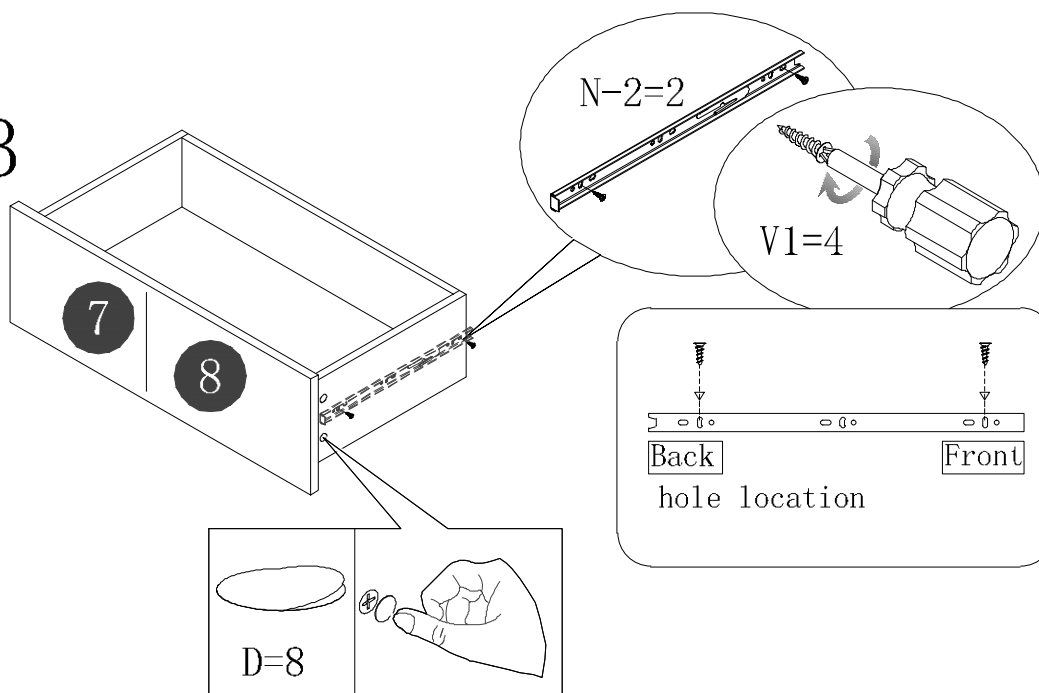


X3


STEP 9

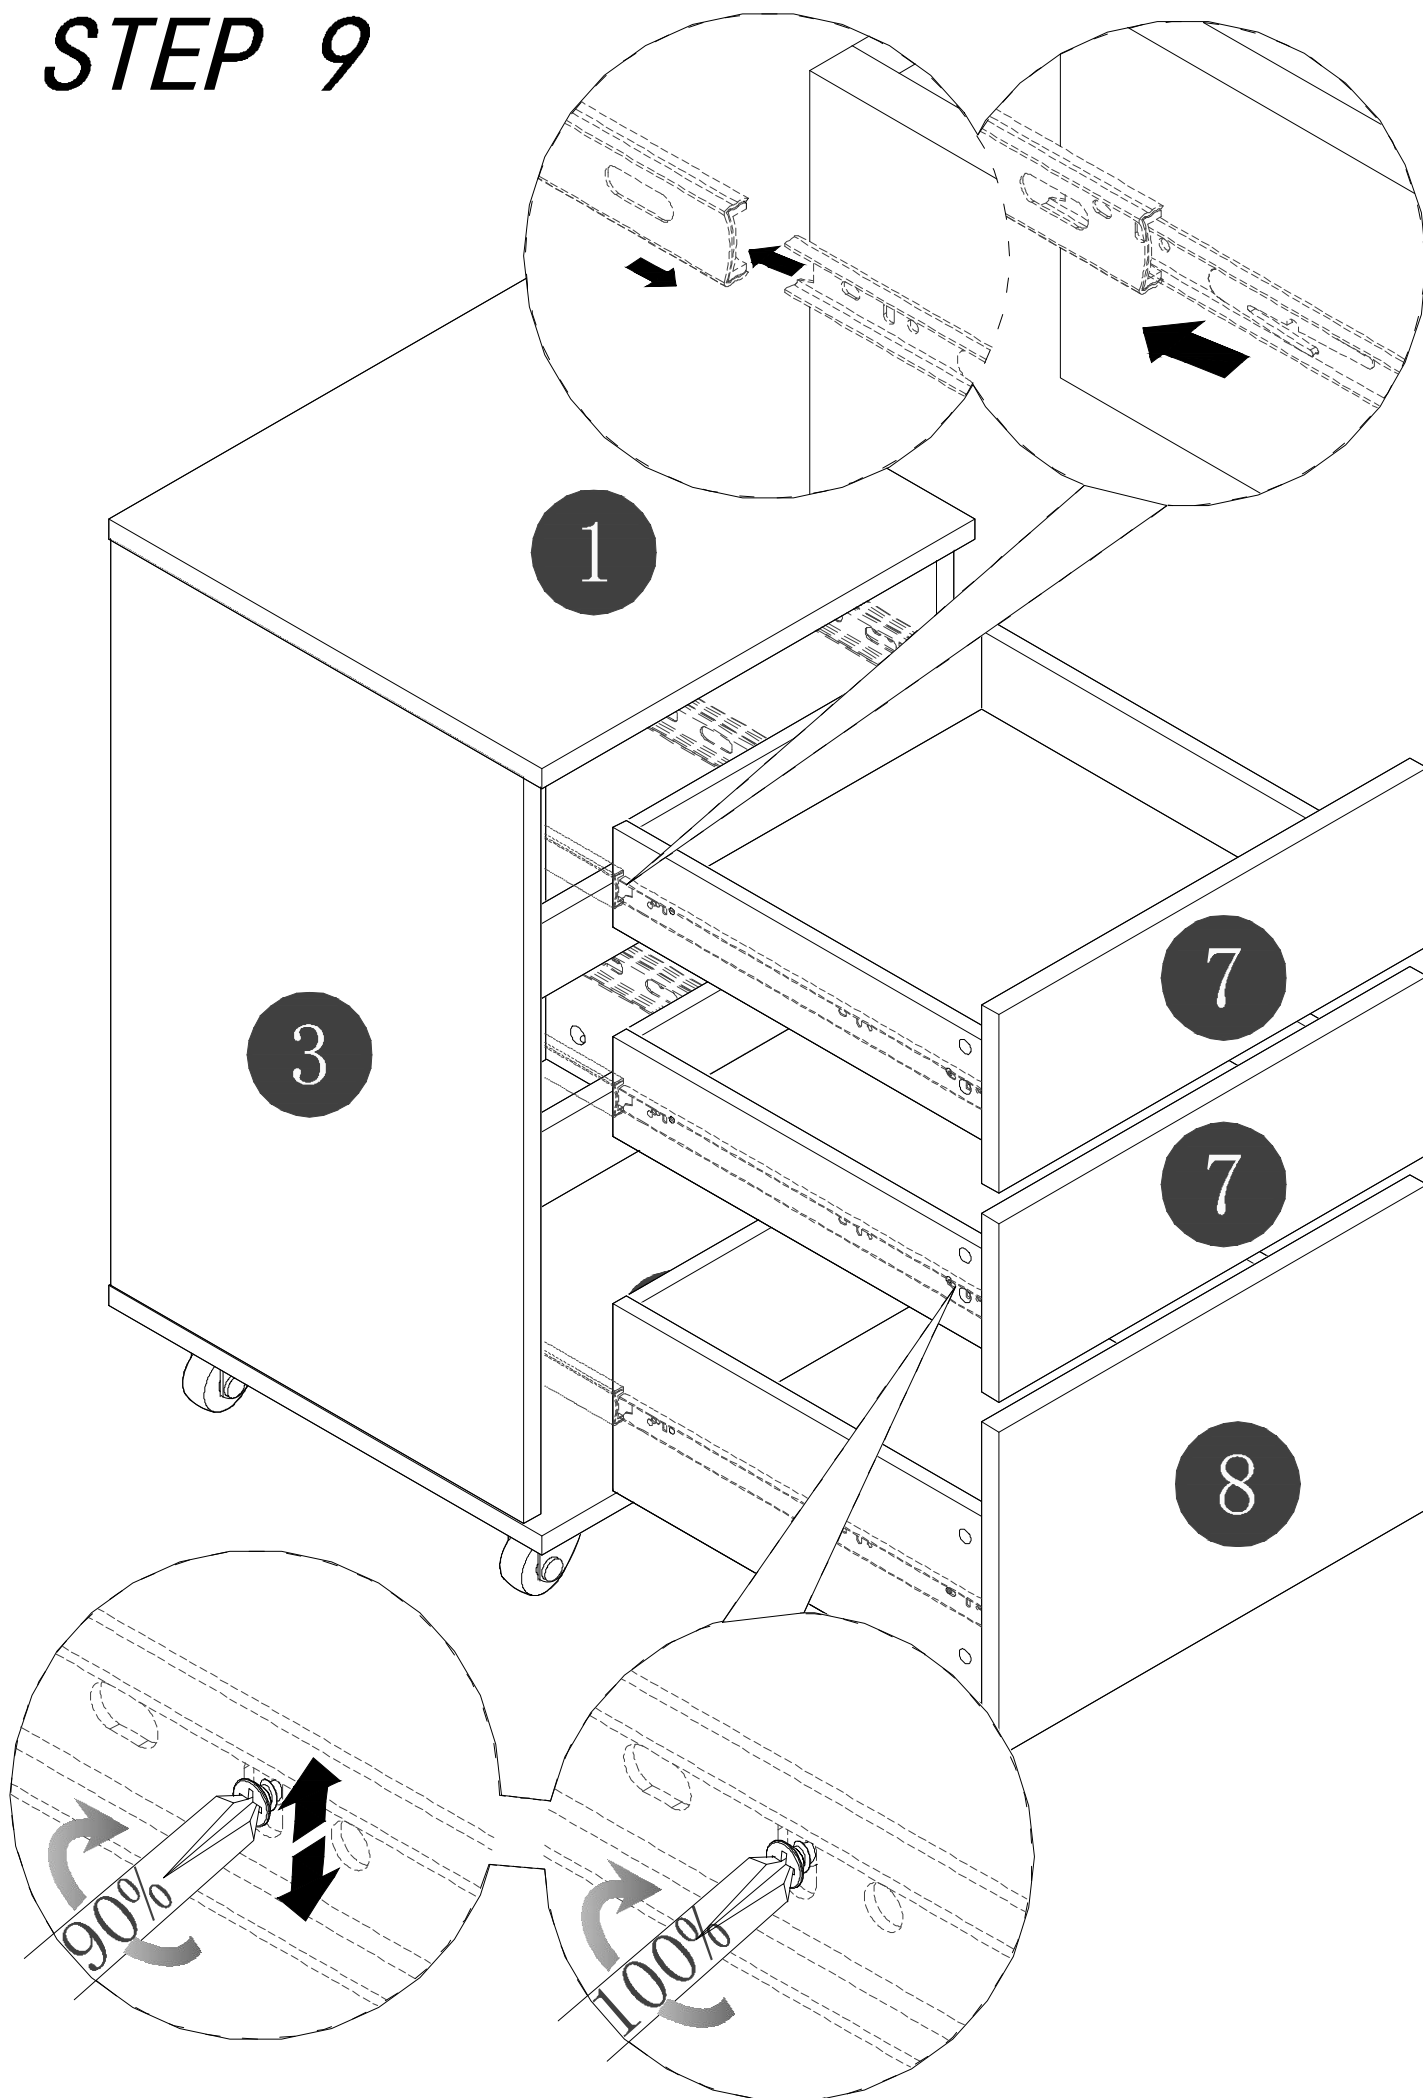

STEP 10

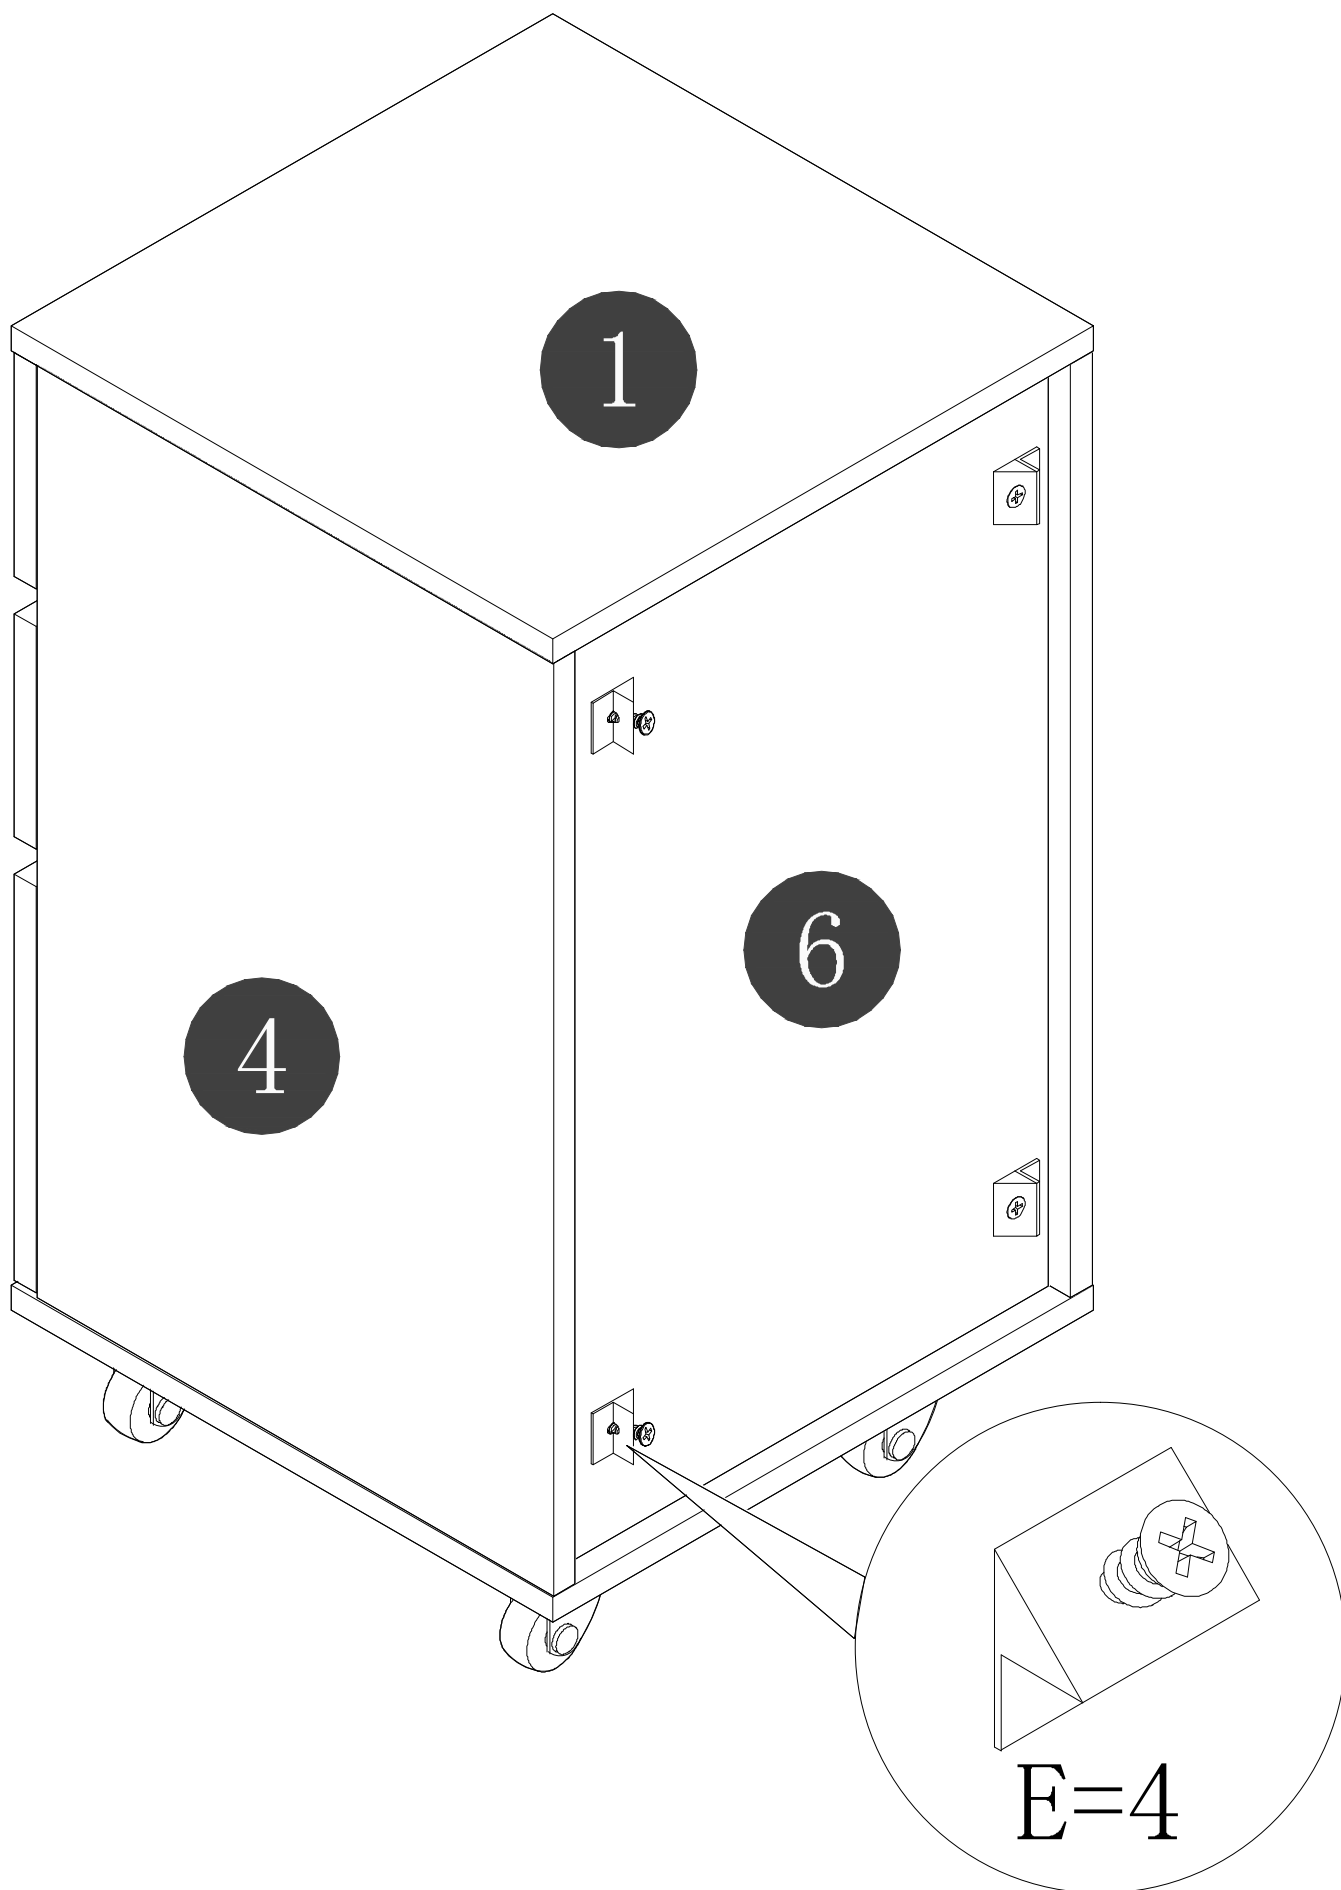


STEP 11

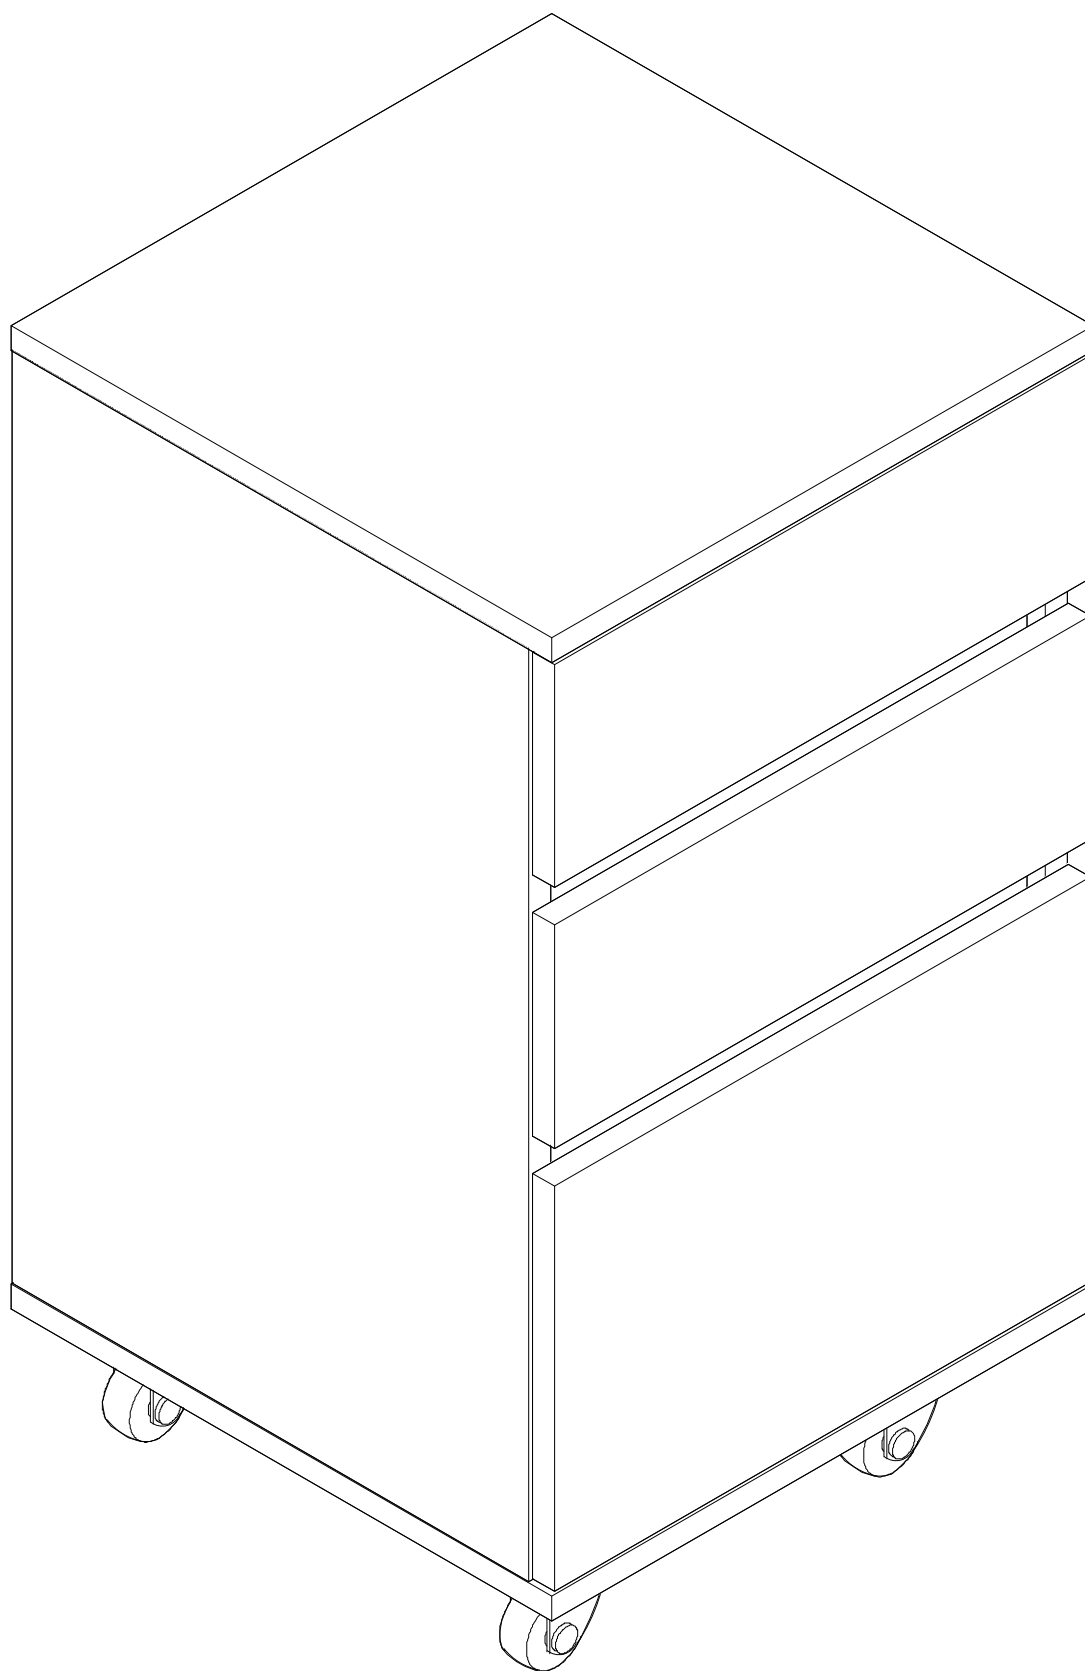

Finish

博瑞格文件柜H620三胺邮购包装

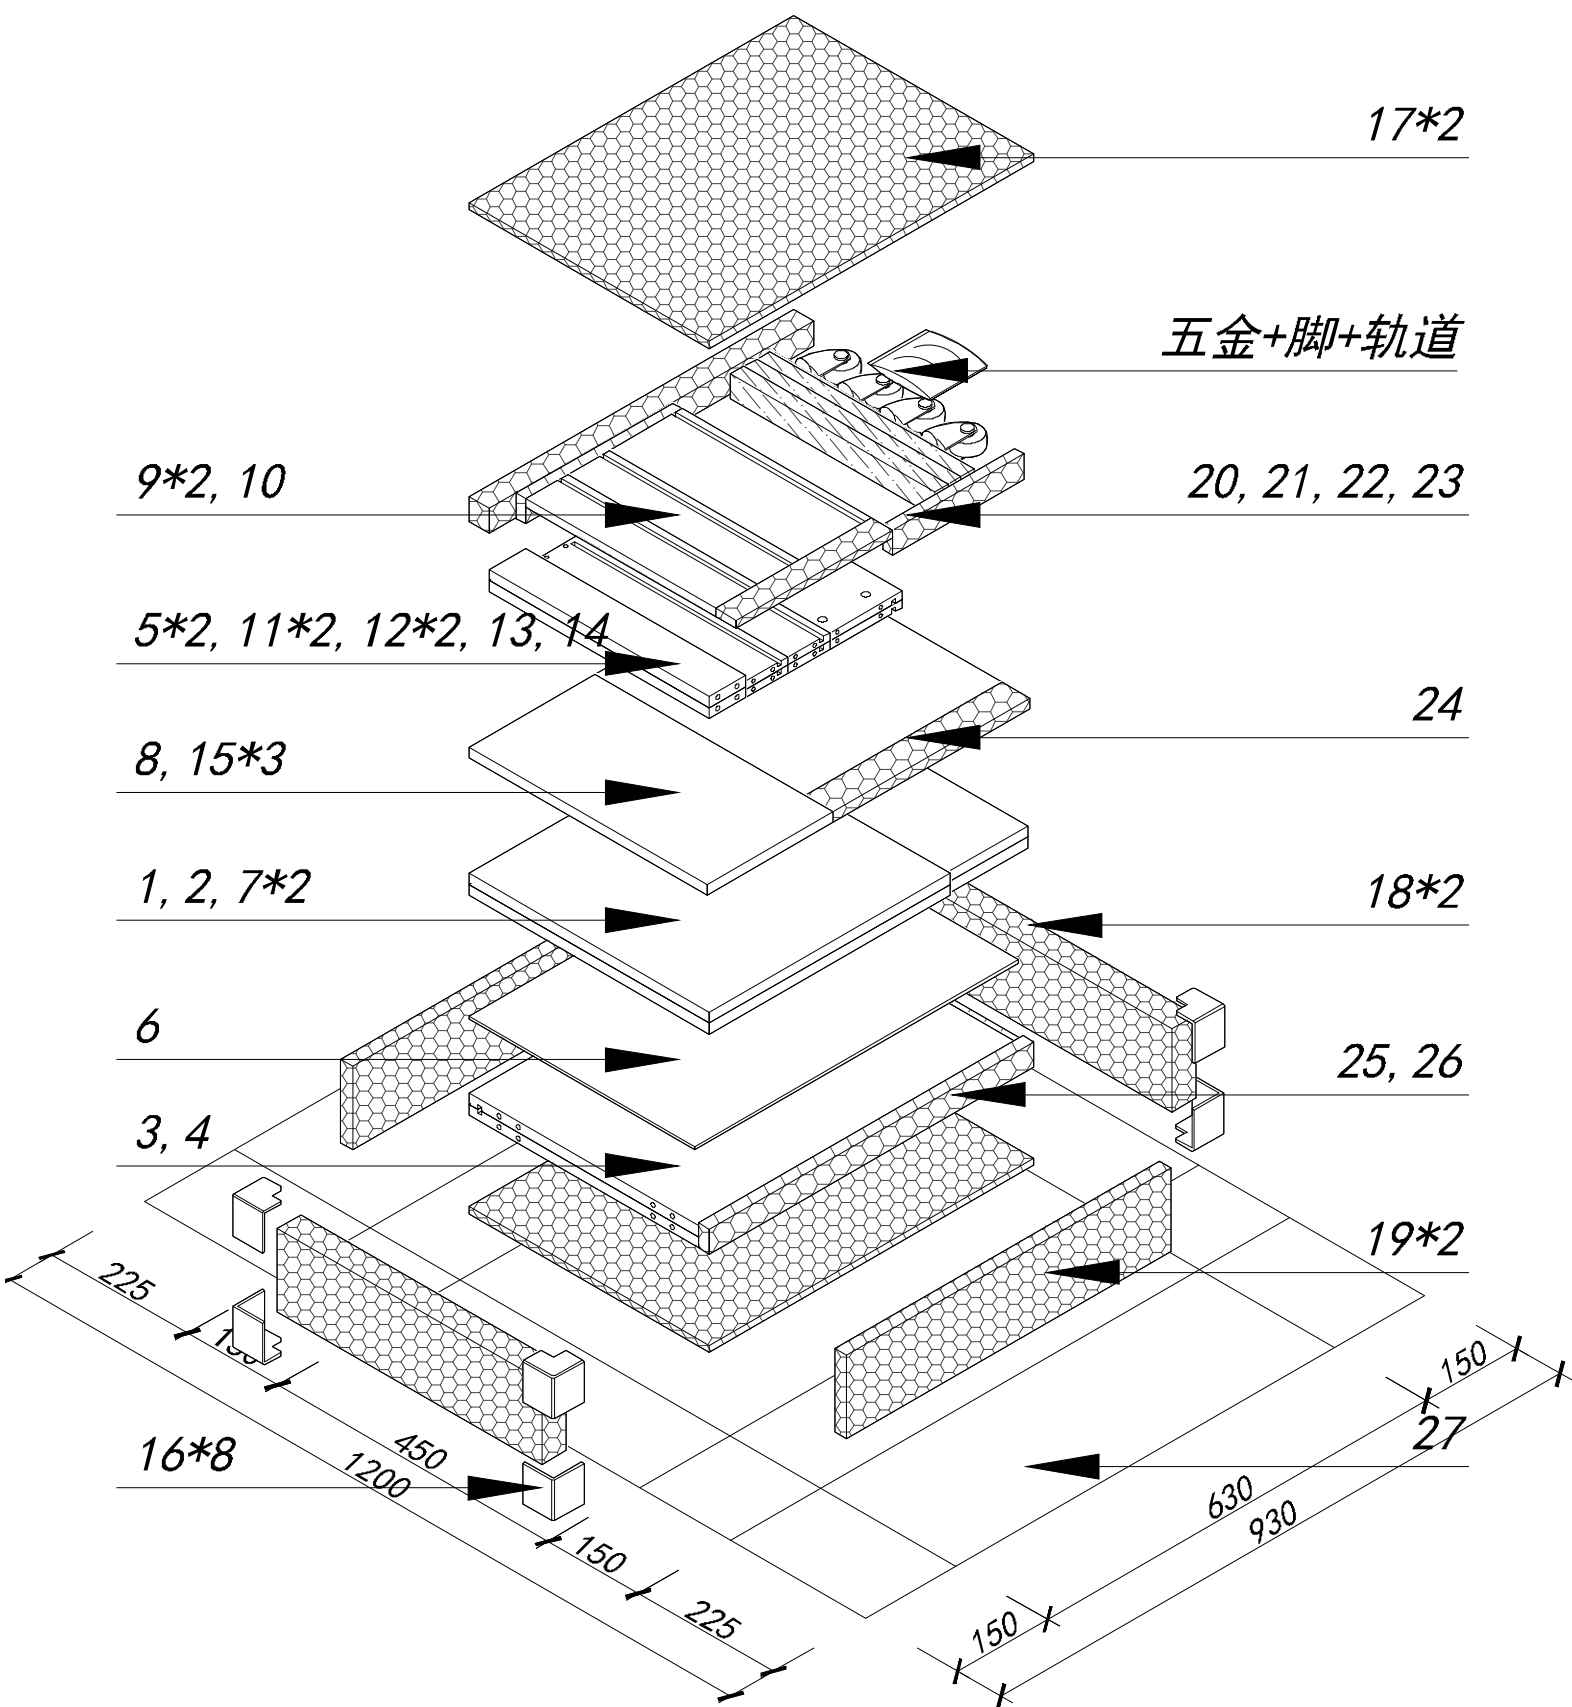

Panel No		Panel Sizes	Quantity
16	护角	50*50*50	8
17	泡沫	540*400*10	2
18	泡沫	440*140*40	2
19	泡沫	540*140*20	2
20	泡沫	540*34*35	1
21	泡沫	220*35*15	1
22	泡沫	260*35*15	1

Panel No		Panel Sizes	Quantity
23	泡沫	260*34*15	1
24	泡沫	330*50*15	1
25	泡沫	540*18*35	1
26	泡沫	382*30*10	1
27	纸盒	内径630*450*150	1