

KOKKUPANEKUJUHEND / ASSEMBLY INSTRUCTION

48501 LAUD FLORIDA / TABLE FLORIDA

① x8



Seib / Washer M8

② x8




Kruvi / Screw M8

③ x1



Võti / Key 13

A x1

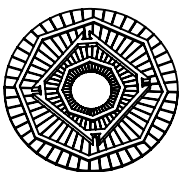


B x4




C x1



Samm 1 / Step 1

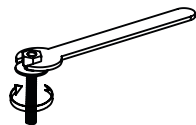

100 %

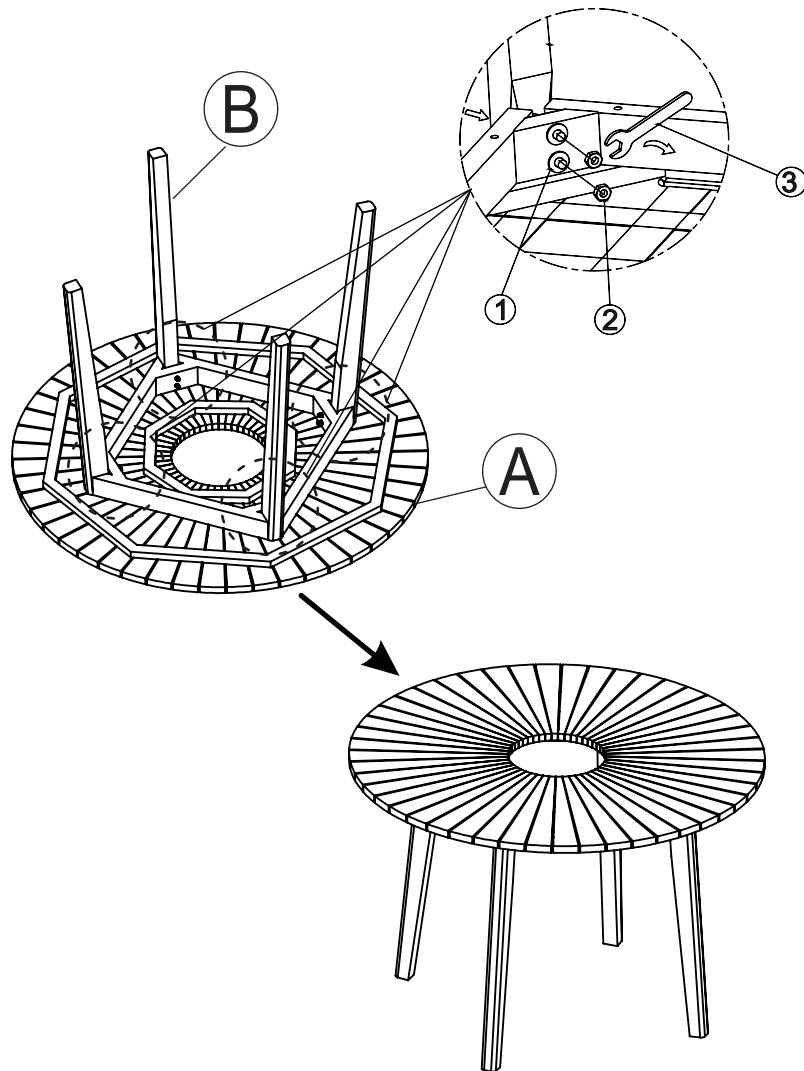

Samm 2 / Step 2

