



# KOKKUPANEKUJUHEND / ASSEMBLY INSTRUCTION


## 48502 TOOL FLORIDA / CHAIR FLORIDA








Seib / Washer M8





Kruvi / Screw M8



Võti 13 / Key 13

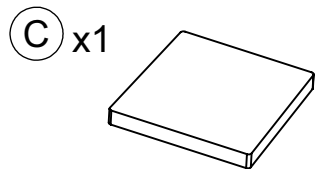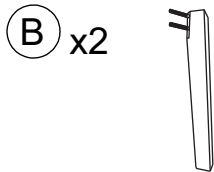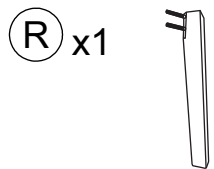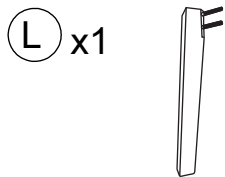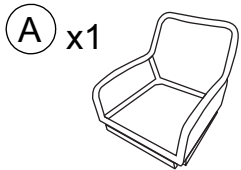


### Samm 1 / Step 1

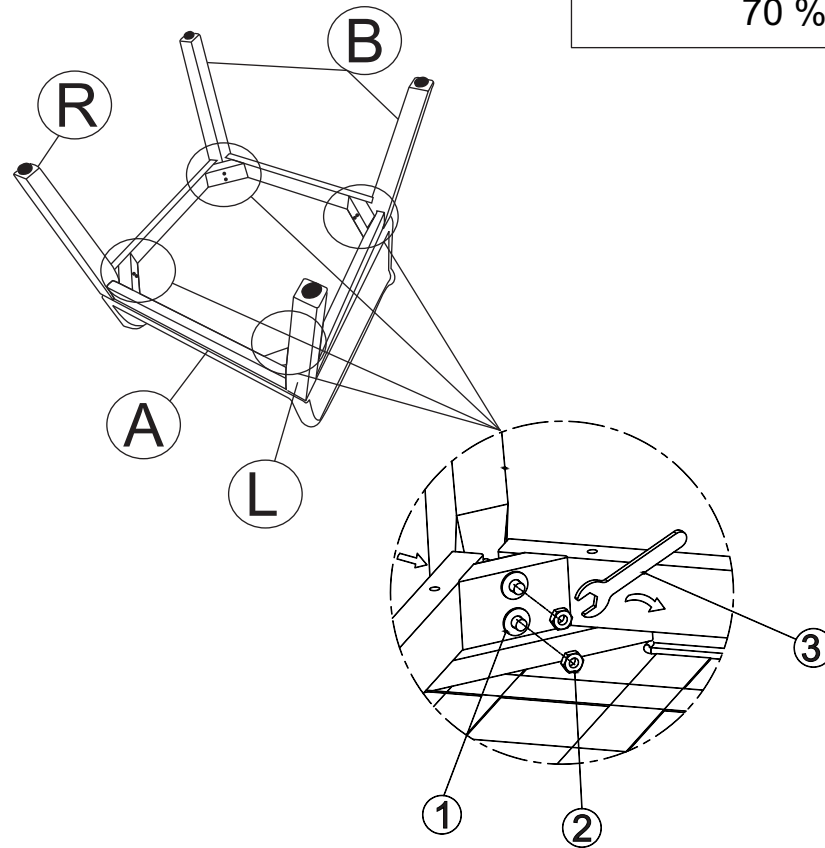

70 %

### Samm 2 / Step 2



100 %

