



KOKKUPANEKUJUHEND / ASSEMBLY INSTRUCTION  
48503 KOMPLEKT FLORIDA / SET FLORIDA


DIIVAN 1TK / BENCH 1PC





Seib / Washer M8





Kruvi / Screw M8



Võti 13 / Key 13

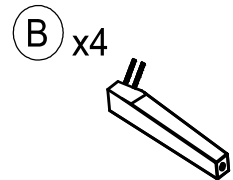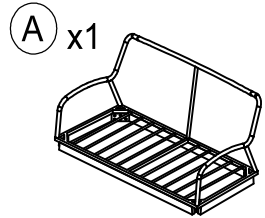


Samm 1 / Step 1

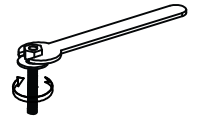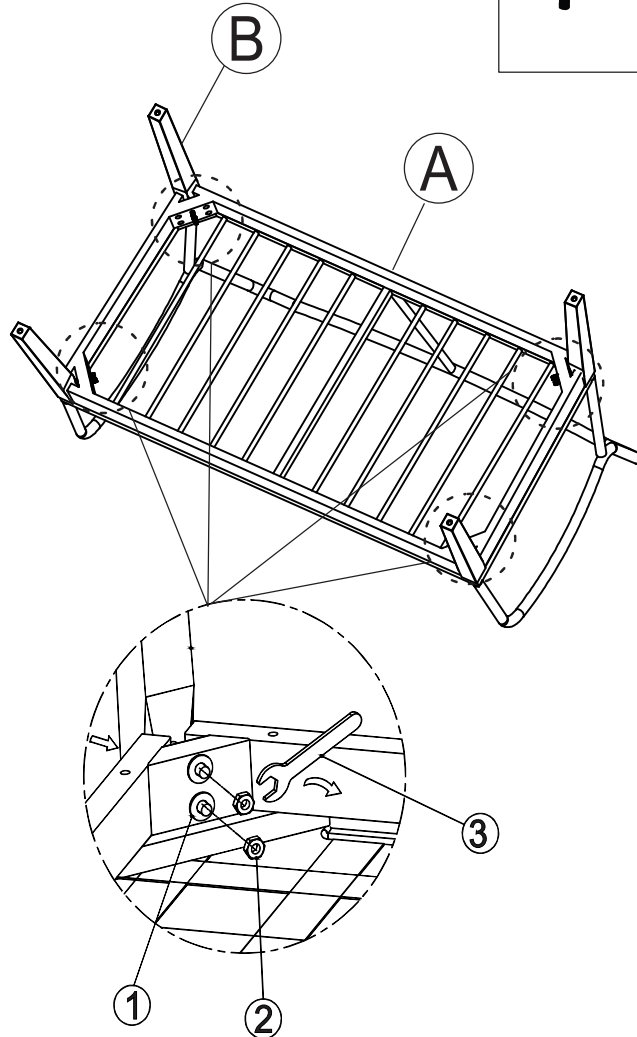


70 %

Samm 2 / Step 2

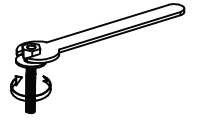

100 %

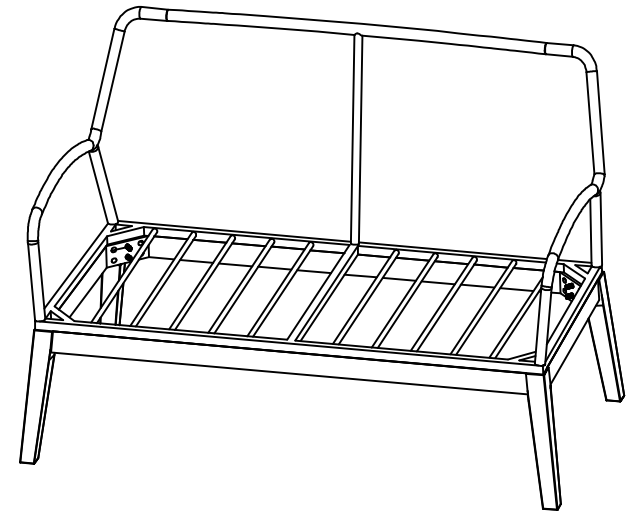

**TOOL 2TK / CHAIR 2PCS**

① x16




Seib / Washer M8

② x16




Kruvi / Screw M8



Ⓐ x2

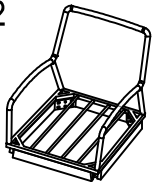

Ⓑ x8

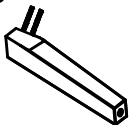


**Samm 1 / Step 1**

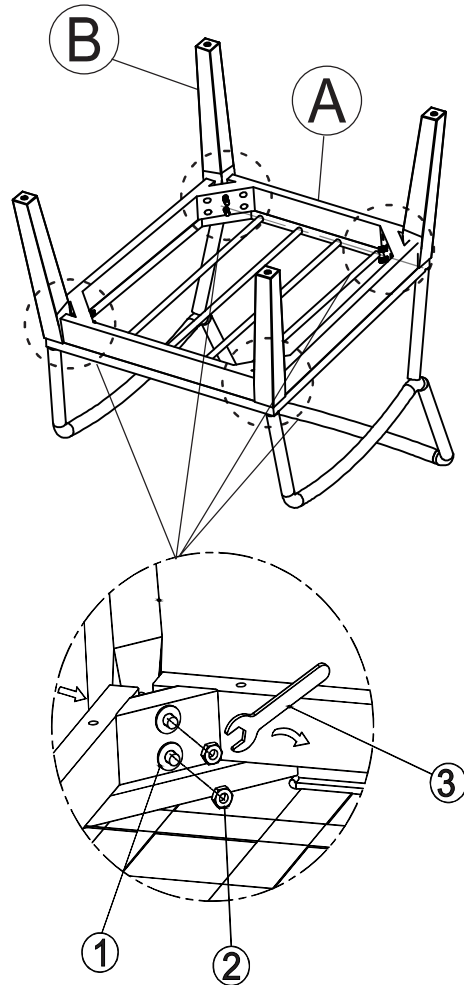


70 %


**Samm 2 / Step 2**




100 %

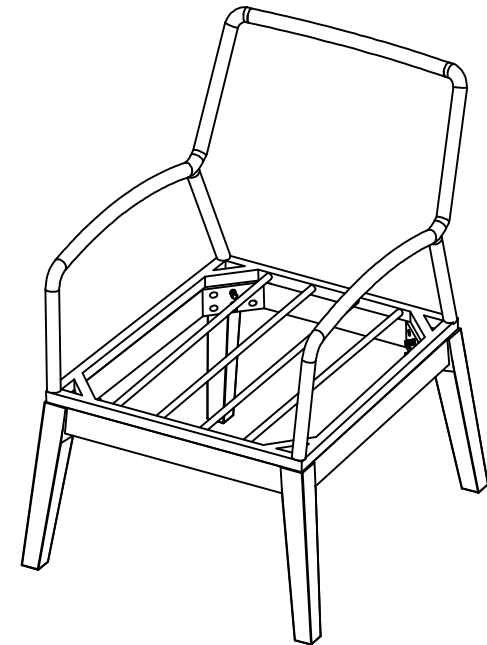



LAUD 1TK / TABLE 1PC






Seib / Washer M8



Kruvi / Screw M8

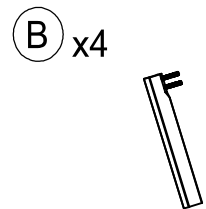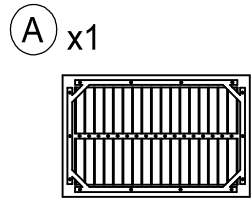


Samm 1 / Step 1

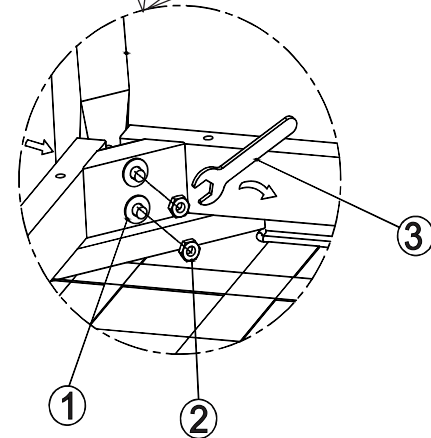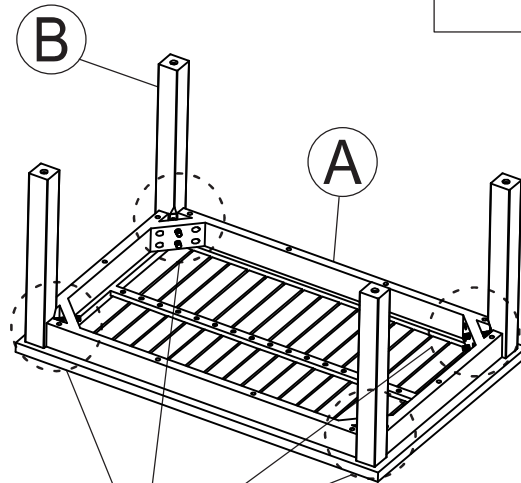

70 %

Samm 2 / Step 2



100 %

