








Seib / Washer M8



Kruvi / Screw M8




Võti 13 / Key 13

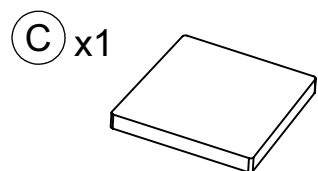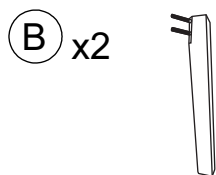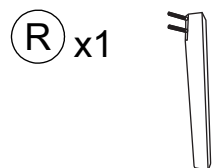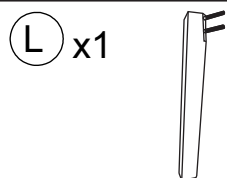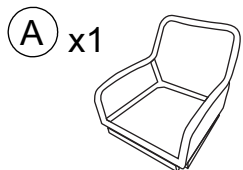


KOKKUPANEKUJUJUHEND / ASSEMBLY INSTRUCTION

48502 TOOL FLORIDA / CHAIR FLORIDA


Samm 1 / Step 1



70 %

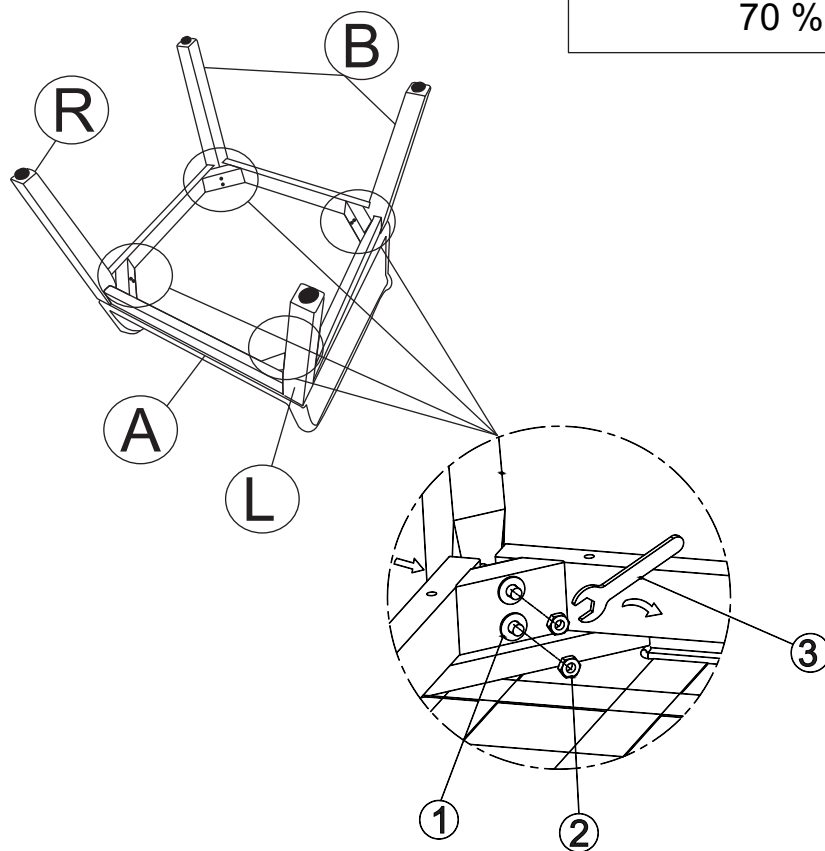

Samm 2 / Step 2



100 %

