



KOKKUPANEKUJUHEND / ASSEMBLY INSTRUCTION
48503 KOMPLEKT FLORIDA / SET FLORIDA

DIIVAN 1TK / BENCH 1PC

Samm 1 / Step 1







Seib / Washer M8



Kruvi / Screw M8




Võti 13 / Key 13

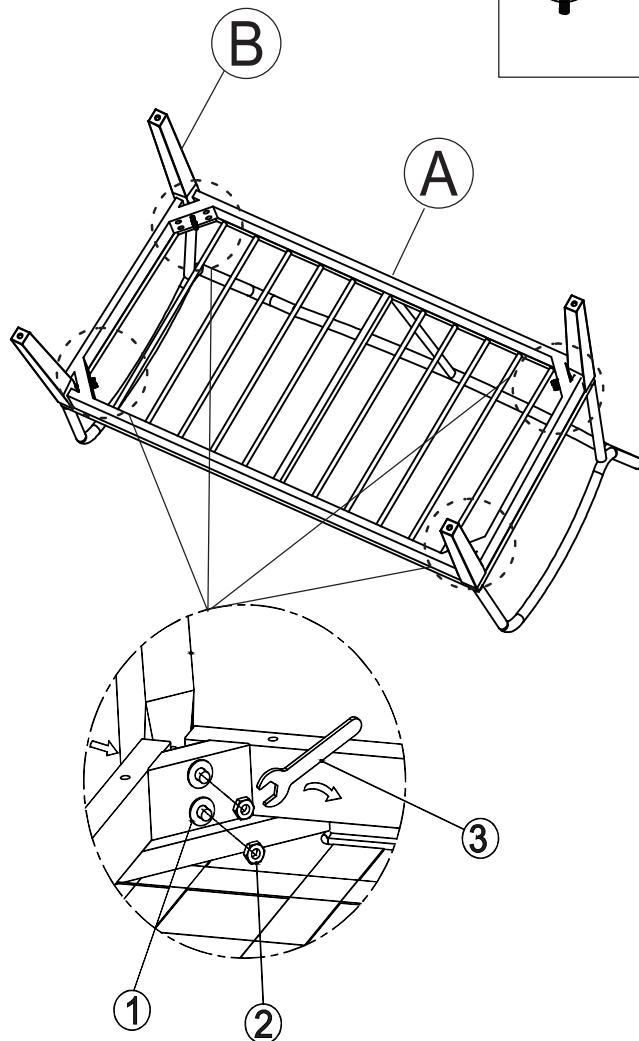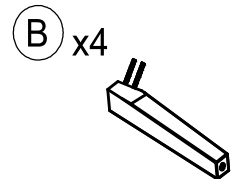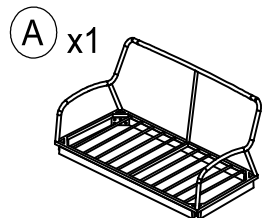


70 %

Samm 2 / Step 2



100 %

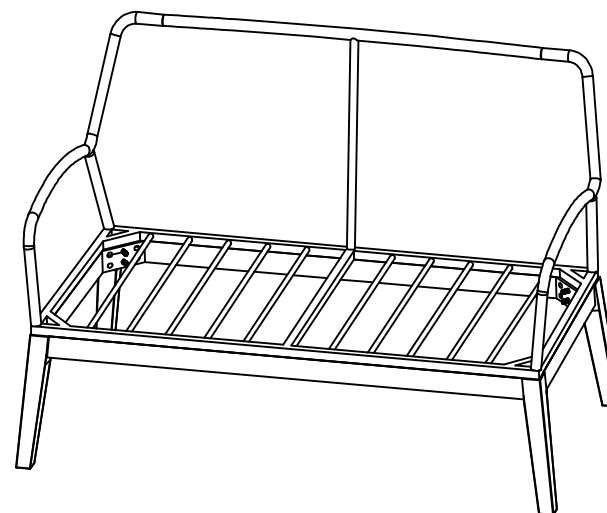

TOOL 2TK / CHAIR 2PCS

① x16




Seib / Washer M8

② x16




Kruvi / Screw M8



③ x2

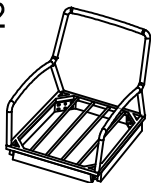

④ x8

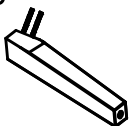


Samm 1 / Step 1

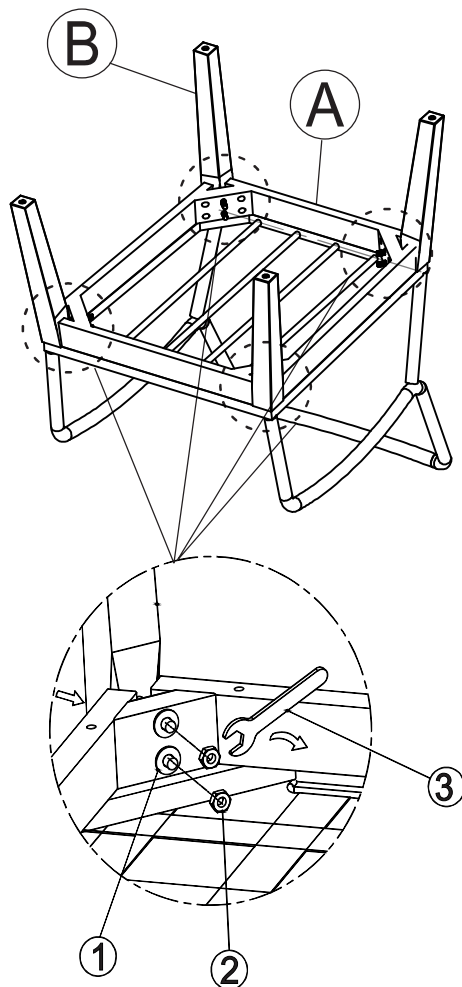


70 %


Samm 2 / Step 2




100 %

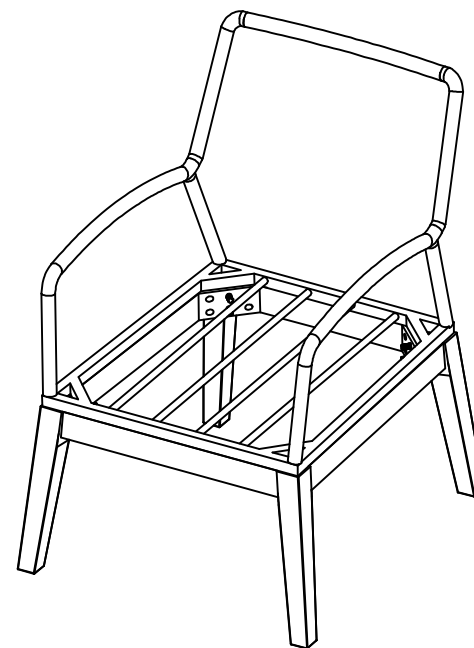



LAUD 1TK / TABLE 1PC





Seib / Washer M8



Kruvi / Screw M8

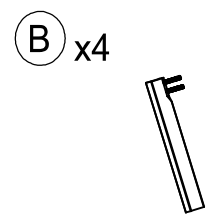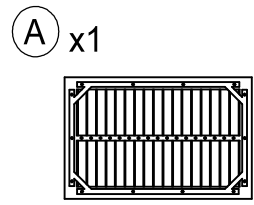

Samm 1 / Step 1

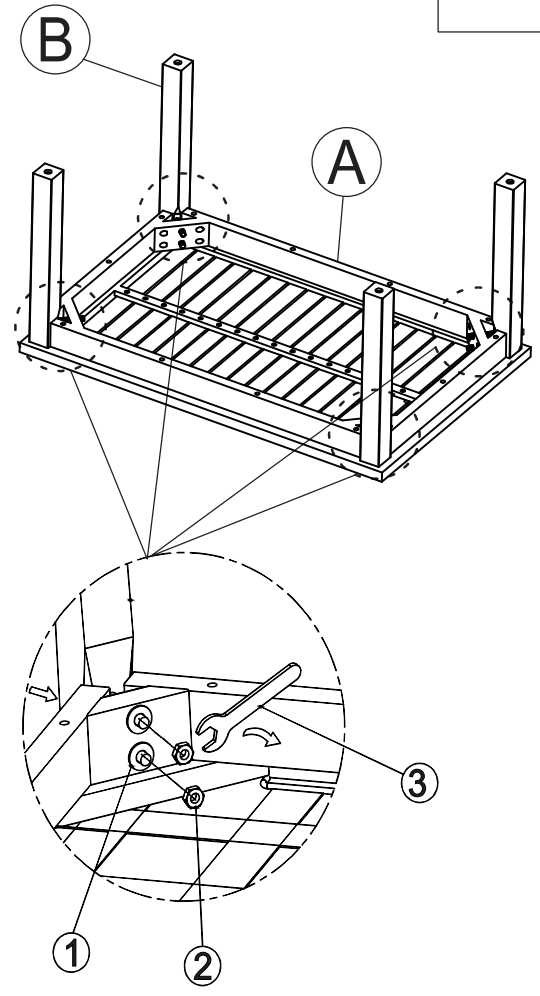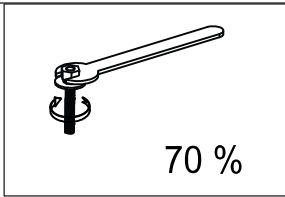

Samm 2 / Step 2

