



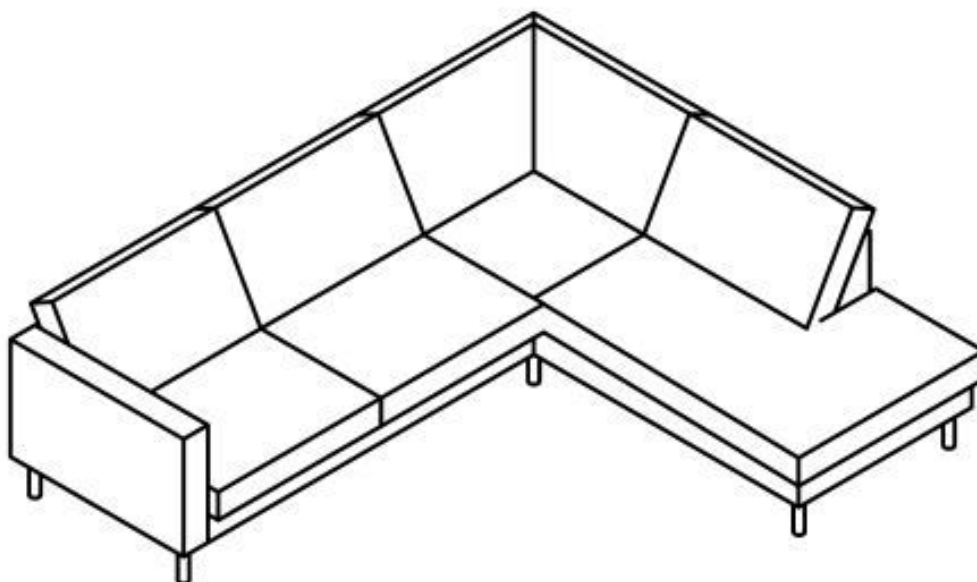
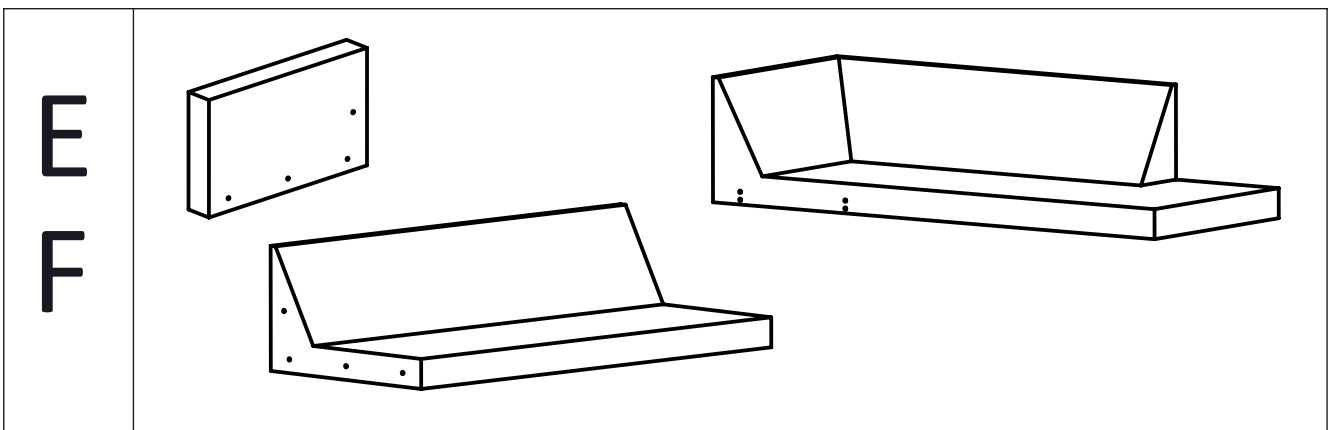
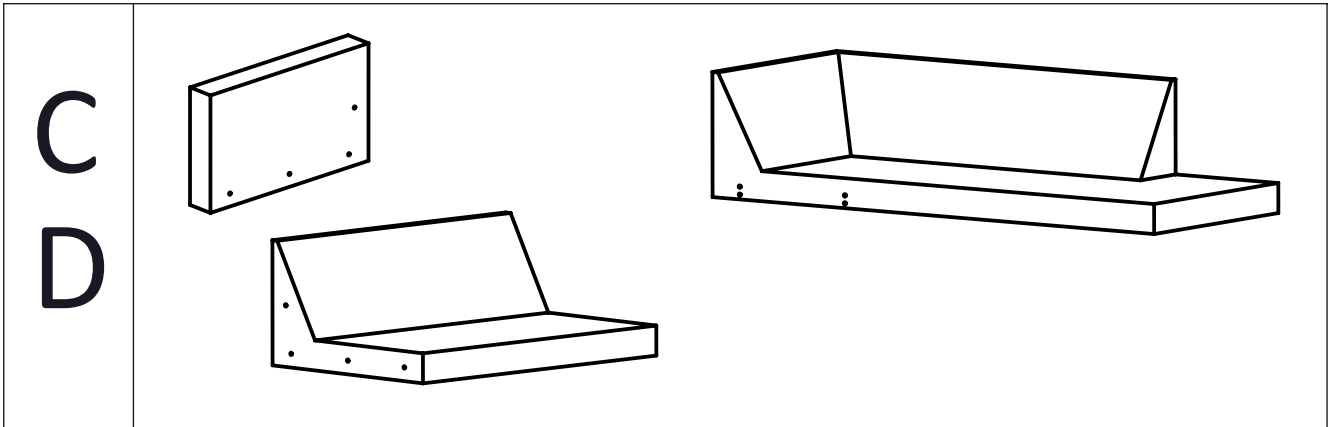
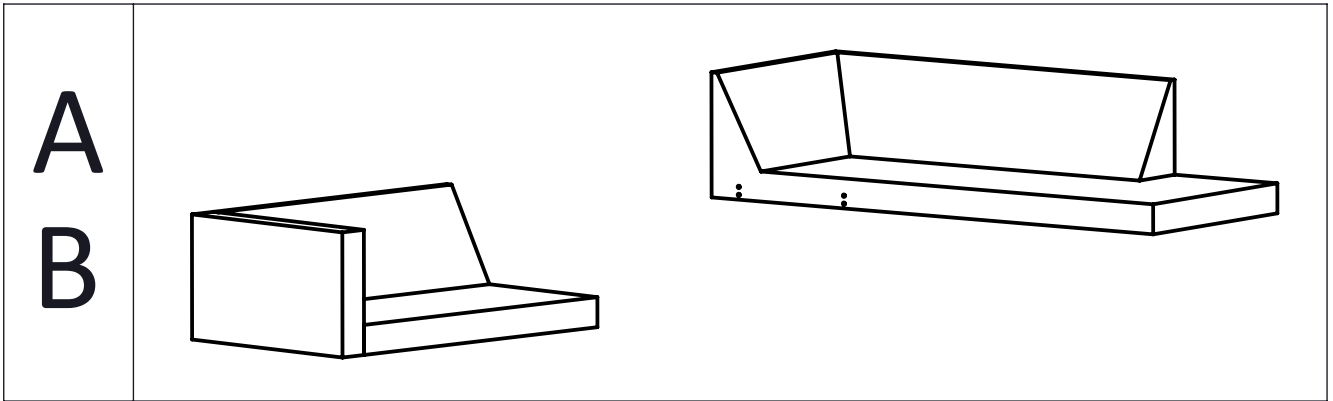
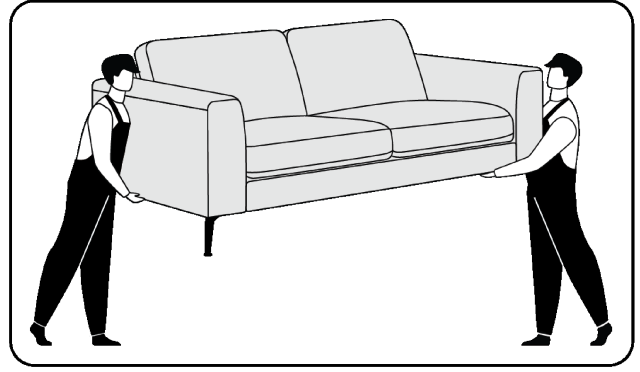


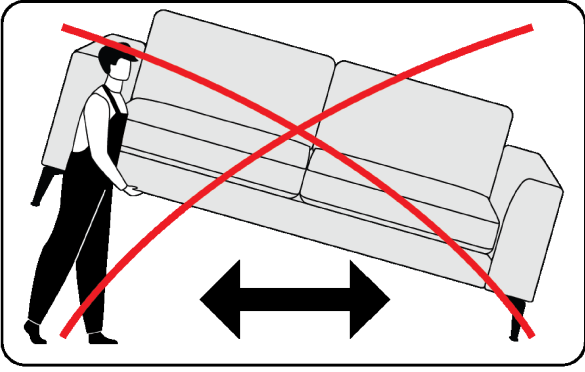









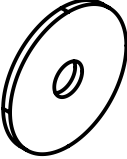










Kokkupanekujuhend Assembly instructions













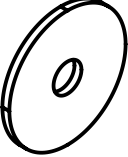


Nurgadiivan LUCAS PN pruun (77757)
Corner sofa LUCAS RC brown (77757)












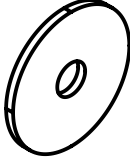


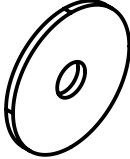

























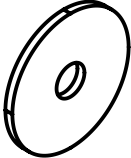


A	a x 7 	a1 x 3 	b x 7 	c x 7 	d x 2 	e x 4 M8x20 	f x 1 
	a2 x 4 	D50	d1 x 2 	e1 x 2 M8x30 	5mm		








C	a x 7 	a1 x 3 	b x 7 	c x 7 	d x 2 	e x 4 M8x20 	f x 1 
	a2 x 4 	D50	d1 x 2 	e1 x 2 M8x30 	5mm		
	g x 4 	h x 4 	i x 4 	j x 1 			
	M8x60	M8	M8	13mm			

E	a x 7 	a1 x 3 	a3 x 1 	b x 7 	c x 8 	d x 2 	e x 4 M8x20 
	a2 x 4 	EXTRA	D50	d1 x 2 	e1 x 2 M8x30 		
	f x 1 	g x 4 	h x 4 	i x 4 	j x 1 		
	5mm	M8x60	M8	M8	13mm		


B	a x 6 	a1 x 2 	b x 6 	c x 6 	d x 2 	e x 4 M8x20 	f x 1 
	a2 x 4 	D50	d1 x 2 	e1 x 2 M8x30 	5mm		

D	a x 6 	a1 x 2 	b x 6 	c x 6 	d x 2 	e x 4 M8x20 	f x 1 
	a2 x 4 	D50	d1 x 2 	e1 x 2 M8x30 	5mm		
	g x 4 	h x 4 	i x 4 	j x 1 			
	M8x60	M8	M8	13mm			



F	a x 6 	a1 x 2 	a3 x 1 	b x 6 	c x 7 	d x 2 	e x 4 M8x20 
	a2 x 4 	EXTRA	D50	d1 x 2 	e1 x 2 M8x30 		
	f x 1 	g x 4 	h x 4 	i x 4 	j x 1 		
	5mm	M8x60	M8	M8	13mm		

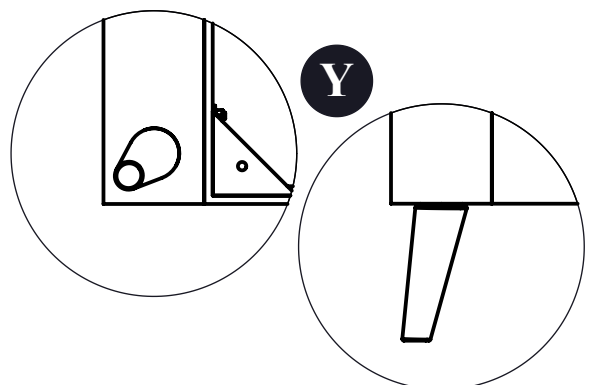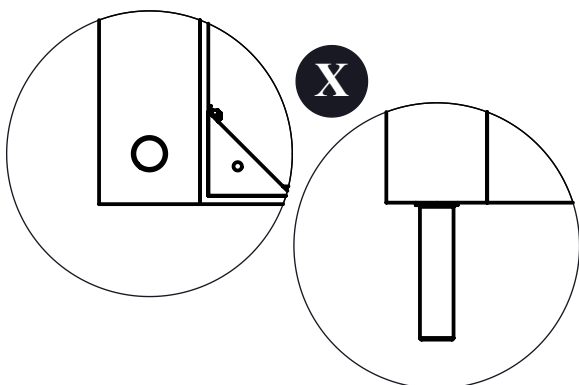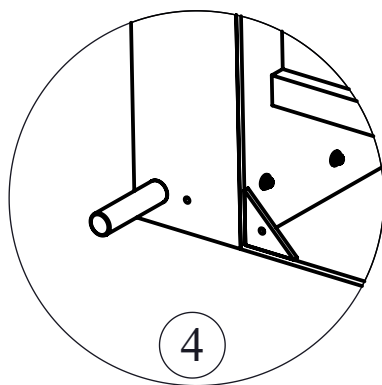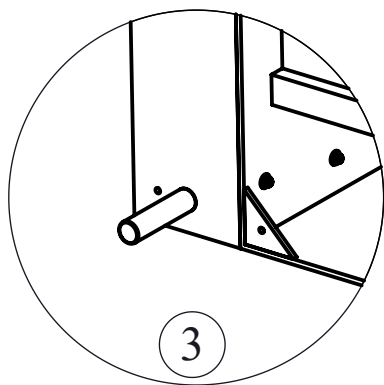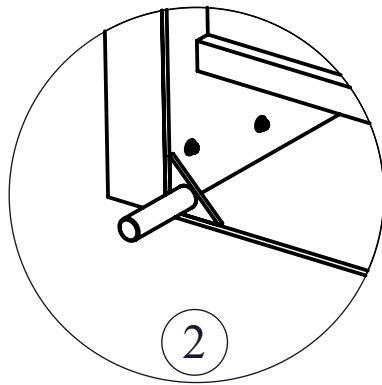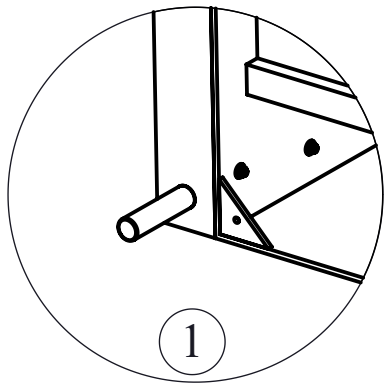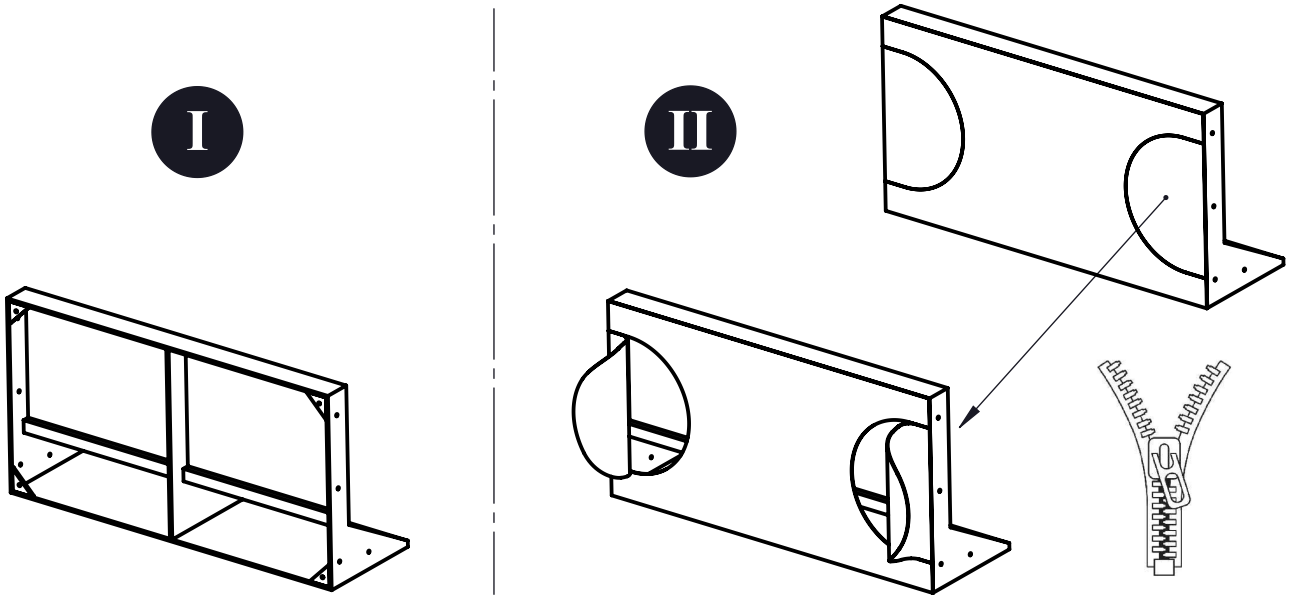






A
B

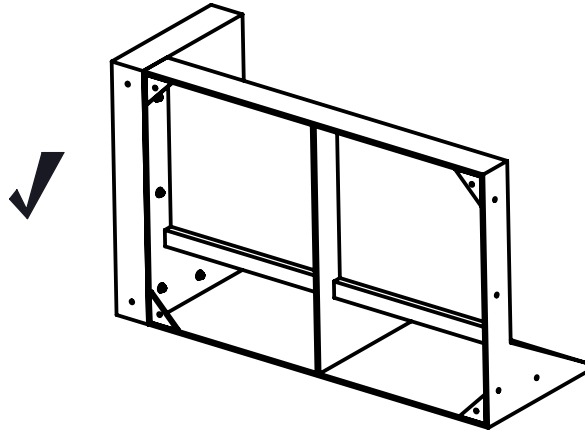








C
D
E
F

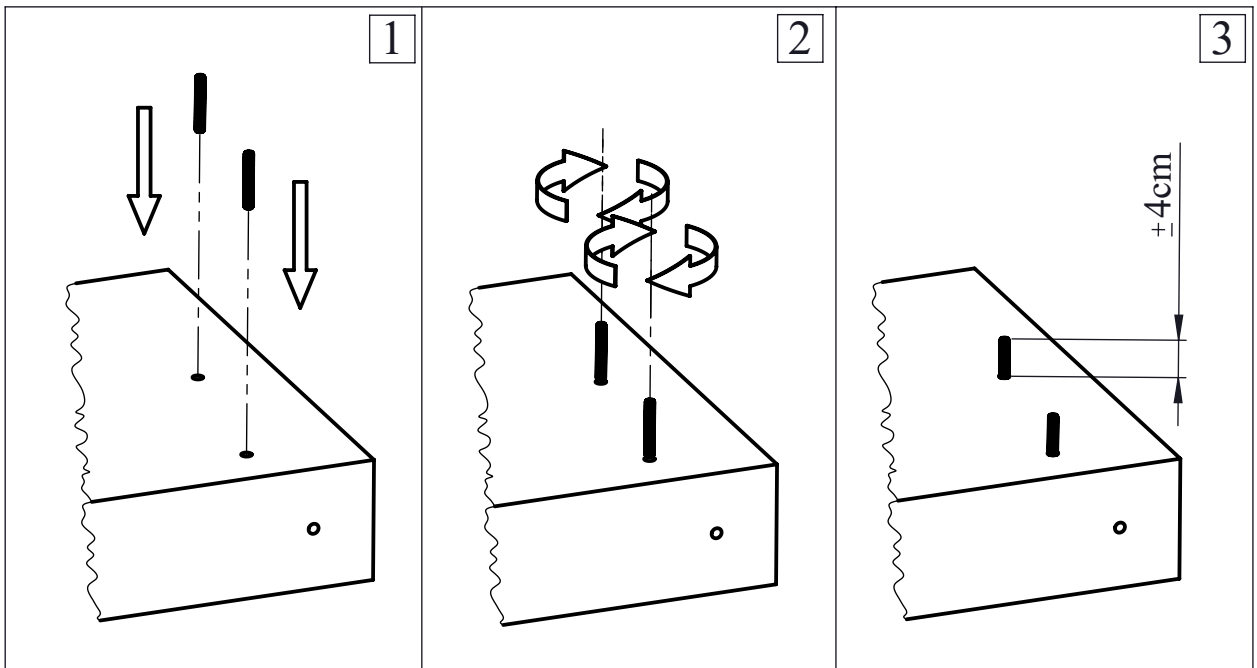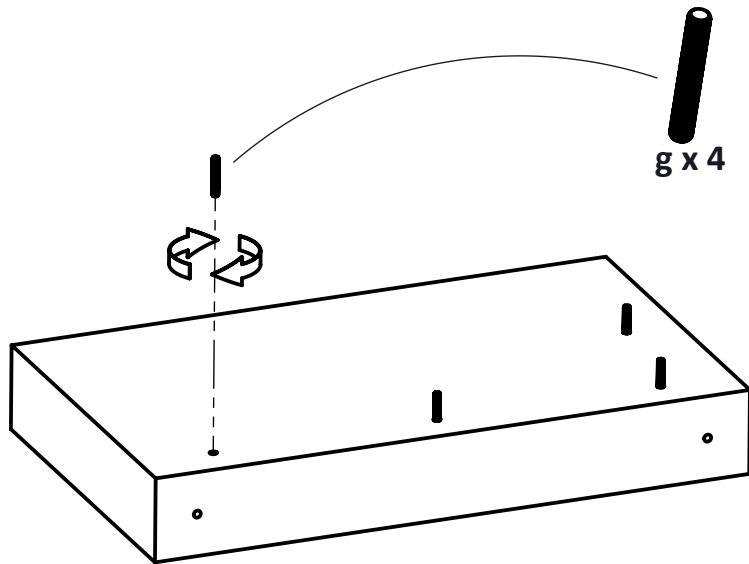


C
D
E
F

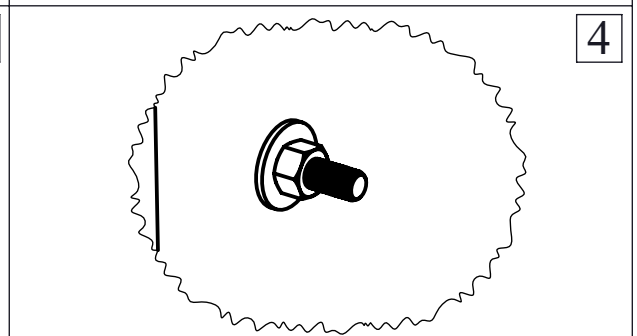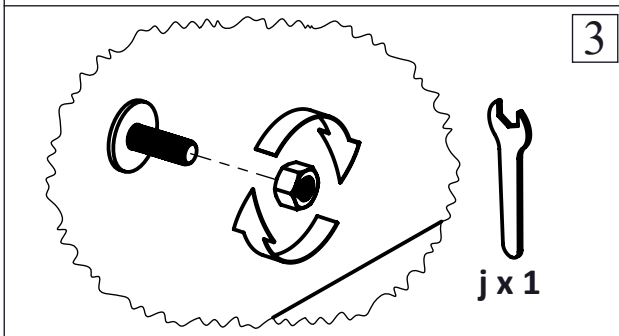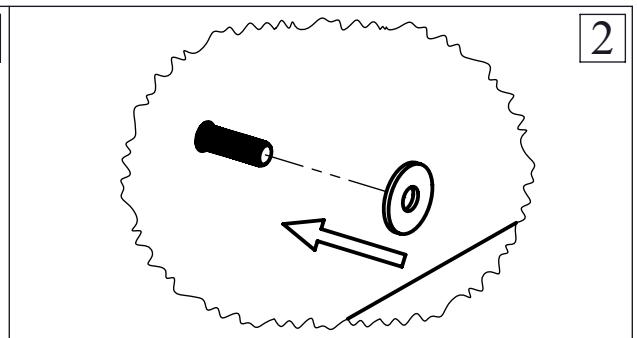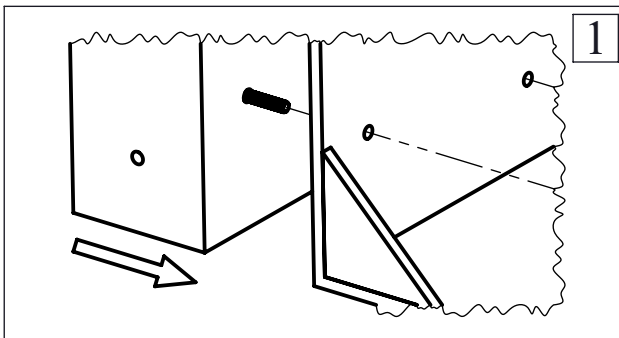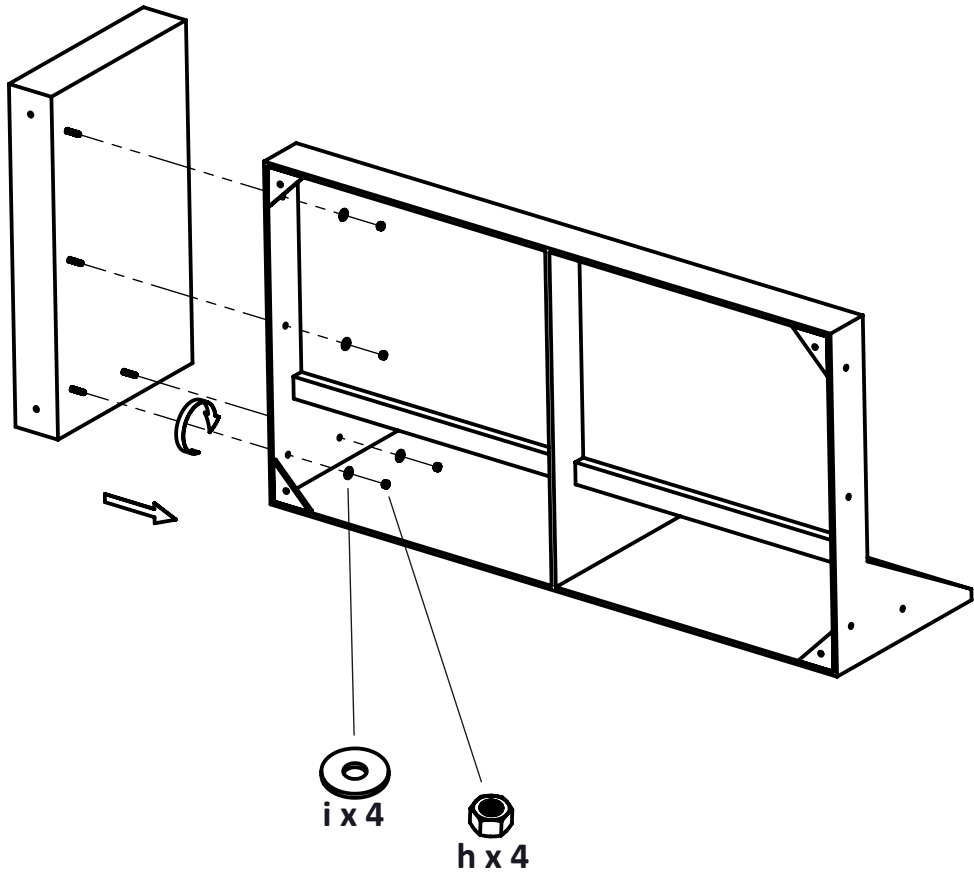


A
B
C
D
E
F

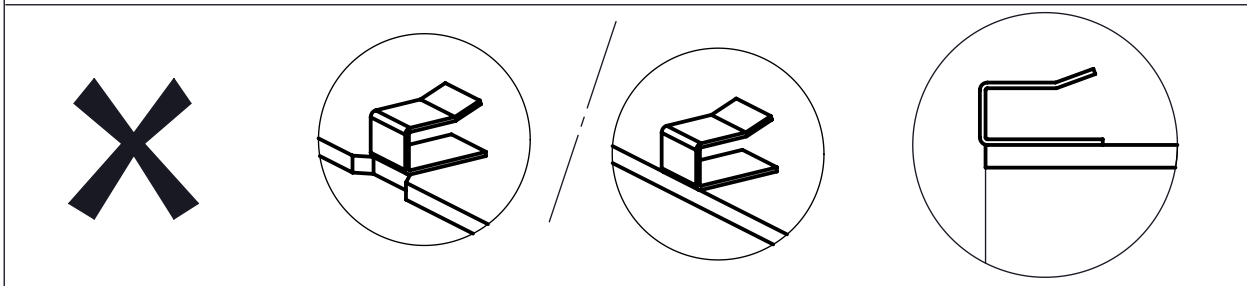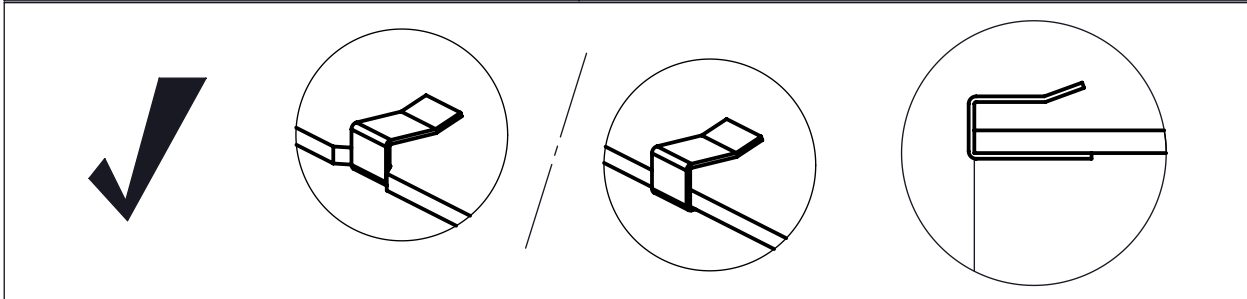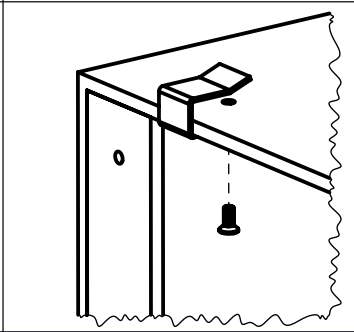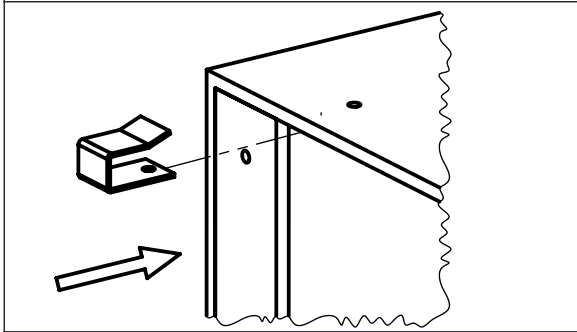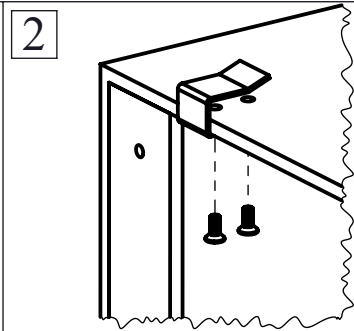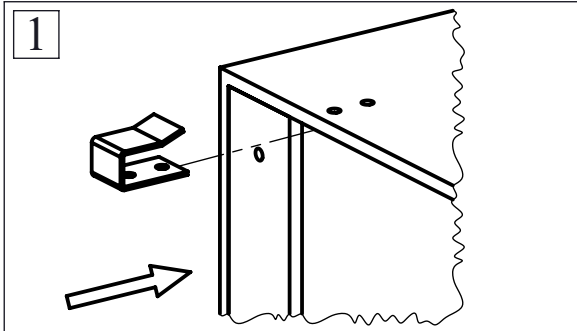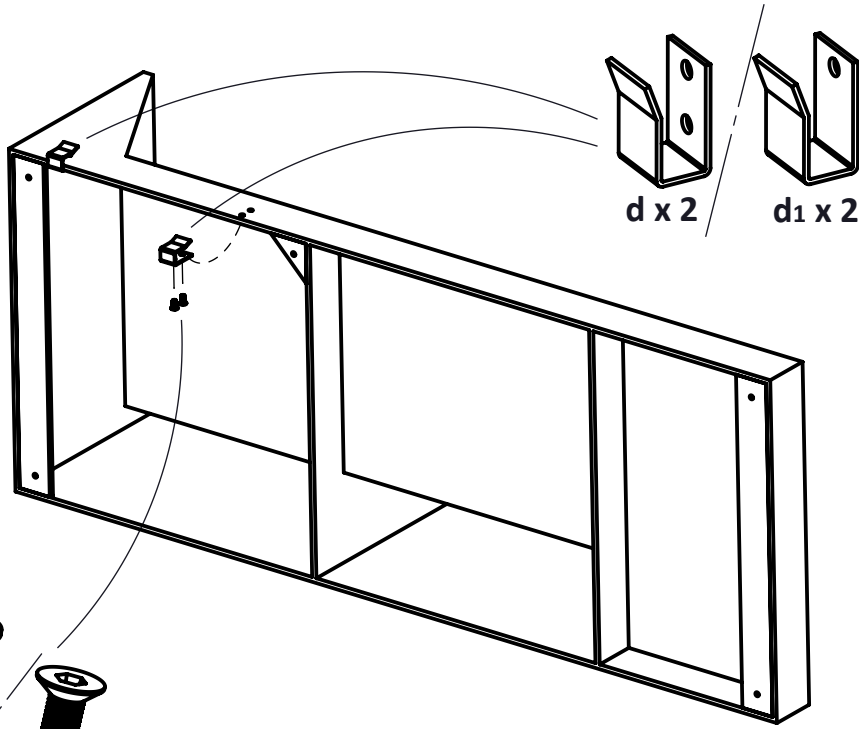


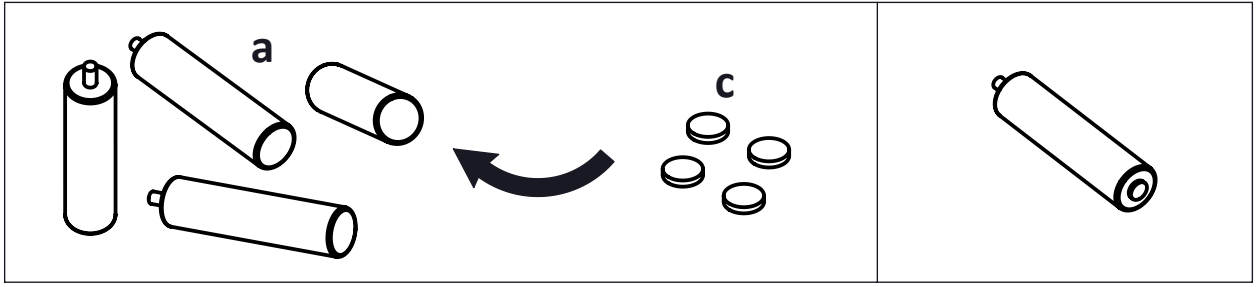


A
C
E

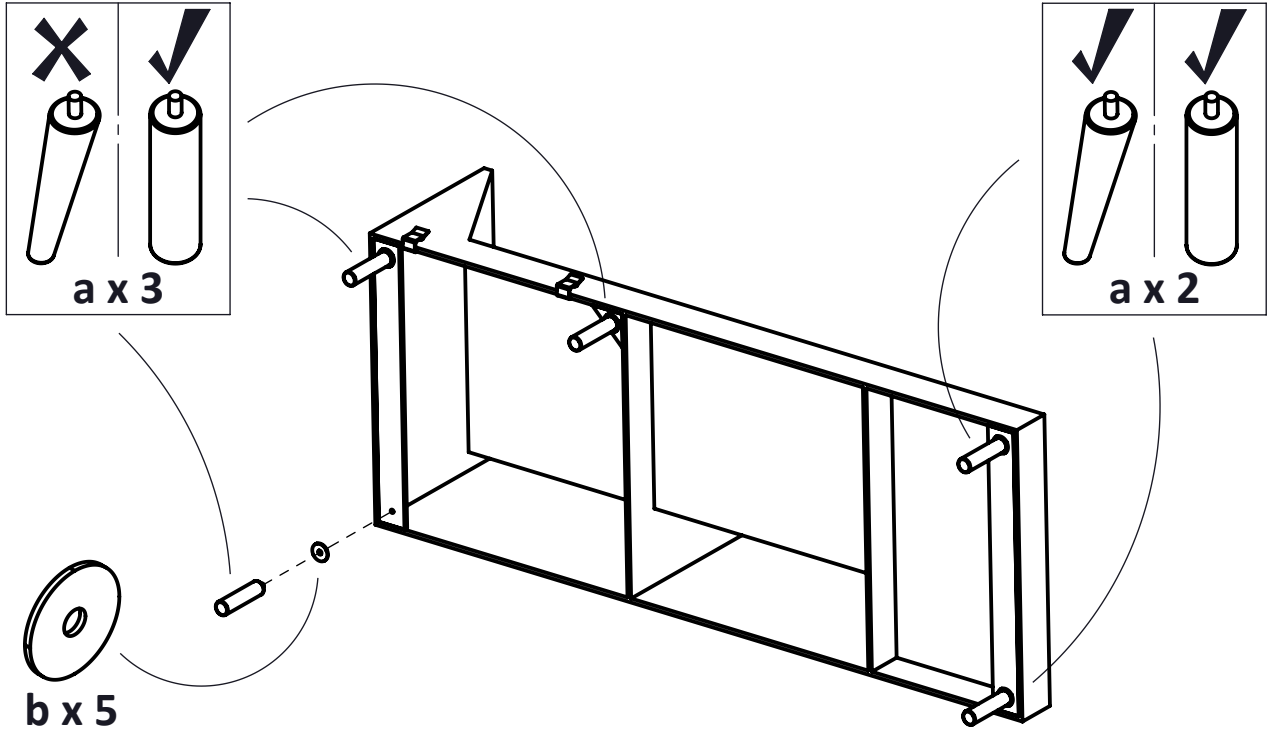


B
D
F

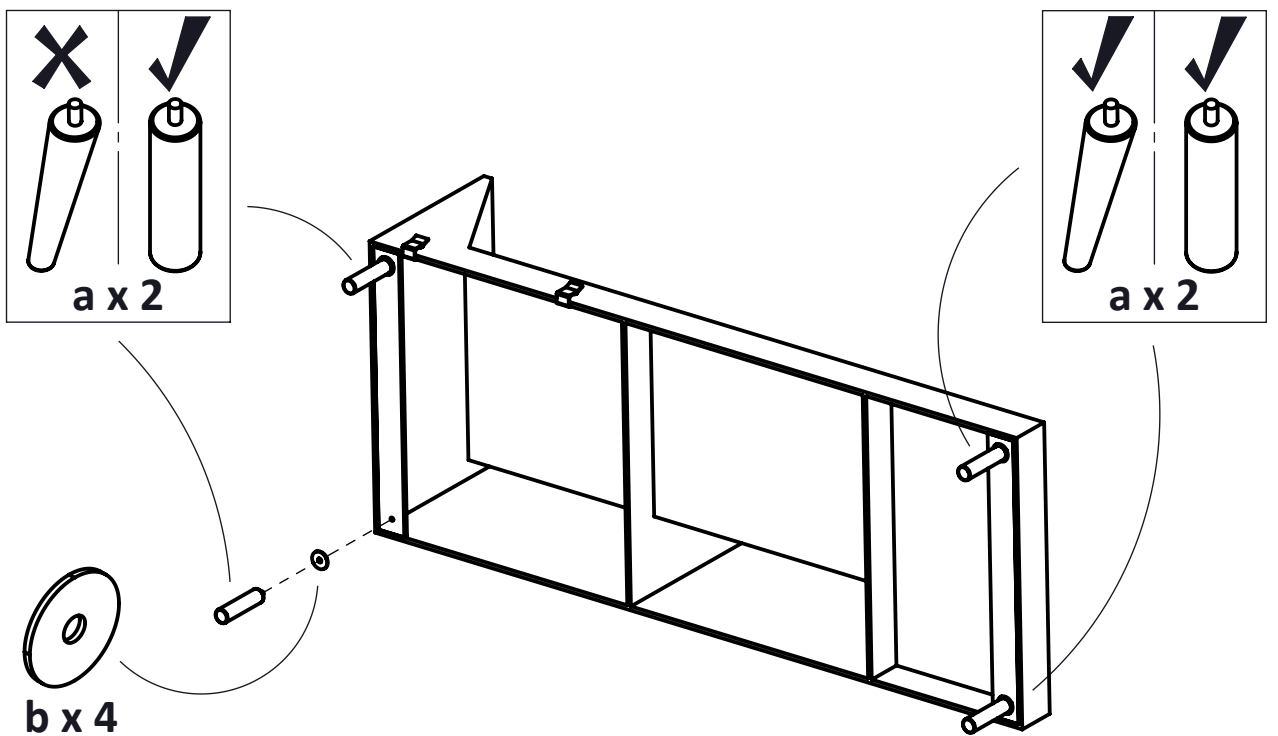



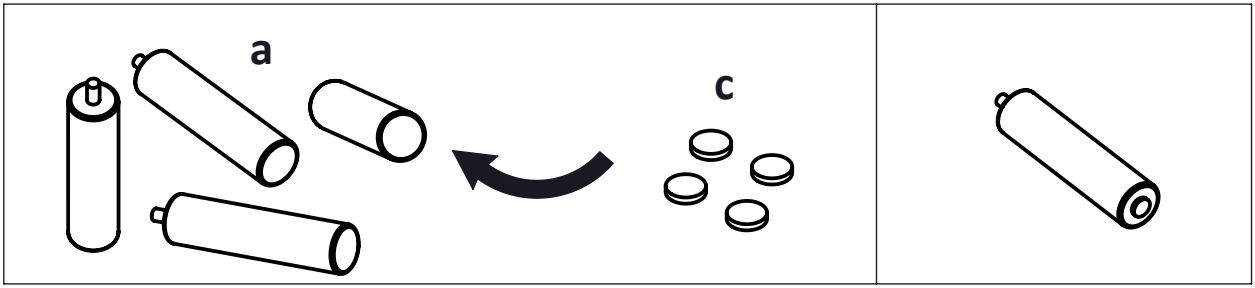


A
B
C
D

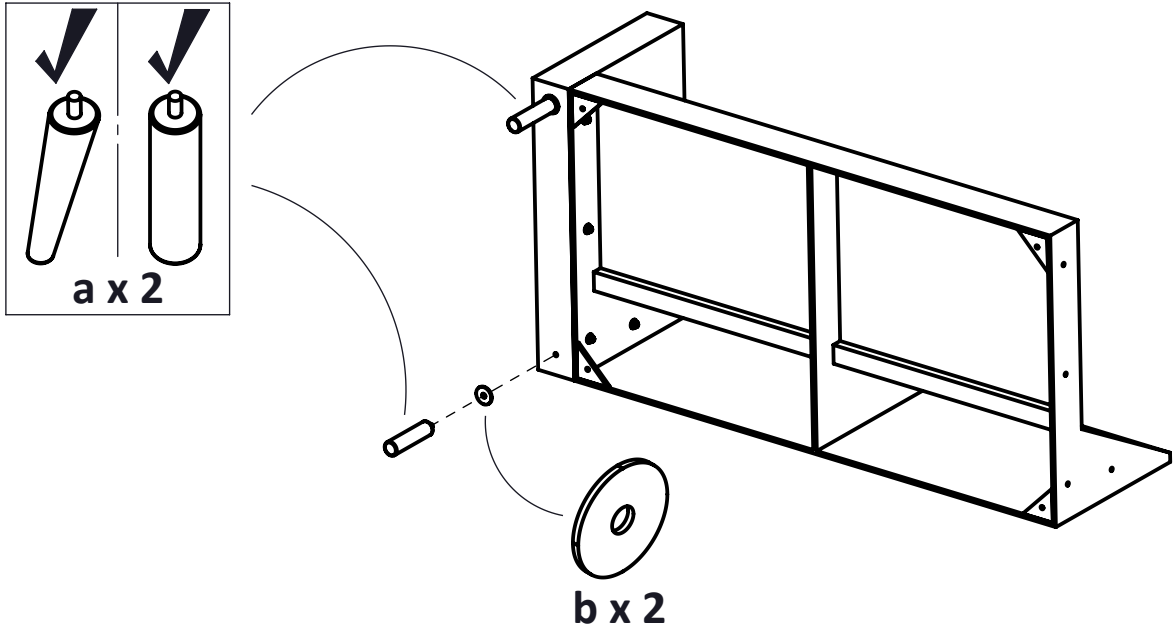


E
F

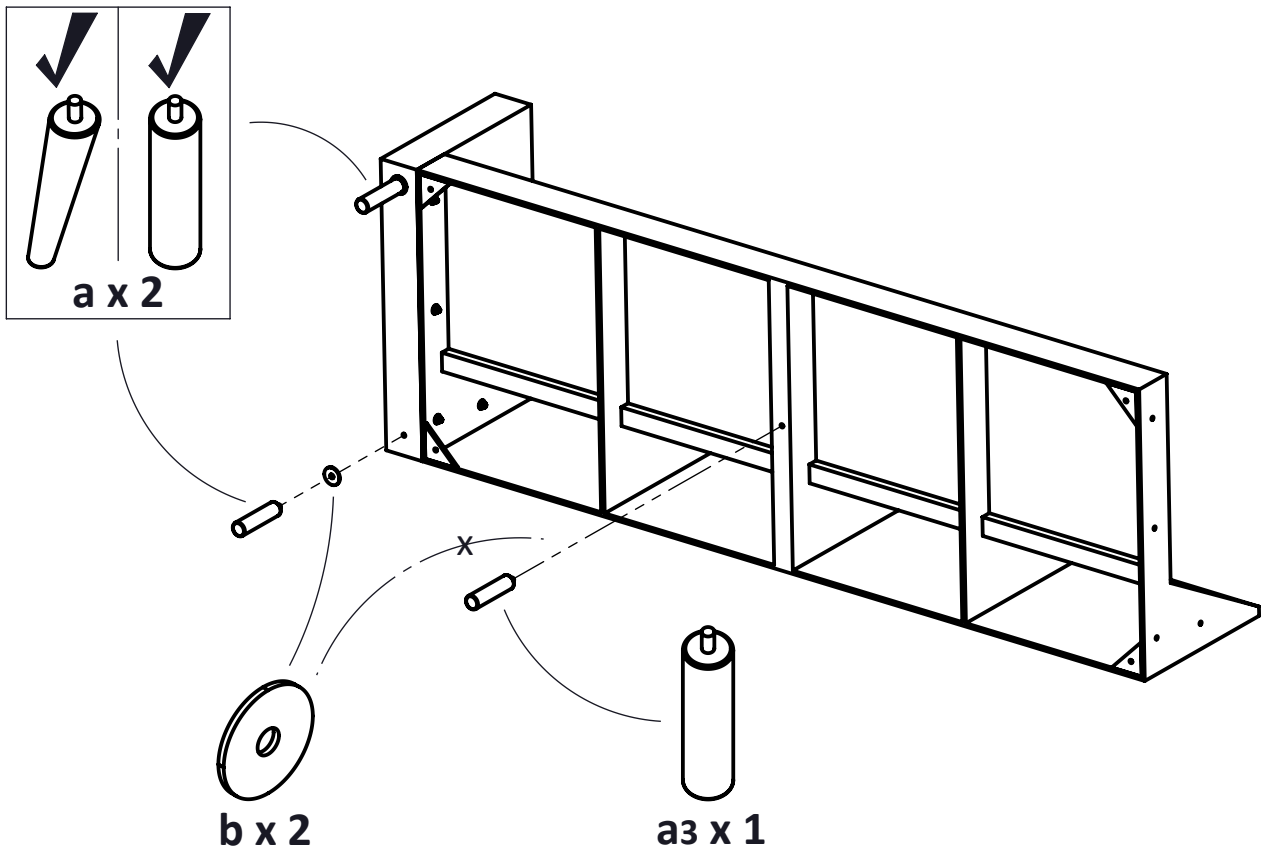


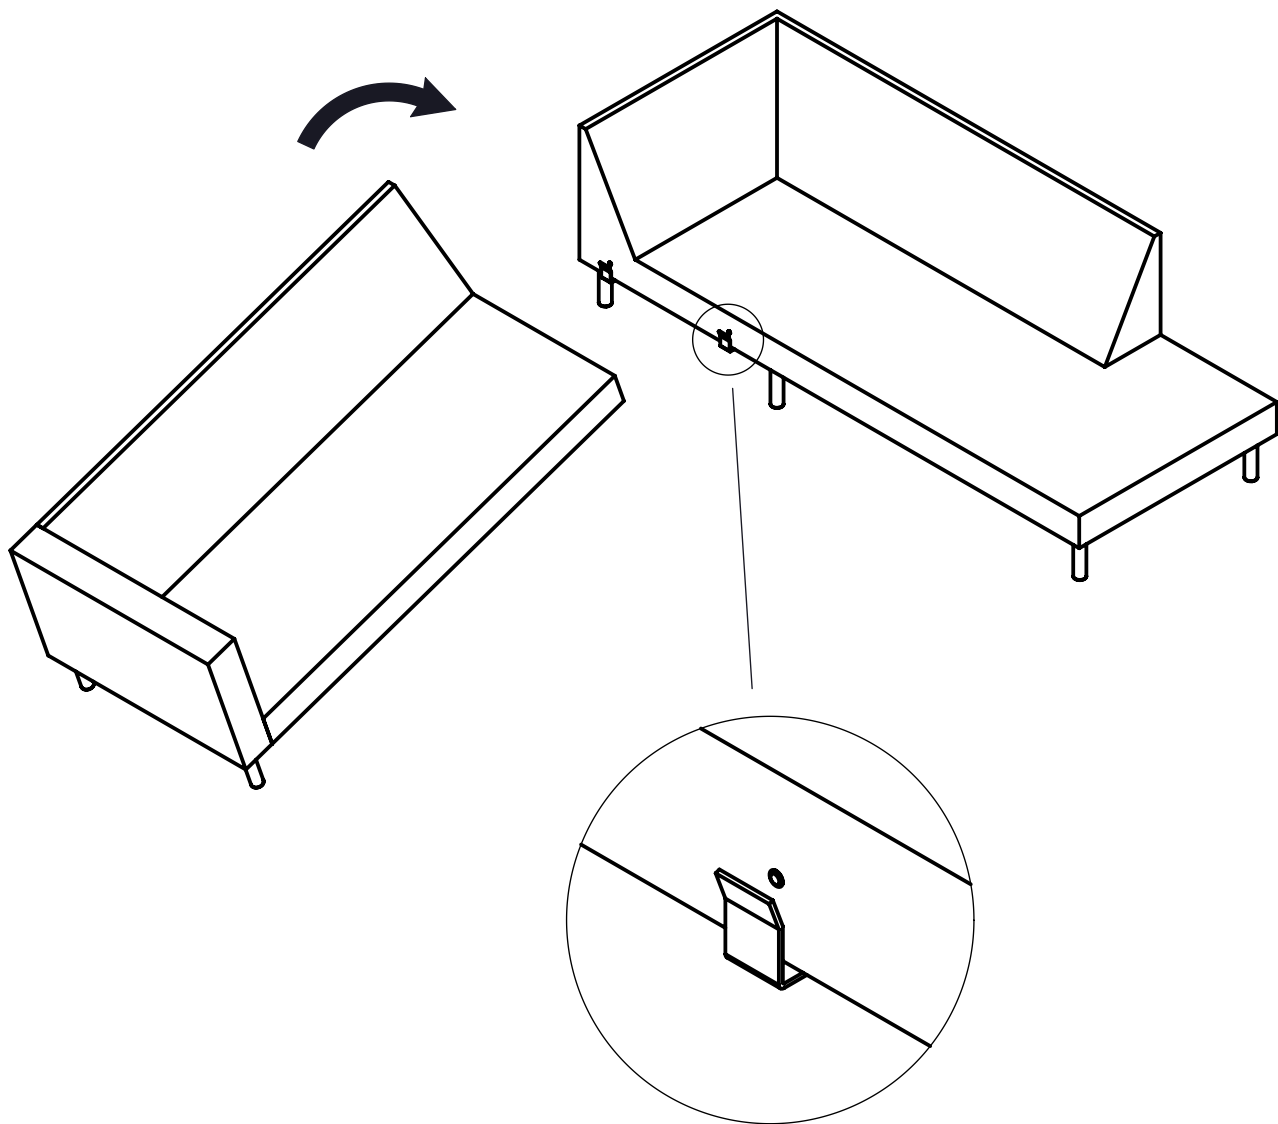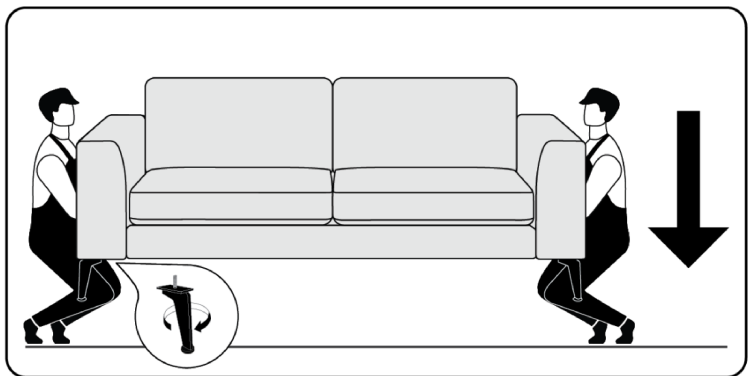


V1

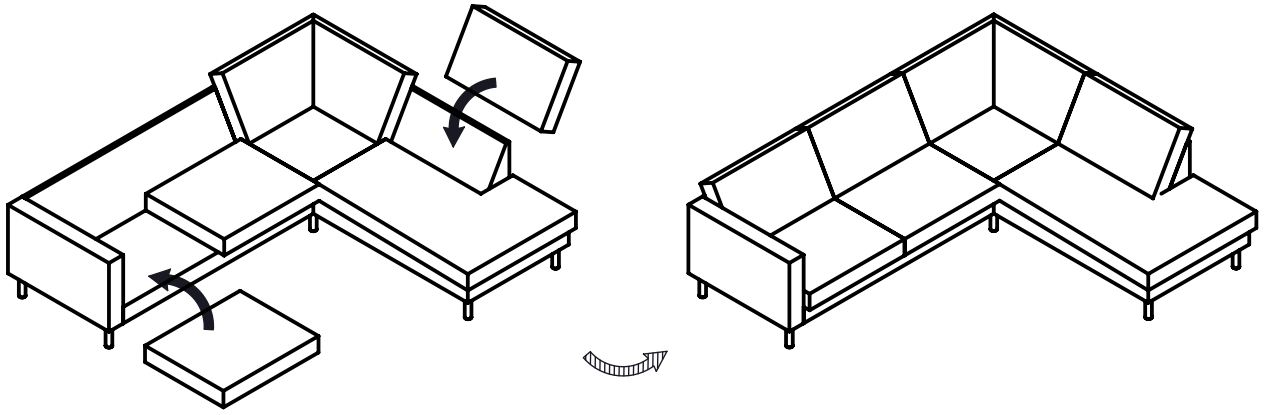

V2

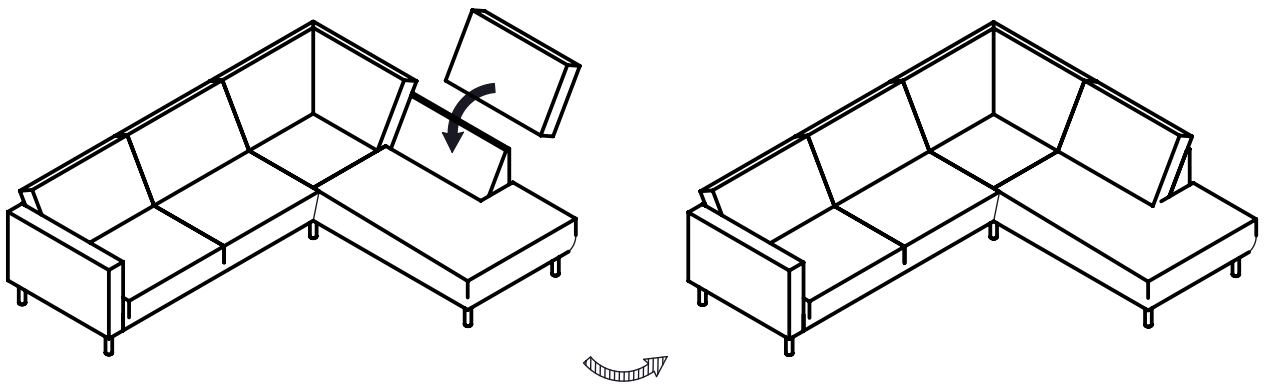

V3

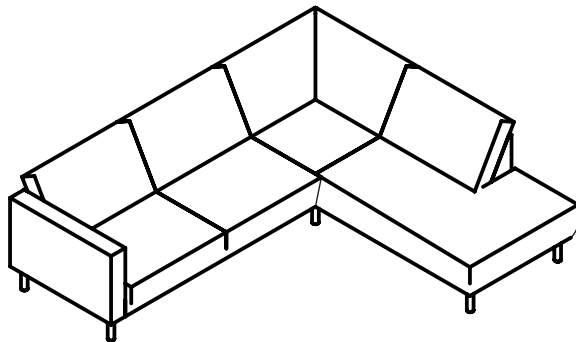

V4

