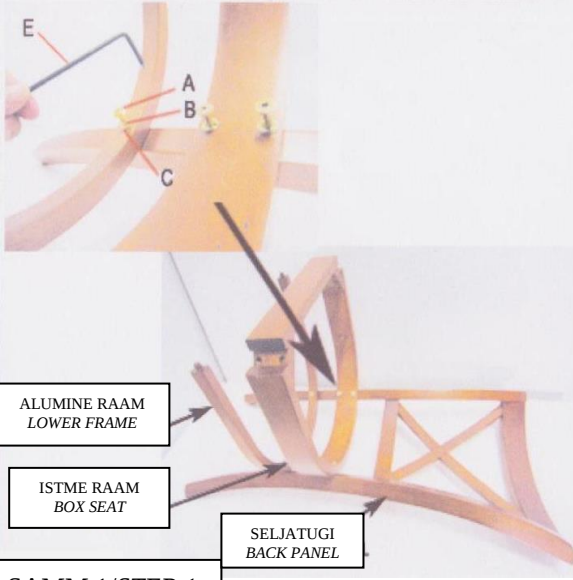
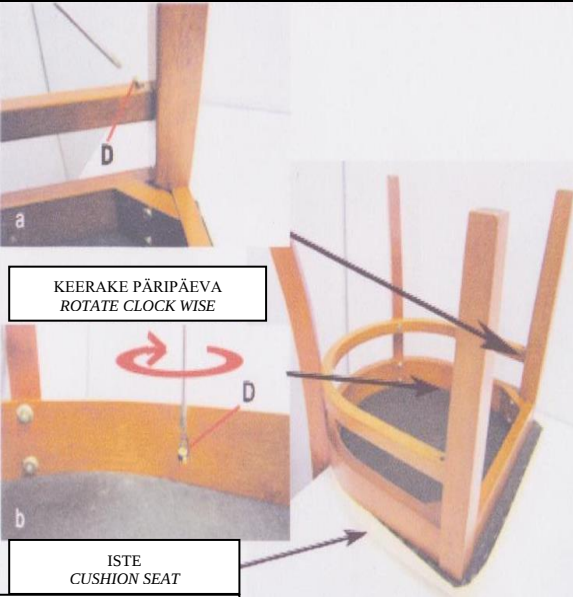


TOOL MIX & MATCH / CHAIR MIX & MATCH 20829, 20818

HOME
4 YOU

NR NO	DETAIL ITEM	NIMETUS DESCRIPTION	KOGUS QTY
A		M6x45mm JCBC KRUVI M6x45mm JCBC SCREW	10
B		VEDRUSEIB SPRING WASHER	10
C		SEIB WASHER	10
D		M4x32mm KRUVI M4x32mm SCREW	6
E		M4 6-KANTVÕTI M4 ALLEN KEY	1

 SELJATUGI 1TK BACK PANEL 1PC	 ESIMENE JALG 2TK FRONT LEG 2PCS	 ALUMINE RAAM LOWER FRAME ISTME RAAM BOX SEAT SELJATUGI BACK PANEL SAMM 1/STEP 1	 ESIMENE JALG FRONT LEG SAMM 2/STEP 2
	 ALUMINE RAAM 1TK LOWER FRAME 1PC	 KEERAKE PÄRIPÄEVA ROTATE CLOCK WISE ISTE CUSHION SEAT SAMM 3/STEP 3	

TOOL MIX & MATCH / CHAIR MIX & MATCH 20829, 20818

SAMM 1

Kinnitage istmeraam ja alumine raam seljatoe külge. Kasutage kinnitamiseks M6x45mm kruvisid, vedruseibe ja seibe (x6).

SAMM 2

Kinnitage esimesd jalad istmeraami külge. Kasutage kinnitamiseks M6x45mm kruvisid, vedruseibe ja seibe (x4).

SAMM 3

Kinnitage alumine raam esimeste jalgade külge. Kasutage M4x32mm kruvisid (x2).

Asetage iste tagurpidi laua peale ja paigaldage eelnevalt kokkupandud tooliraam istme peale. Kinnitage iste tooliraami külge M4x32mm kruvidega (x4).

M4x32mm kruvide keeramiseks on tarvis kruvikeerajat. **Kruvikeeraja ei kuulu komplekti.**

STEP 1

Screw on the box seat and lower frame to back panel with M6x45mm screw, spring washer, and washer (x6).

STEP 2

Following by tightening the front leg with an M6x45mm screw, spring washer, and washer (x4).

STEP 3

Screw on the lower frame with an M4x32mm screw (x2).

Put the cushion seat onto the table then turn around the chair and screw on with an M4x32mm screw to the cushion seat (x4).

*Screwdriver required. **A screwdriver is not included.***