



Kokkupanekujuhend Assembly instructions

Voodi LENE 160x200cm (77724)
Bed LENE 160x200cm (77724)

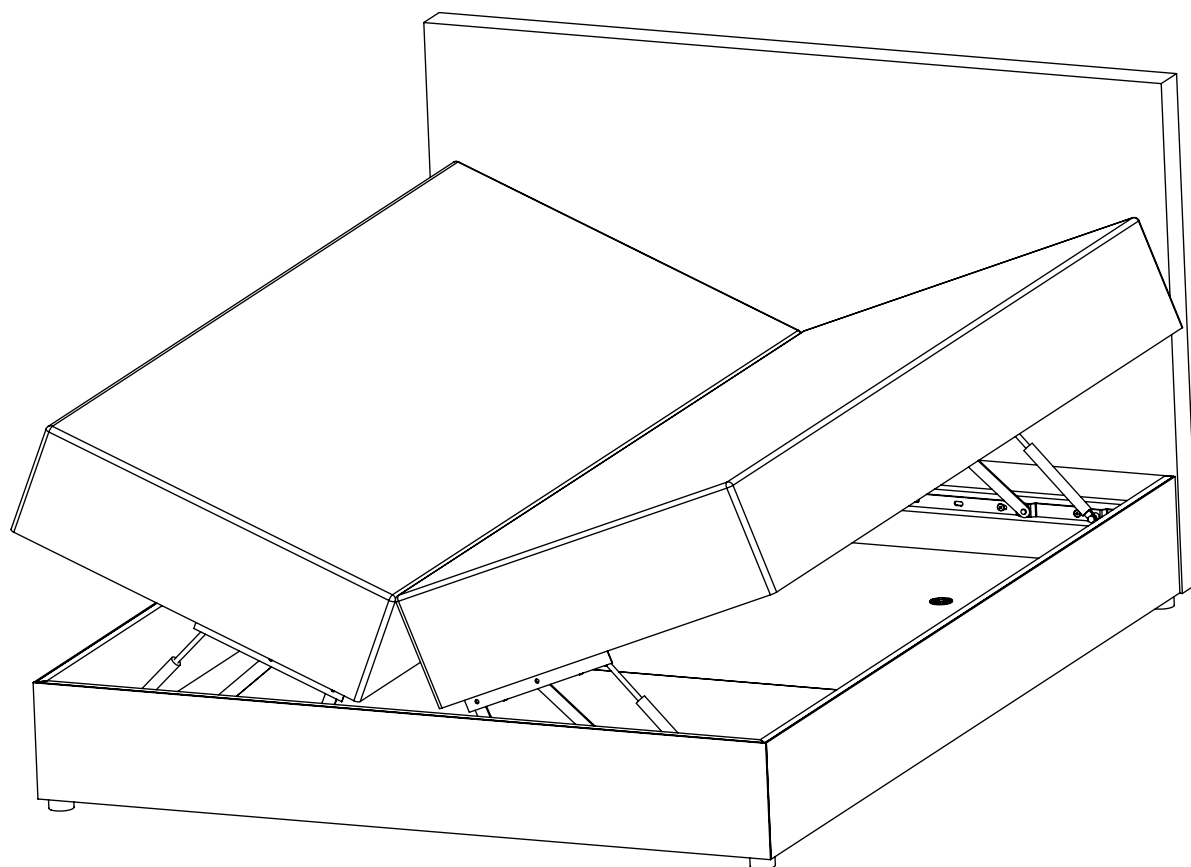







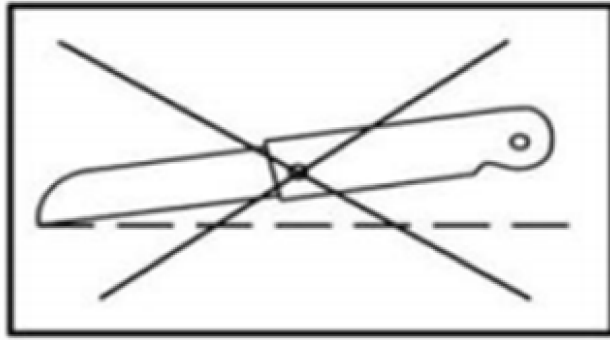


195 cm





72h

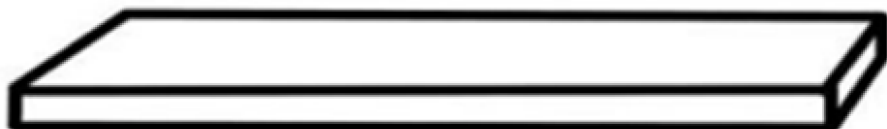


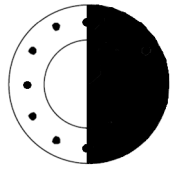
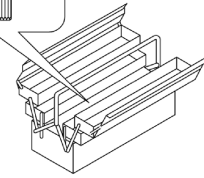
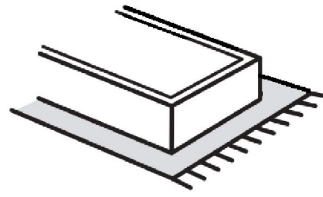


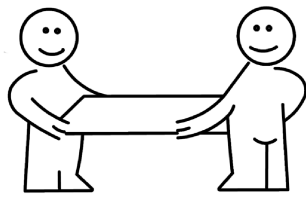




60 min




A x 6	B x 4	C x 2	D x 2	E x 1
F x 4	G x 4	H x 16	I x 8	J x 24
K x 1	L x 9	M x 4	N x 2	O x 1
P x 2	R x 10	S x 4	T x 8	U x 8
V x 15	Z x 3	W x 8		

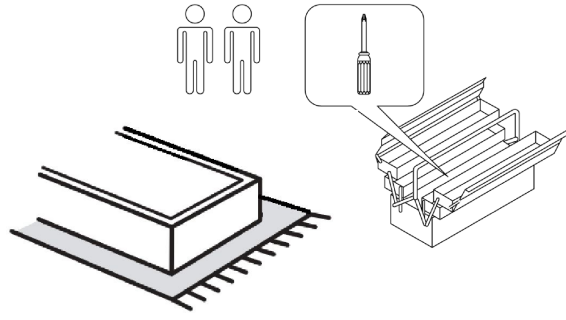
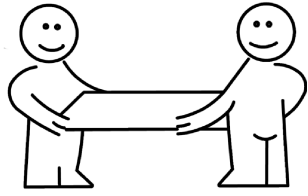



60 min

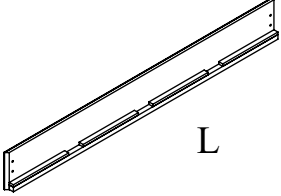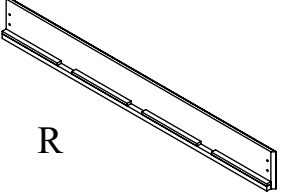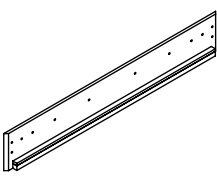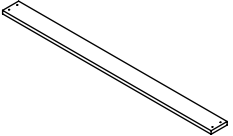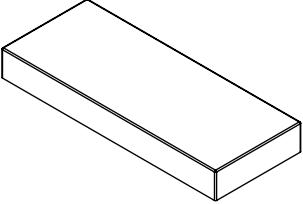
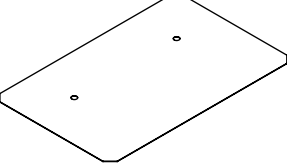
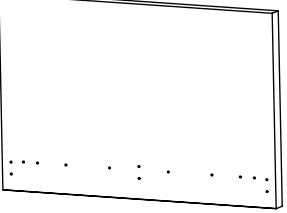
 <p>L</p>	 <p>R</p>	 <p>3 x 1 (C1)</p>	 <p>4 x 3 (C1)</p>
<p>1 x 1 (C1)</p>	<p>2 x 1 (C1)</p>		
 <p>5 x 2 (C2/C3)</p>	 <p>6 x 2 (C4)</p>	 <p>7 x 1 (C4)</p>	

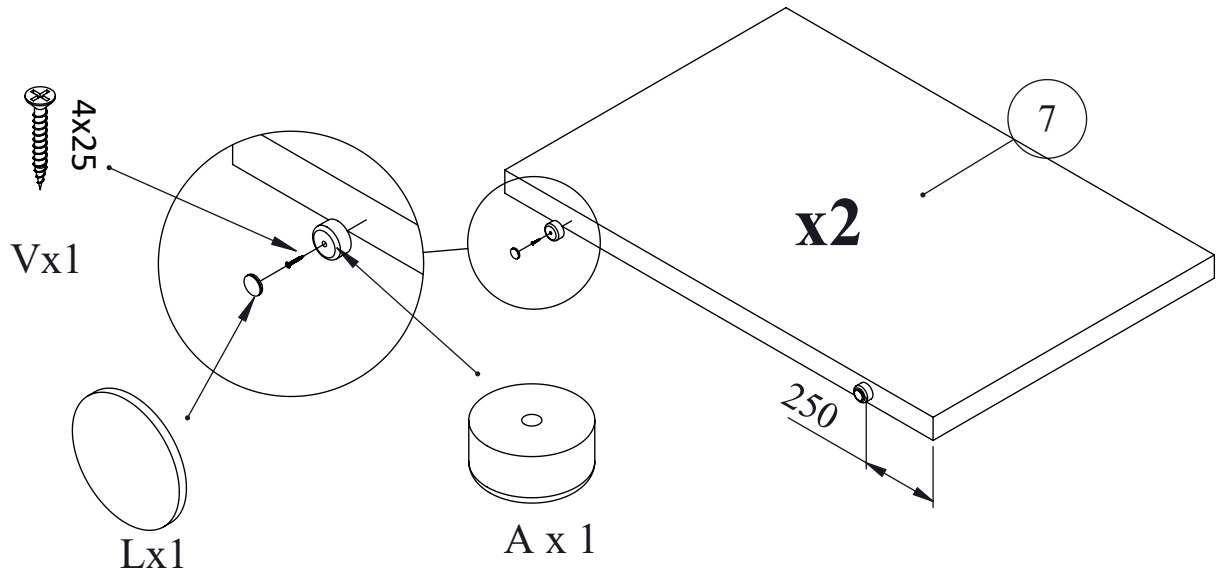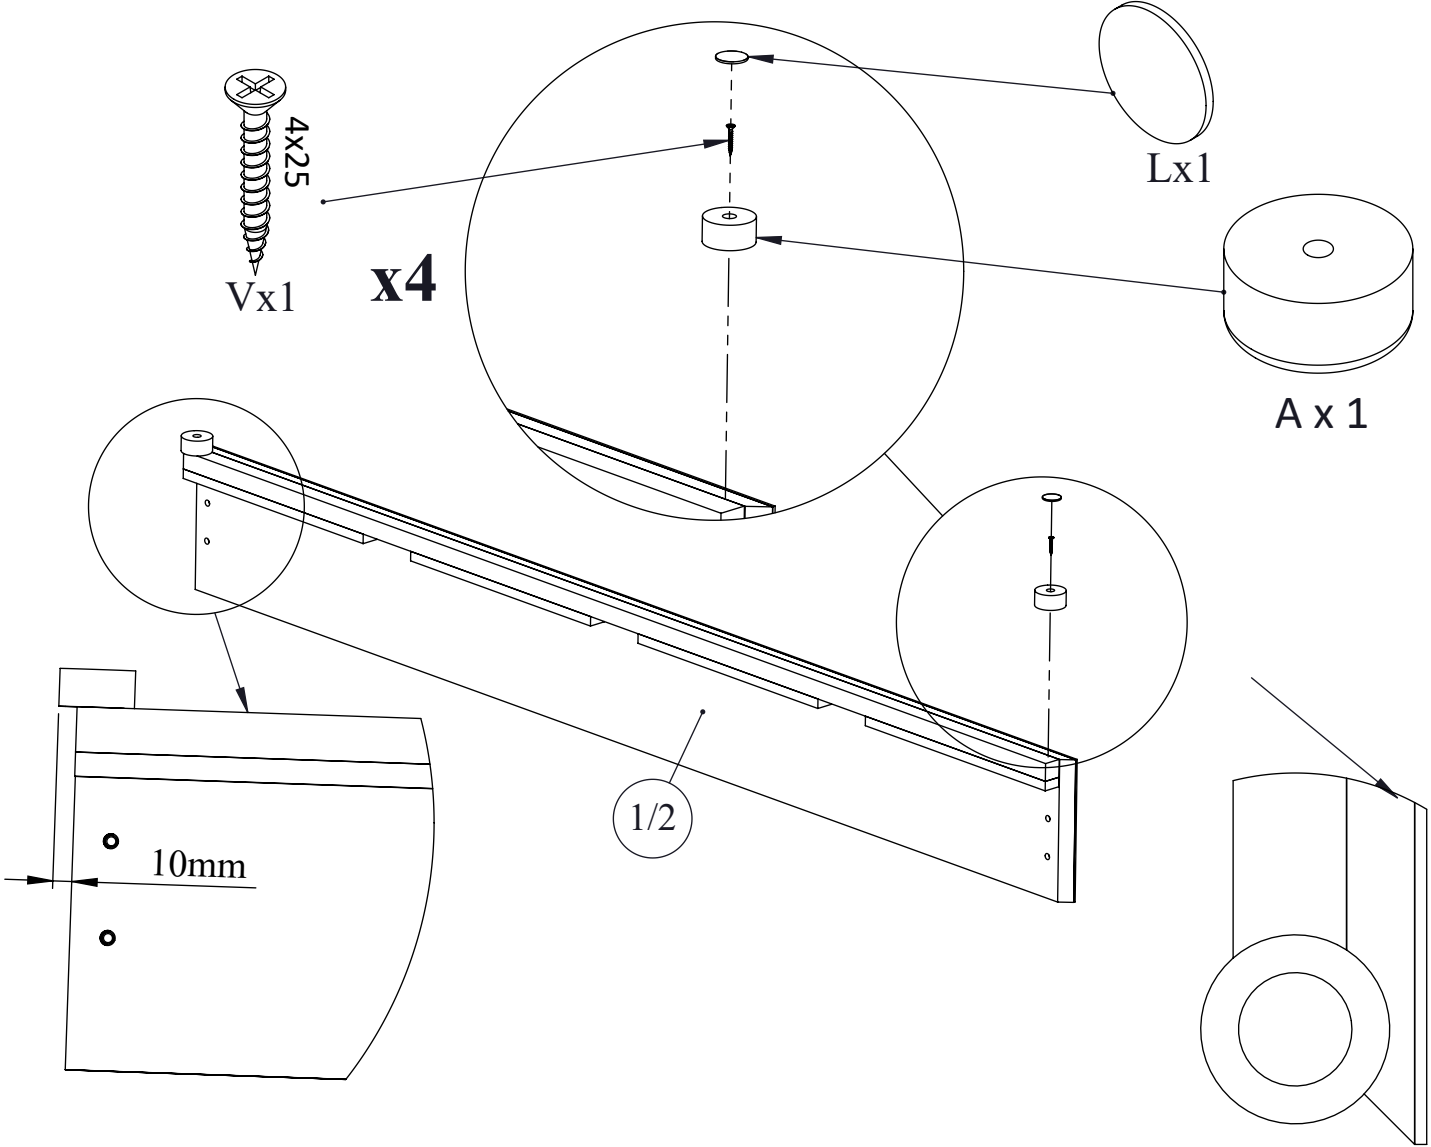

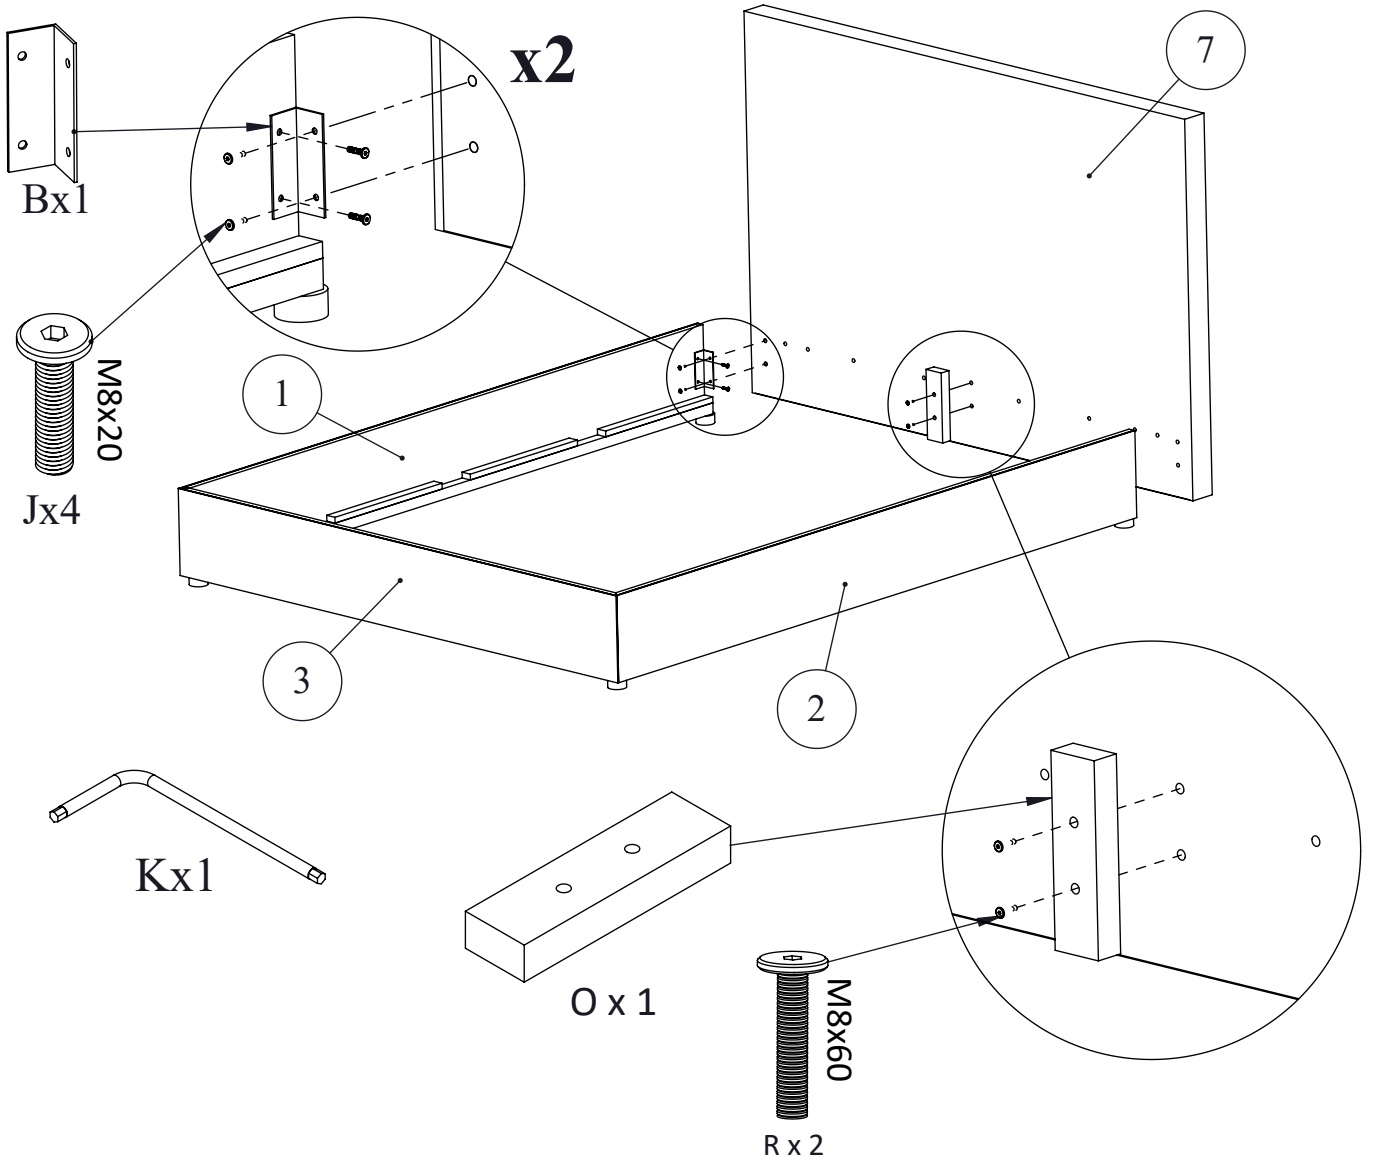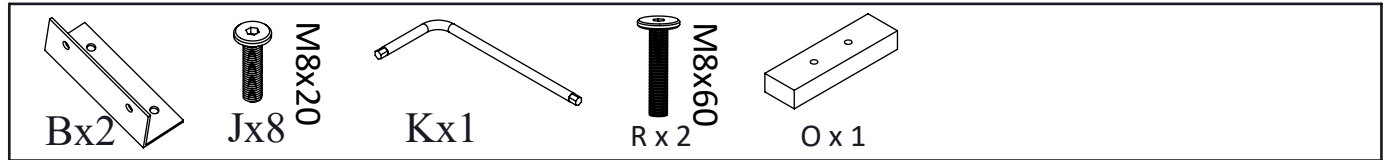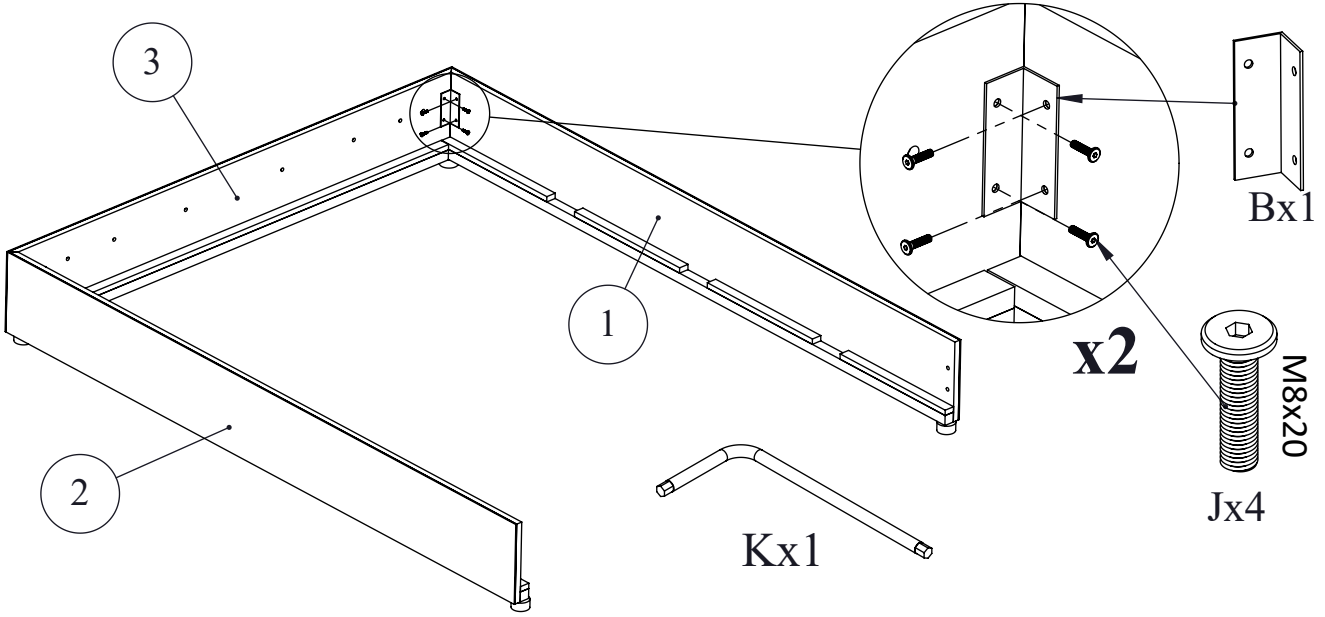

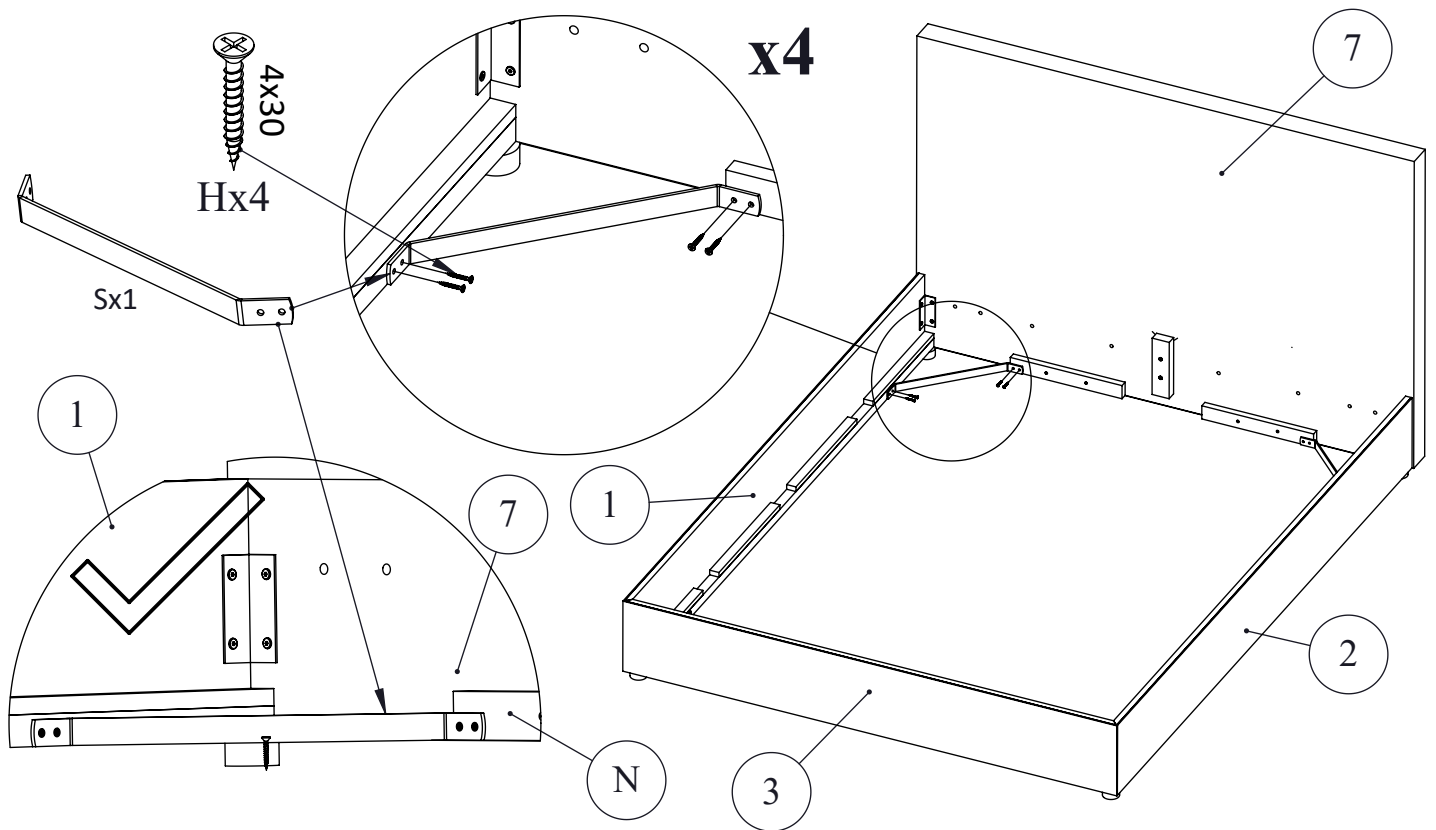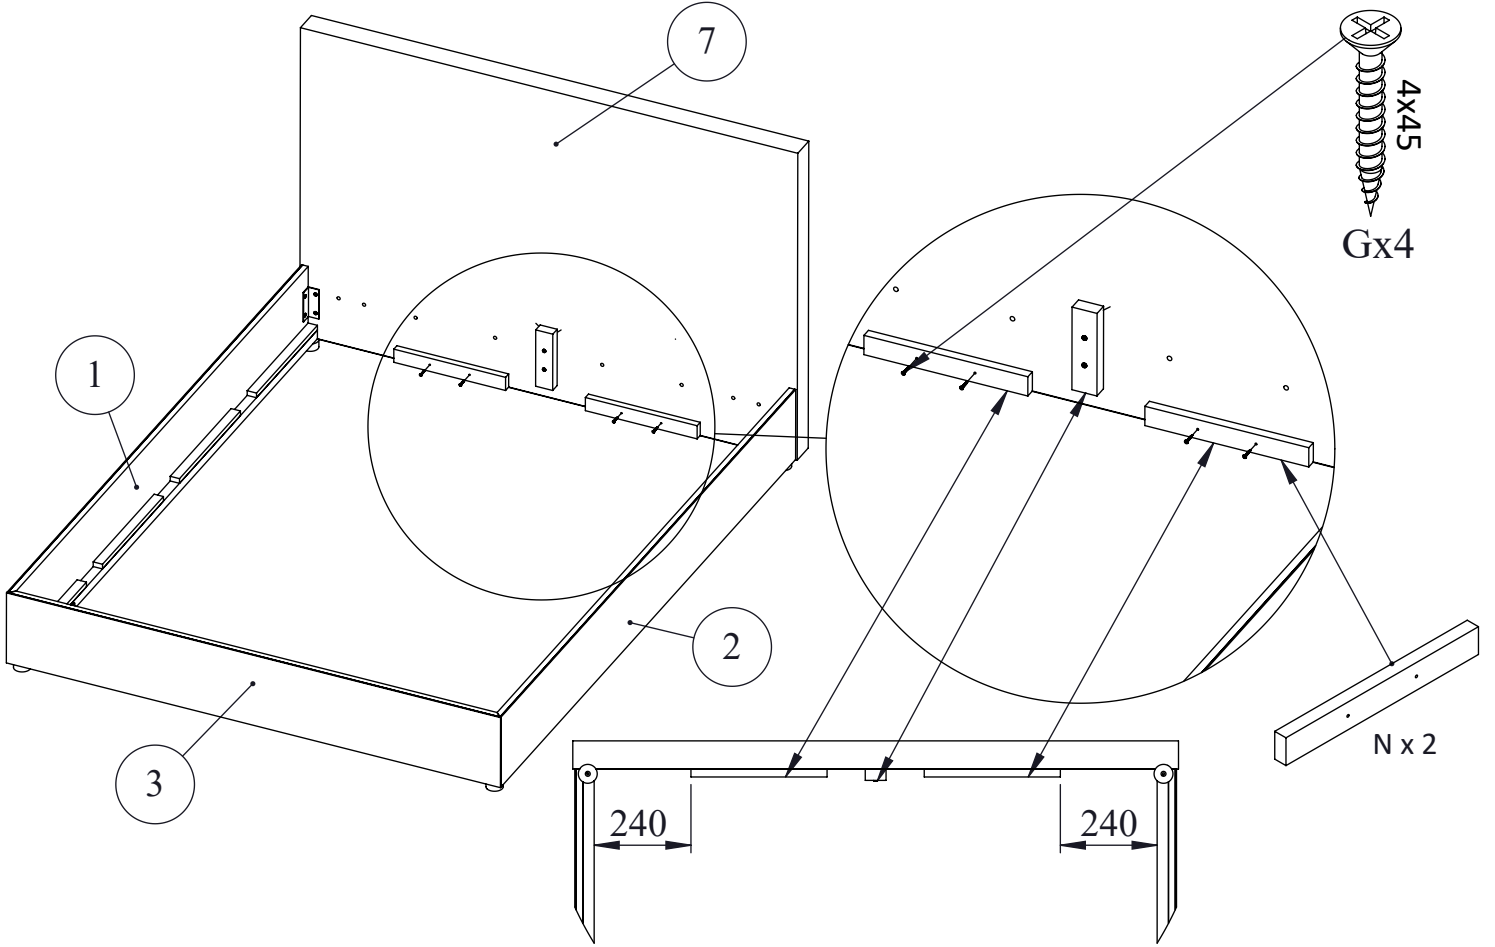


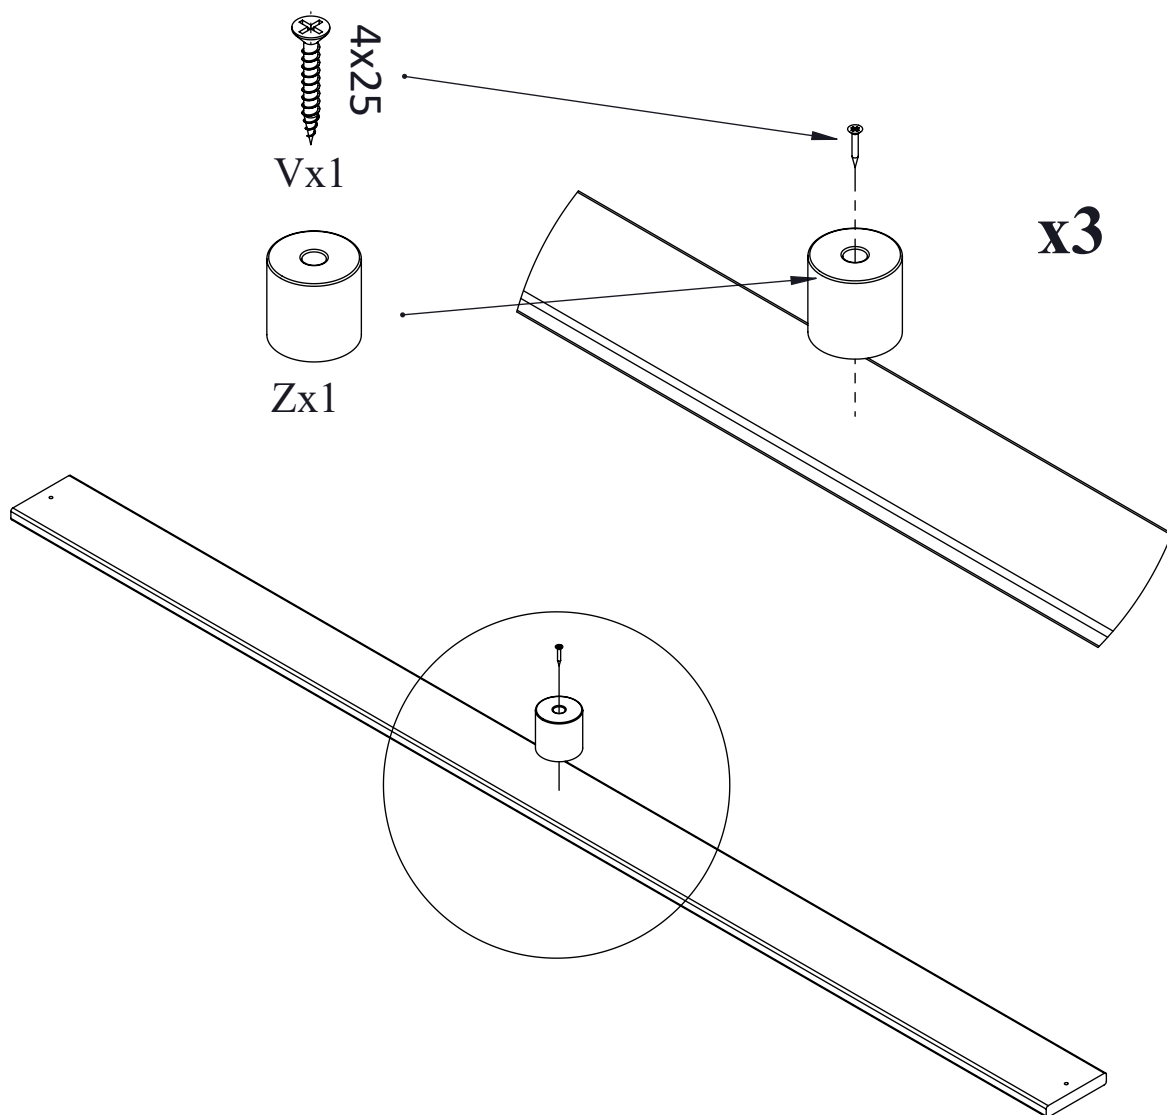

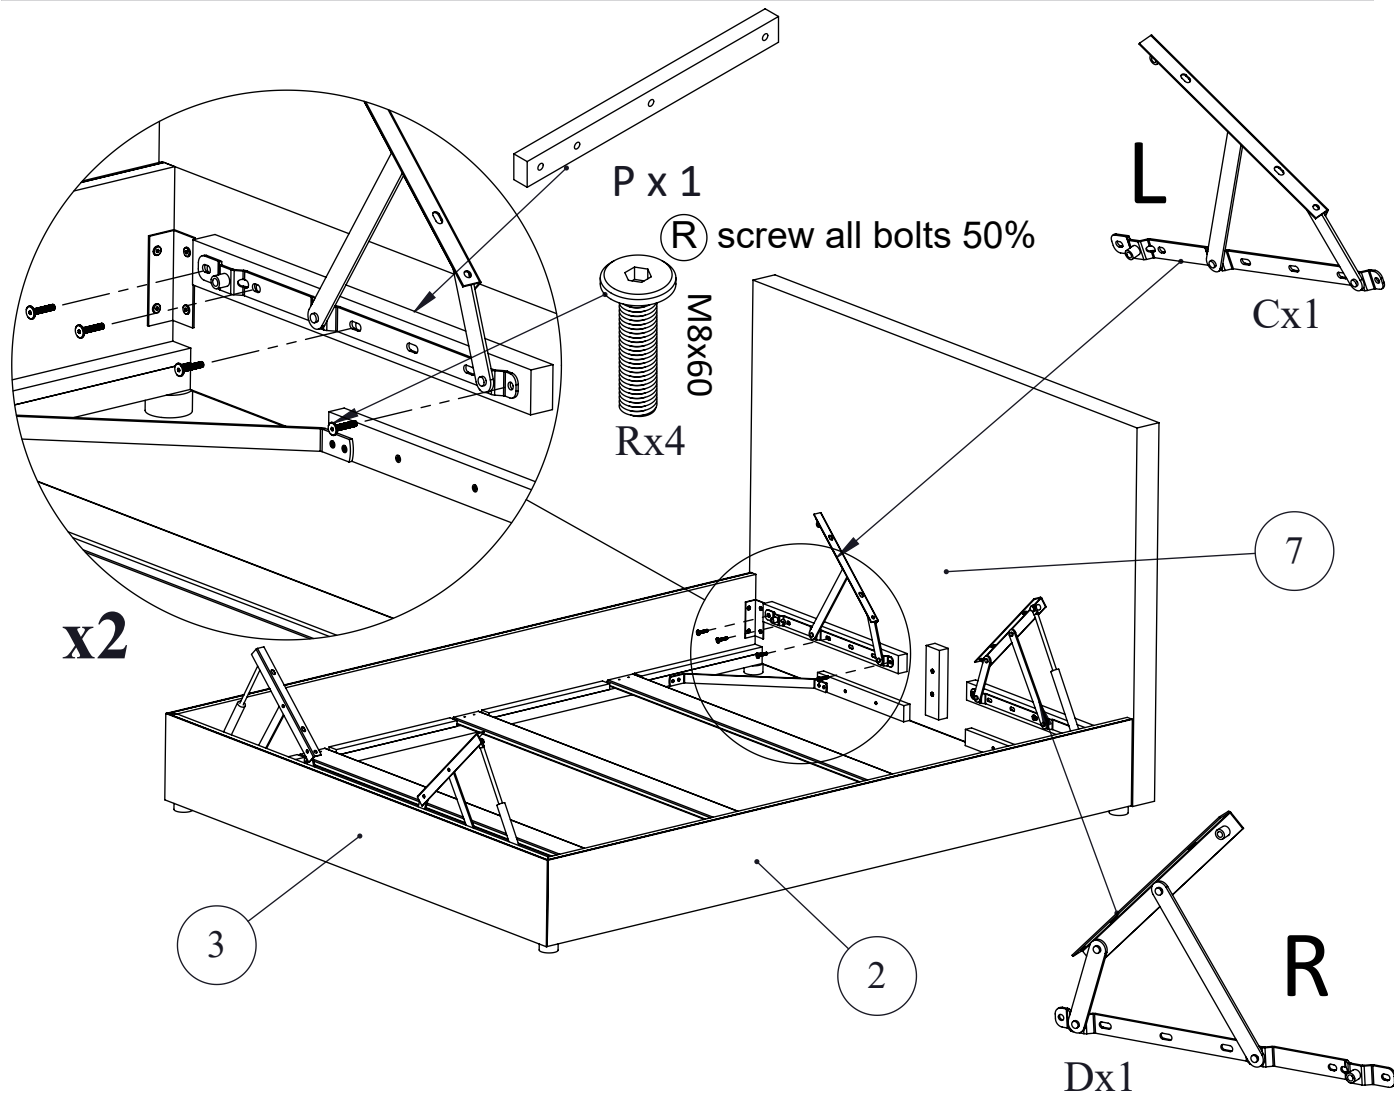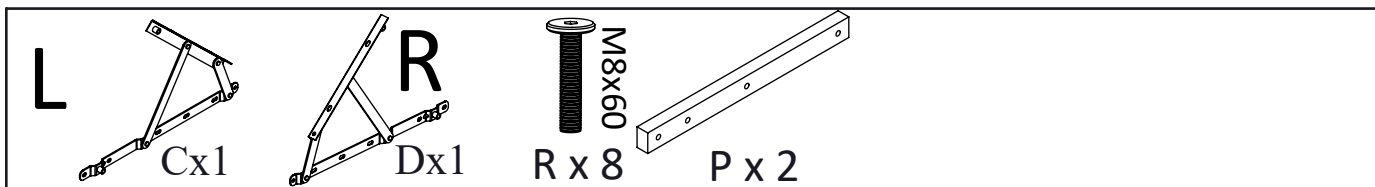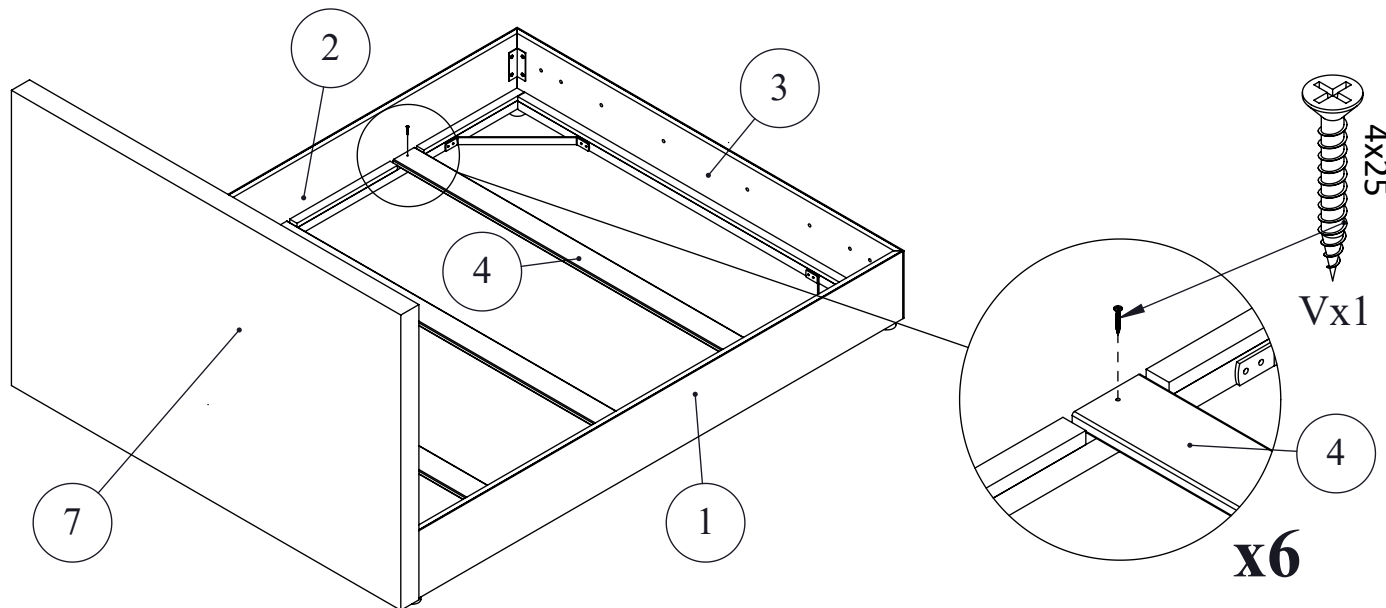



L  R   M8x20
 Cx1 Dx1 Jx8

10

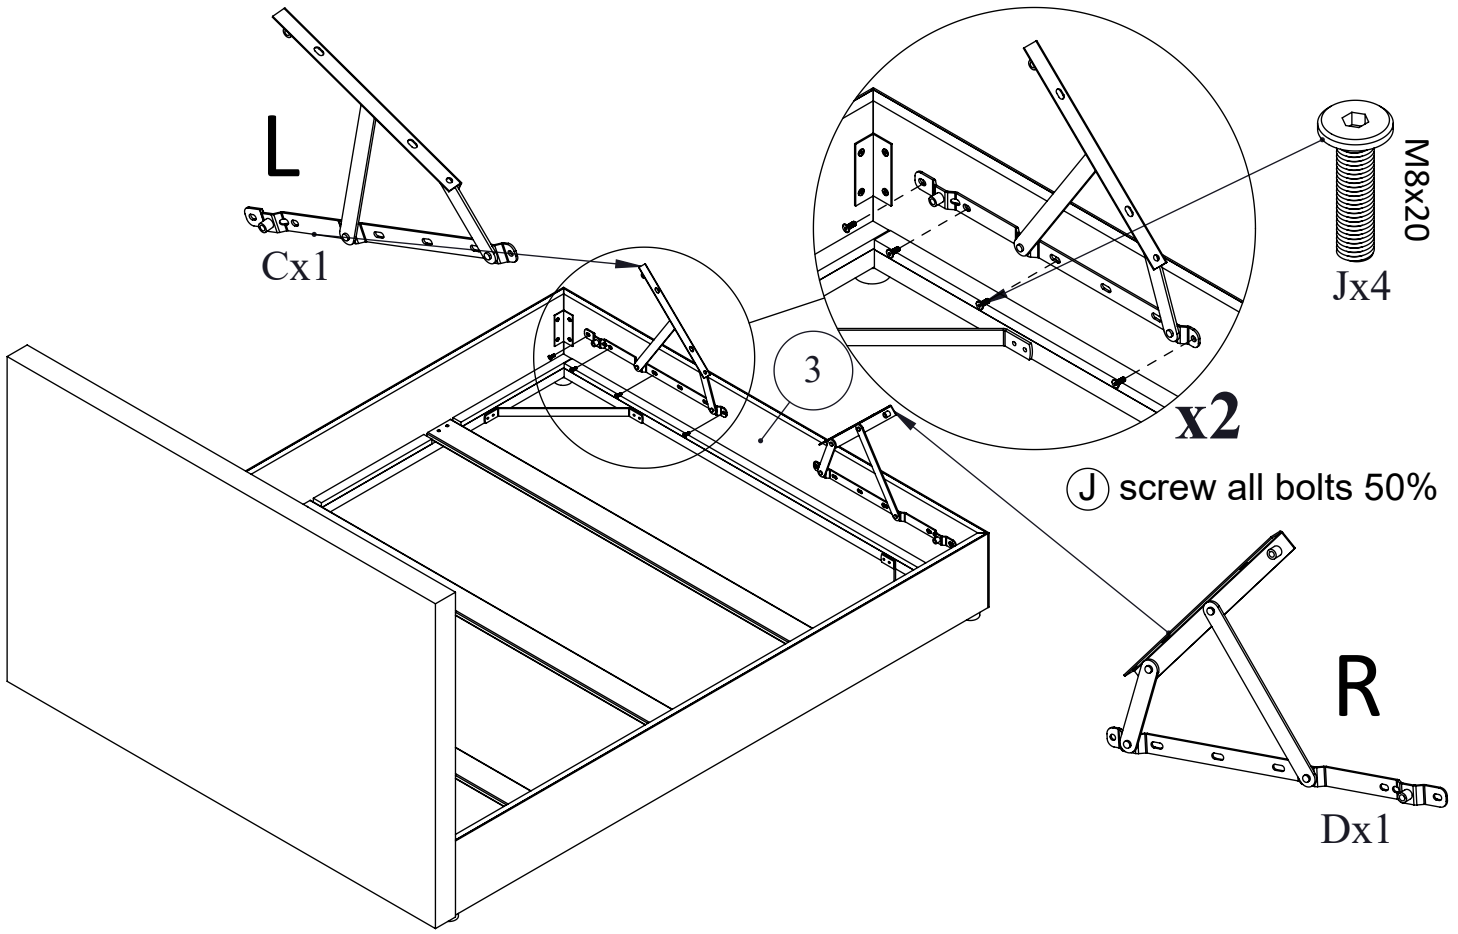



 T x 8


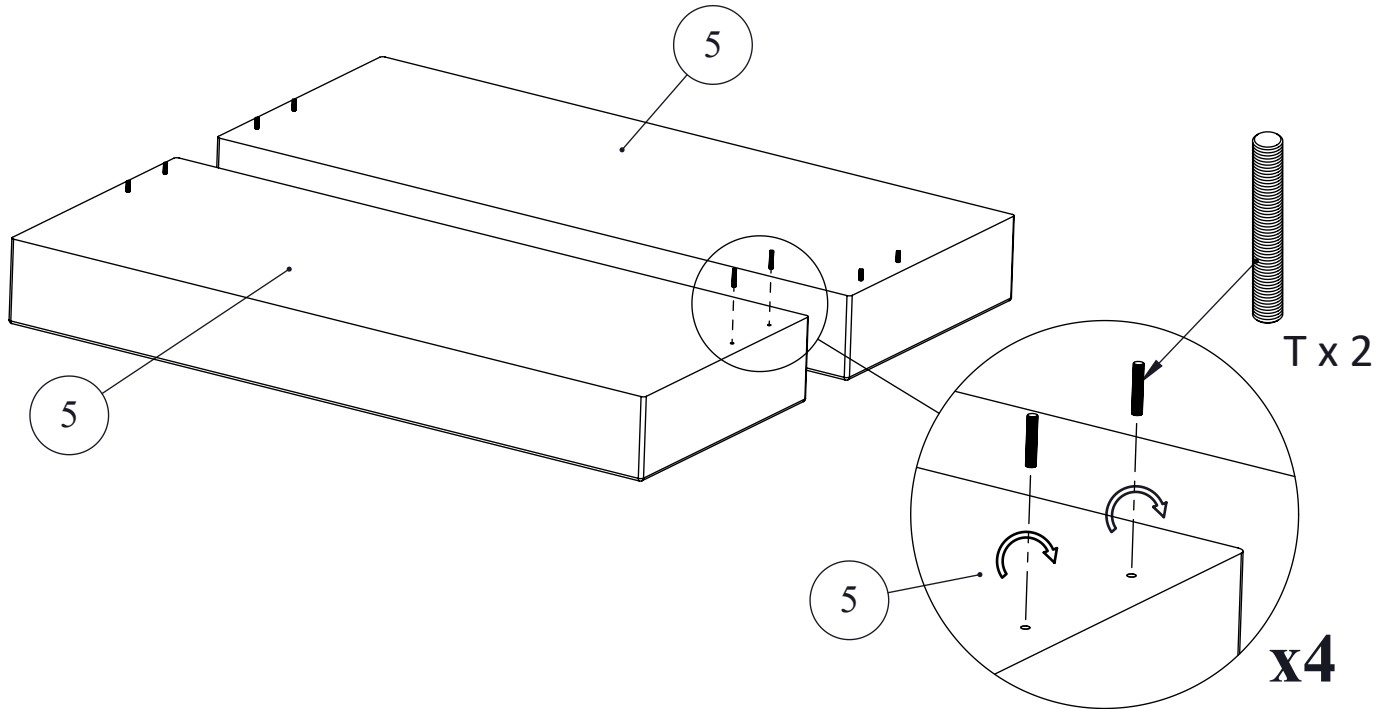


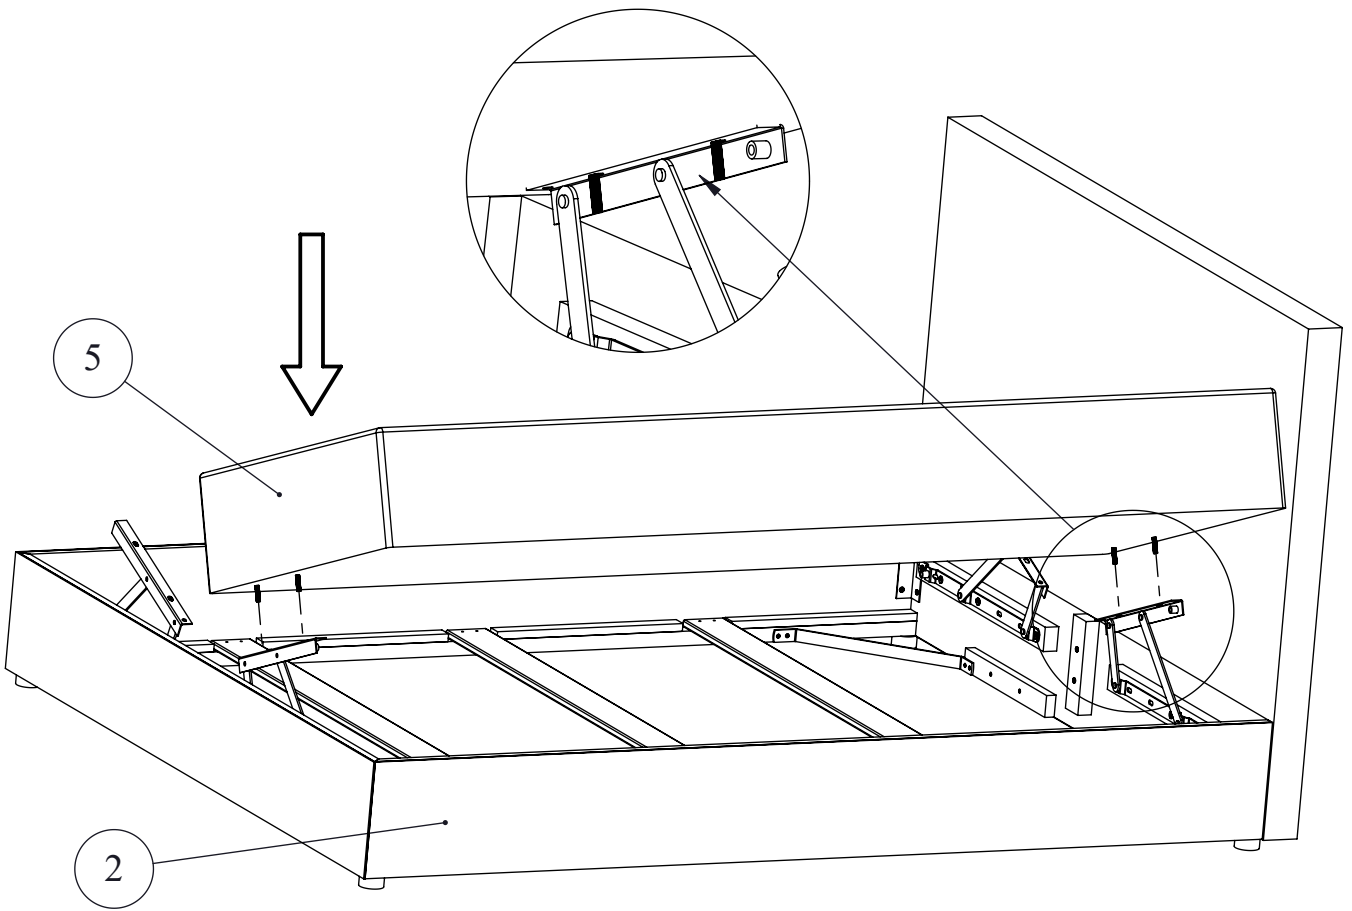


- Ⓚ screw all nuts 100%
- Ⓝ screw all bolts 100%
- Ⓡ screw all bolts 100%

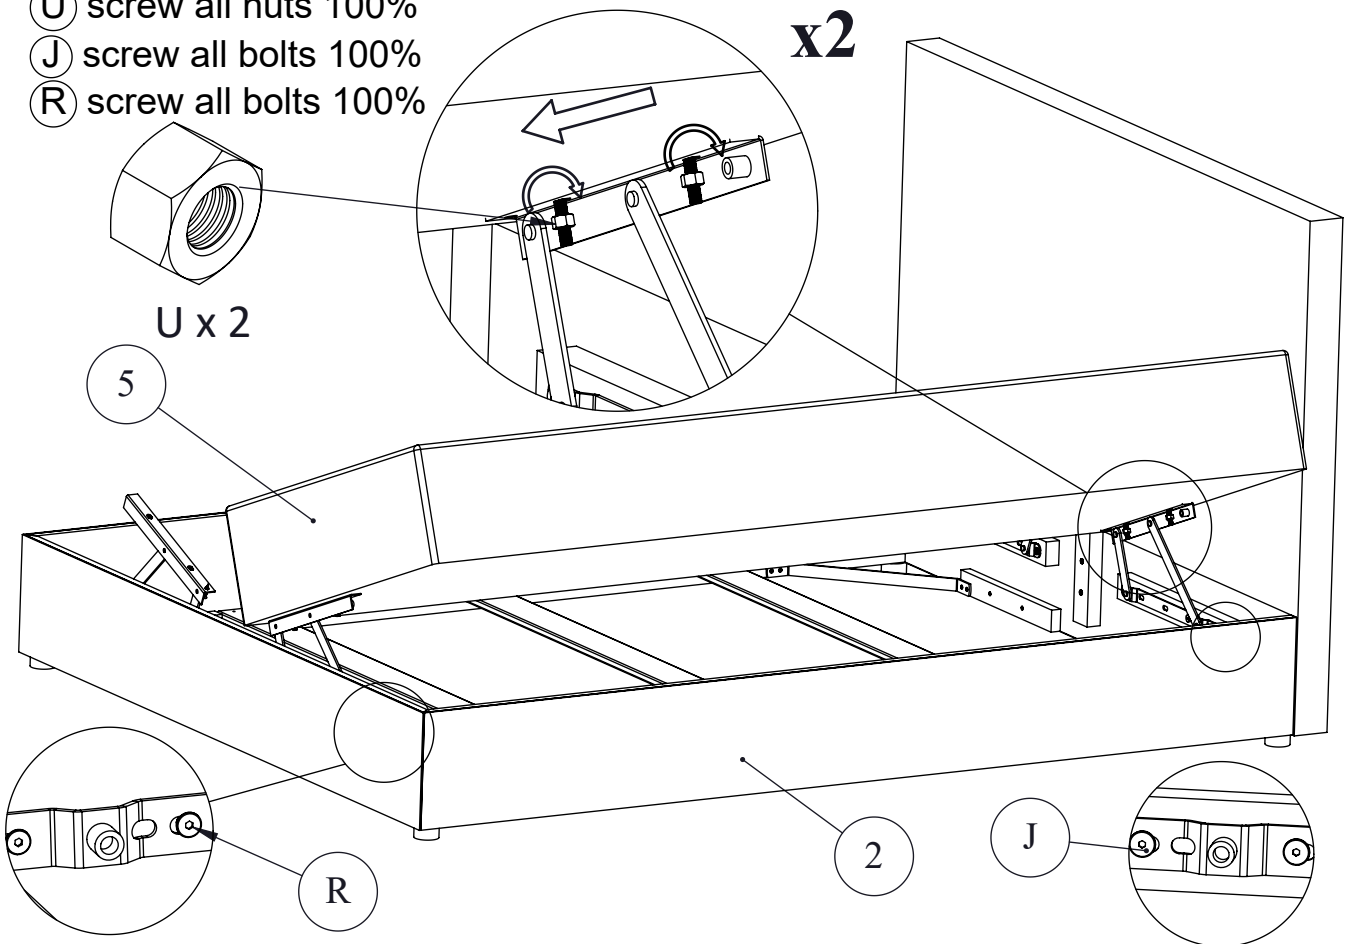


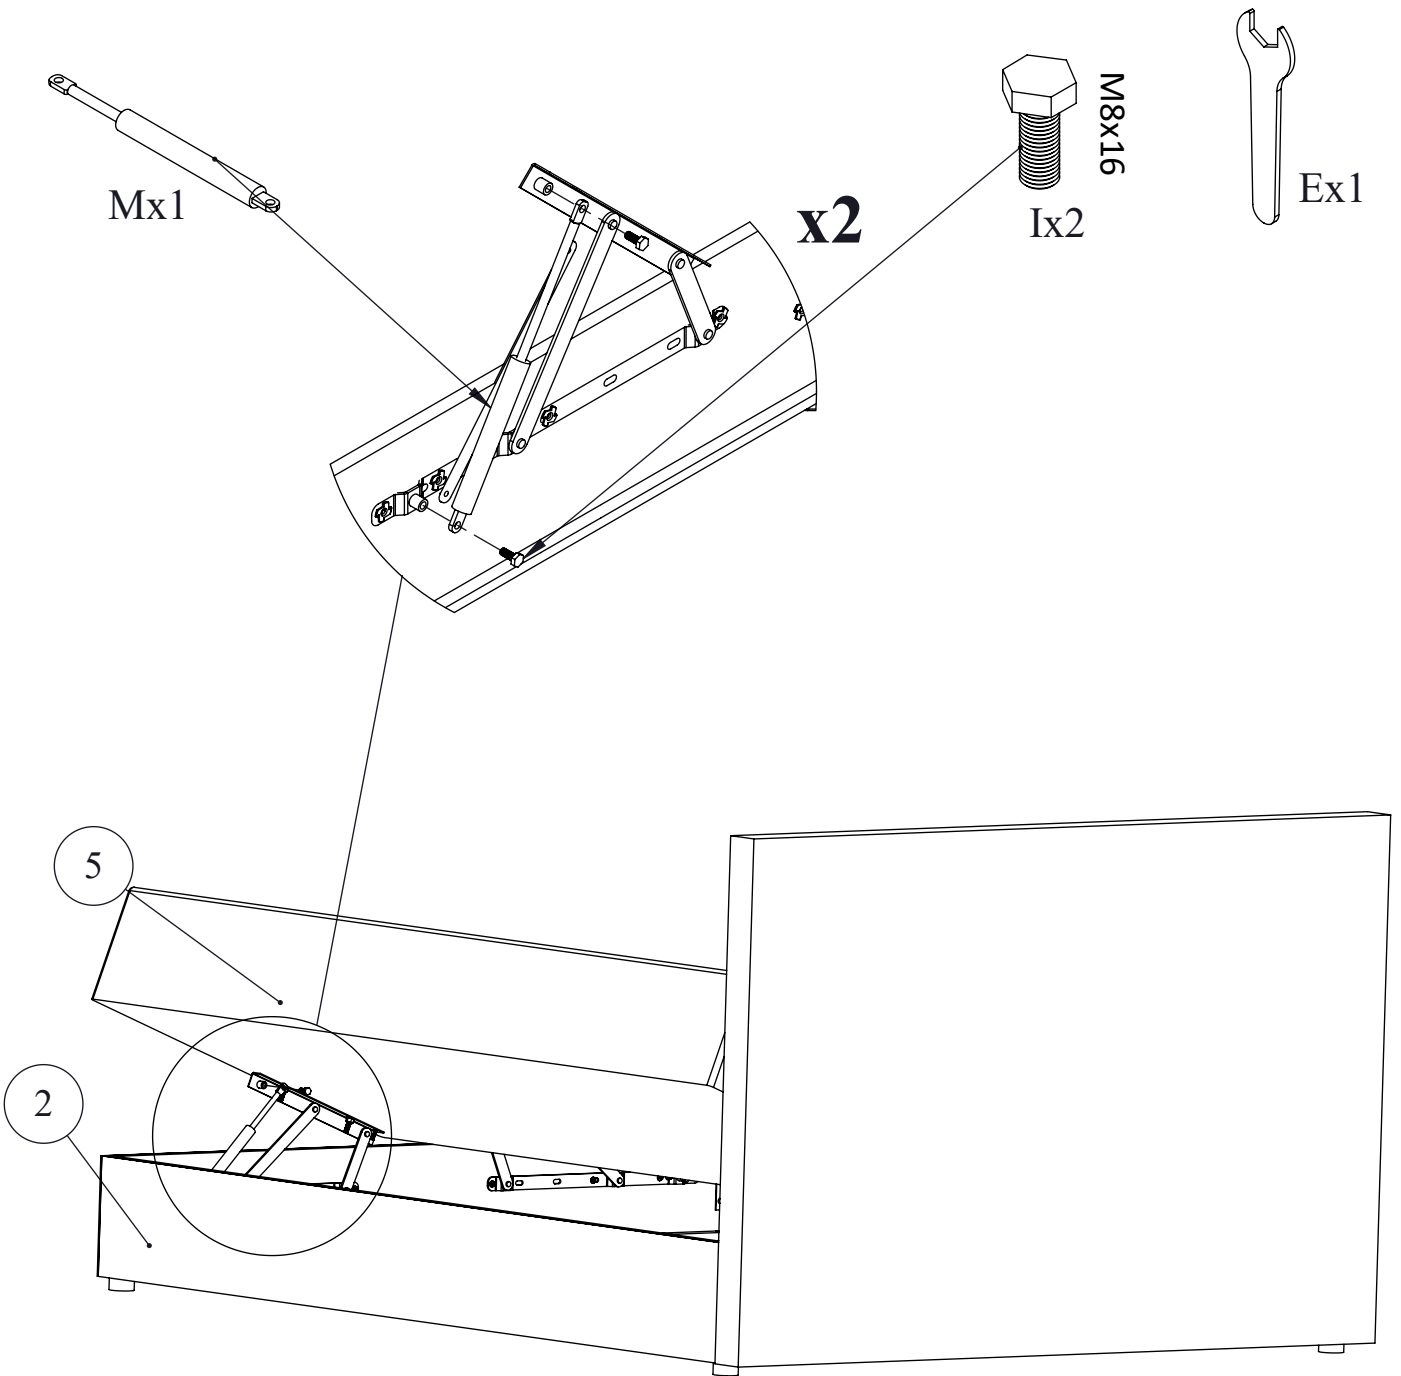


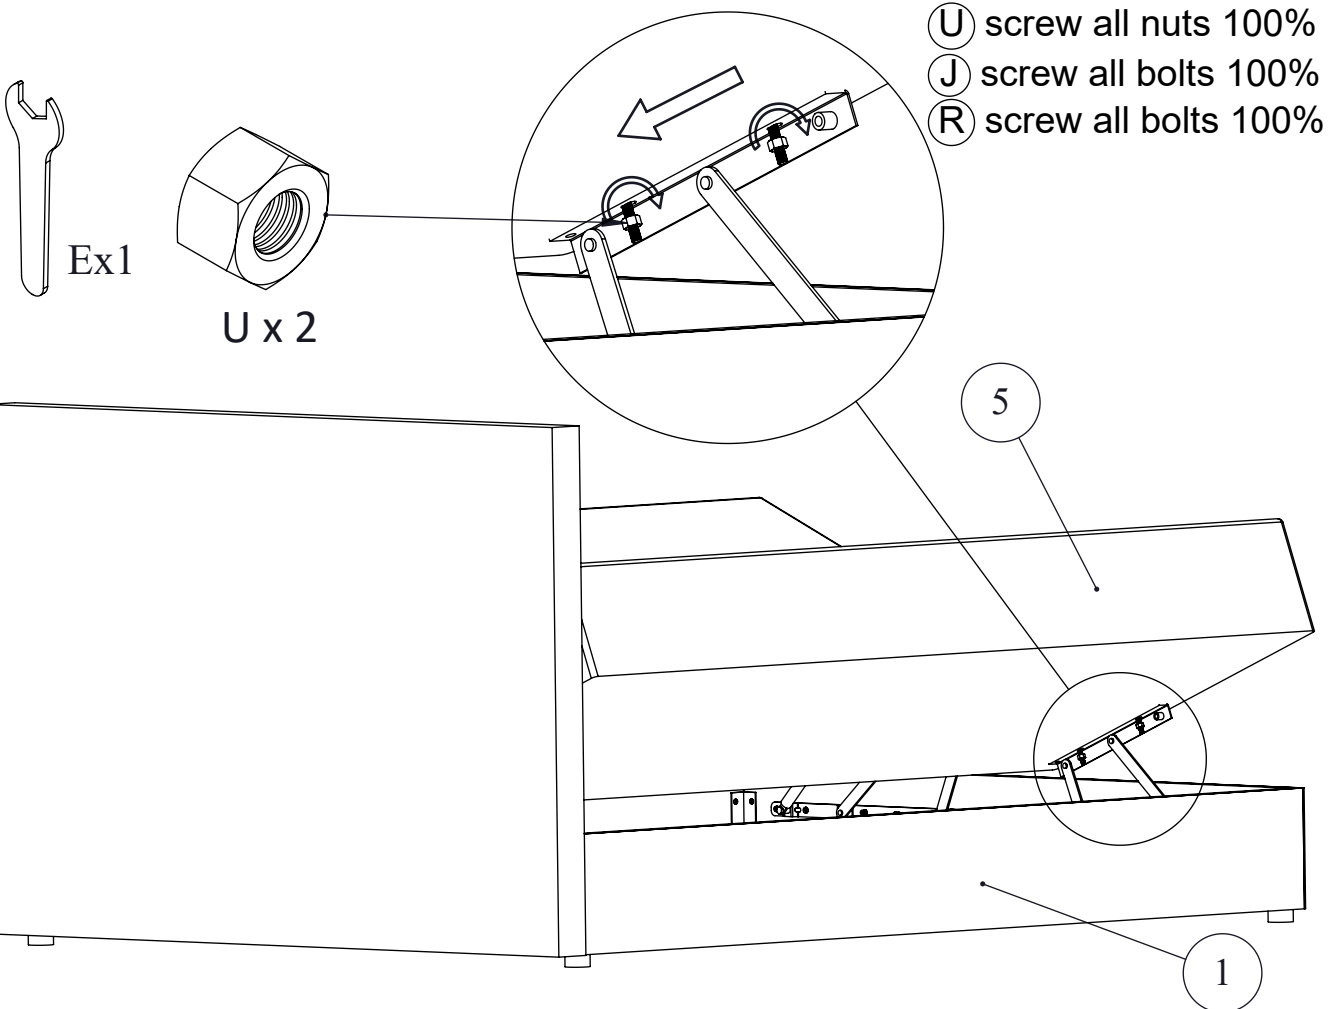
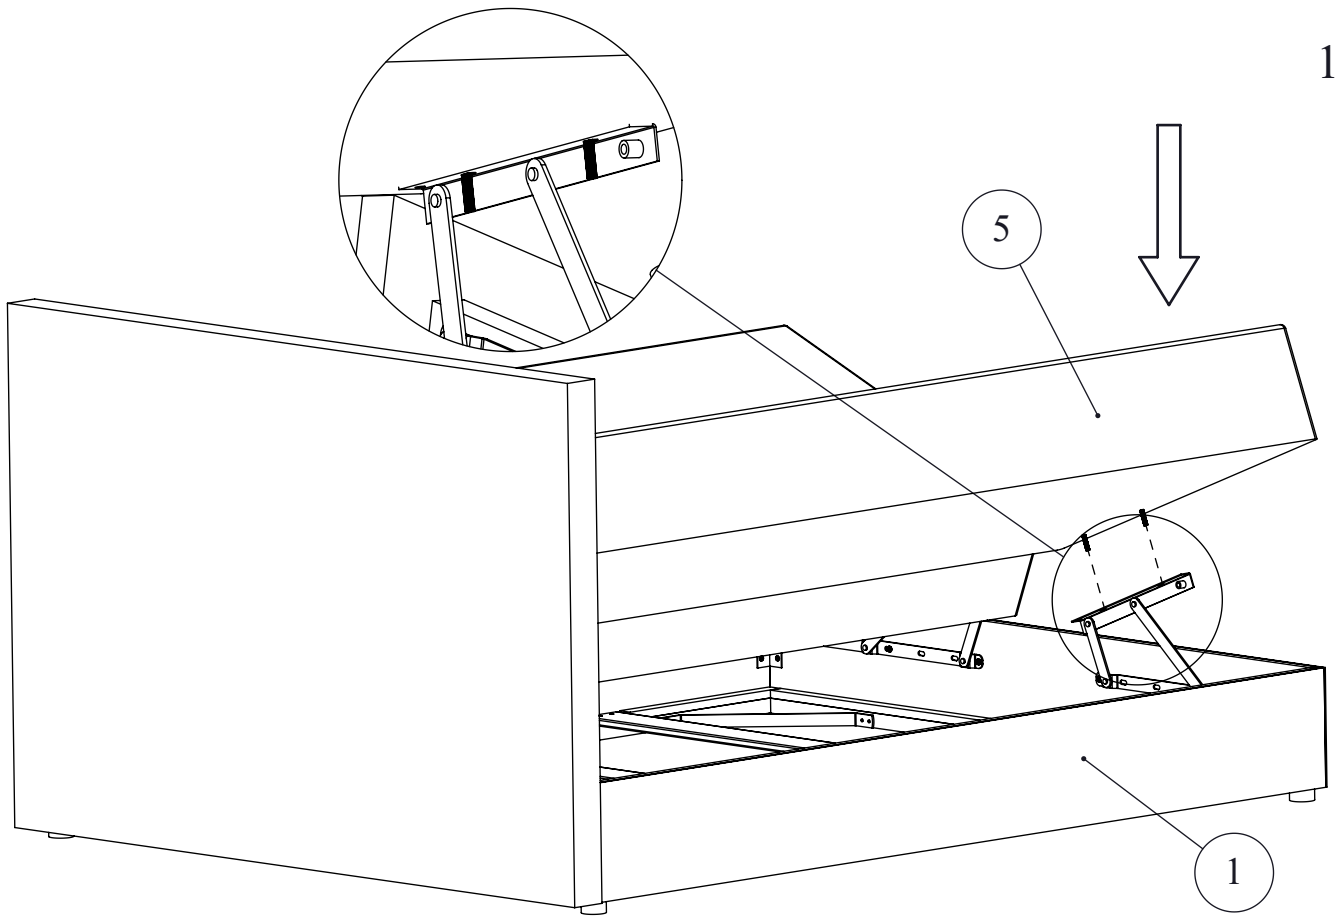




 Ex1	 Ix4 M8x16	 Mx2
---	--	---

 Ex1
--


 Ix2 M8x16

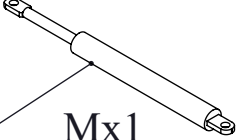 Mx1
--

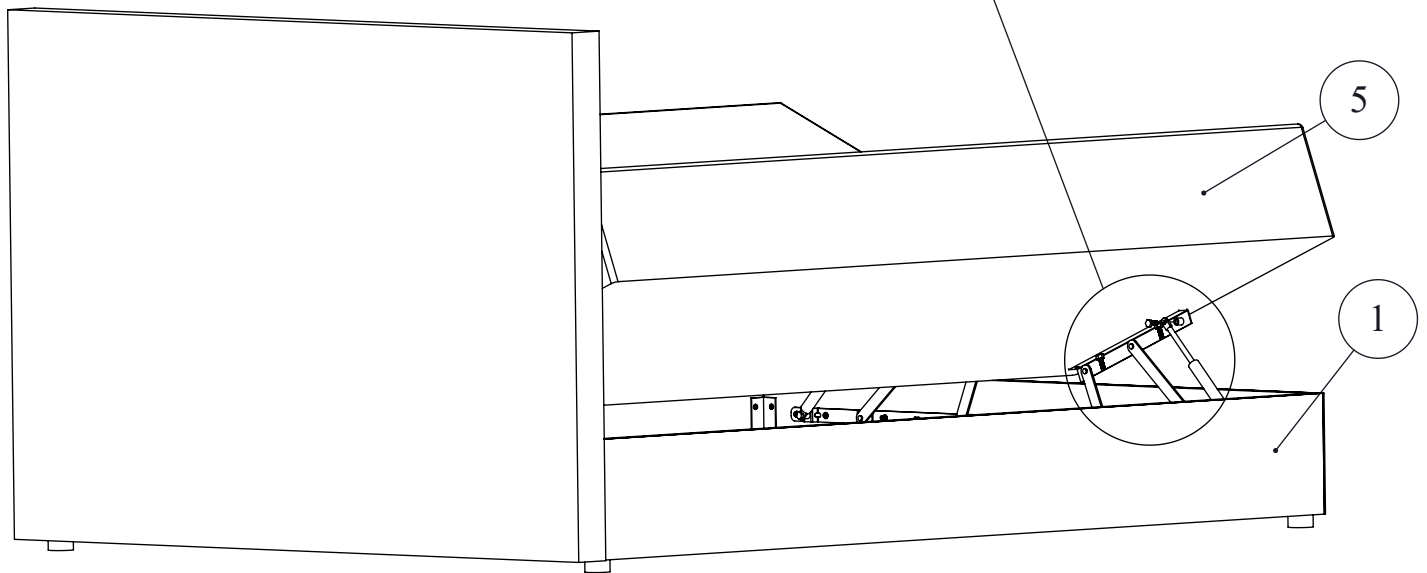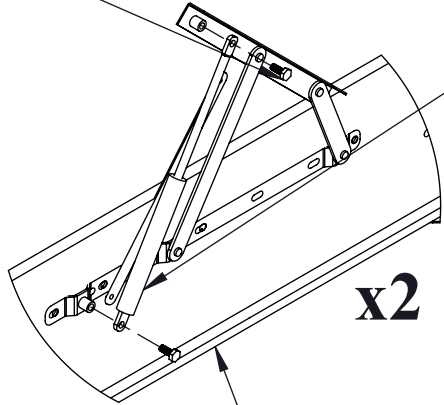

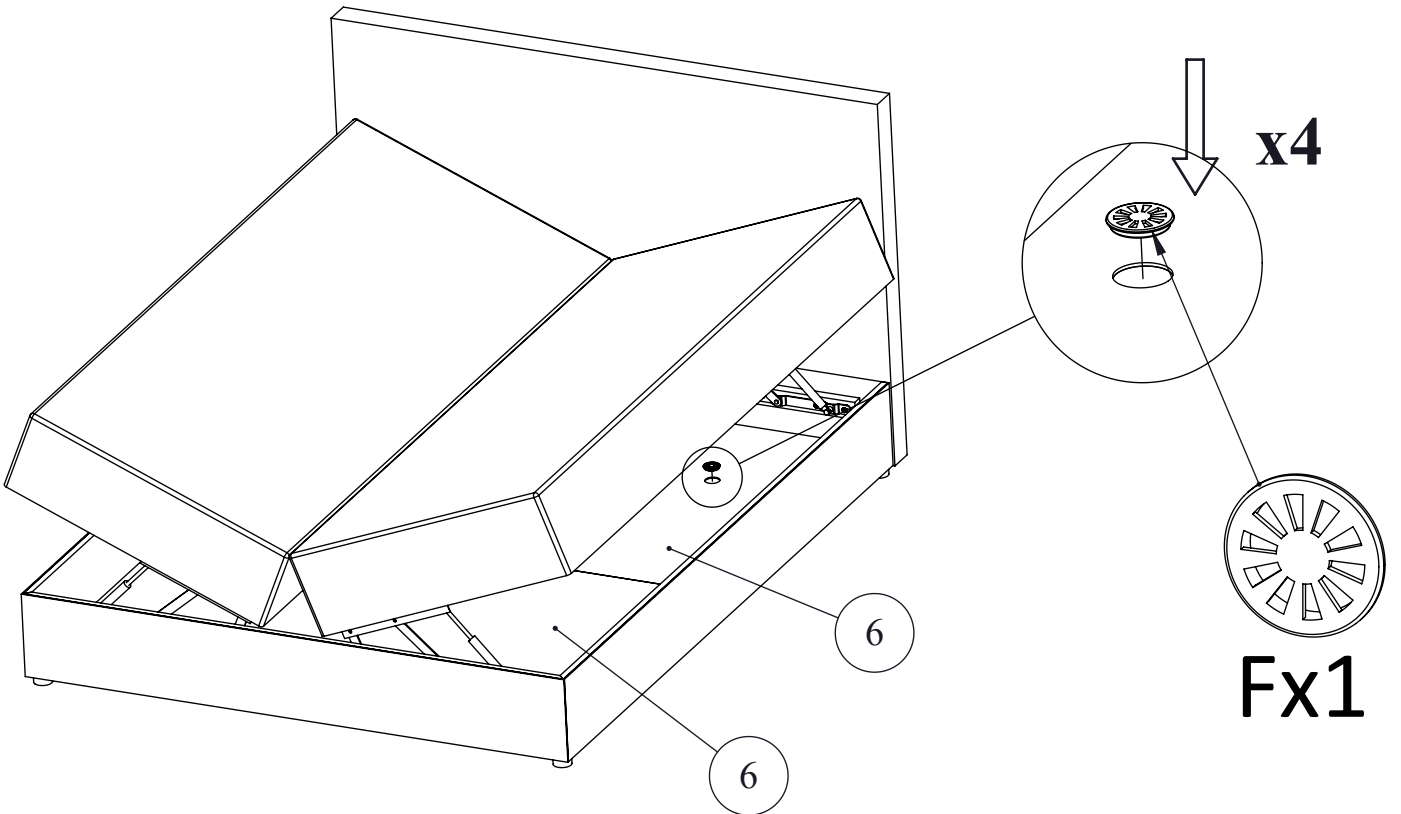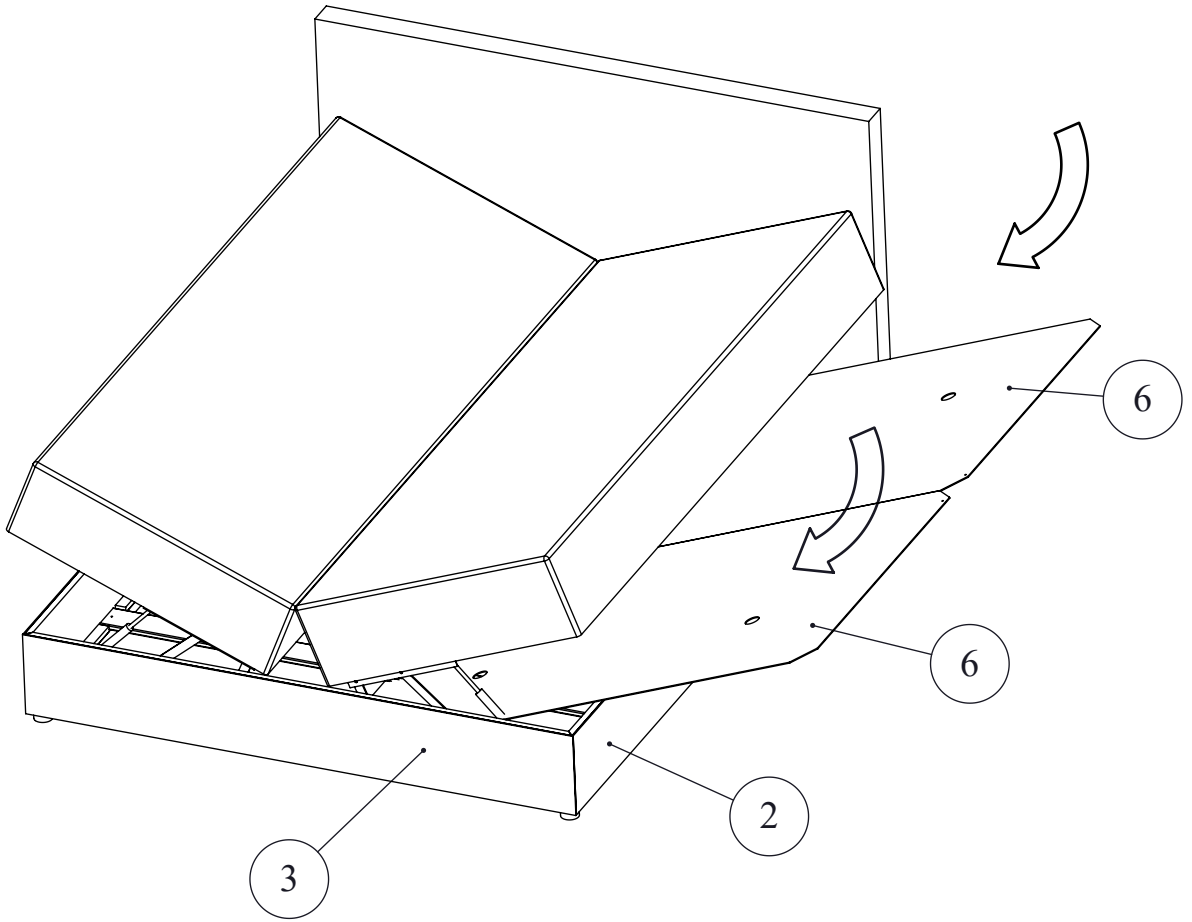

4x16
Wx4

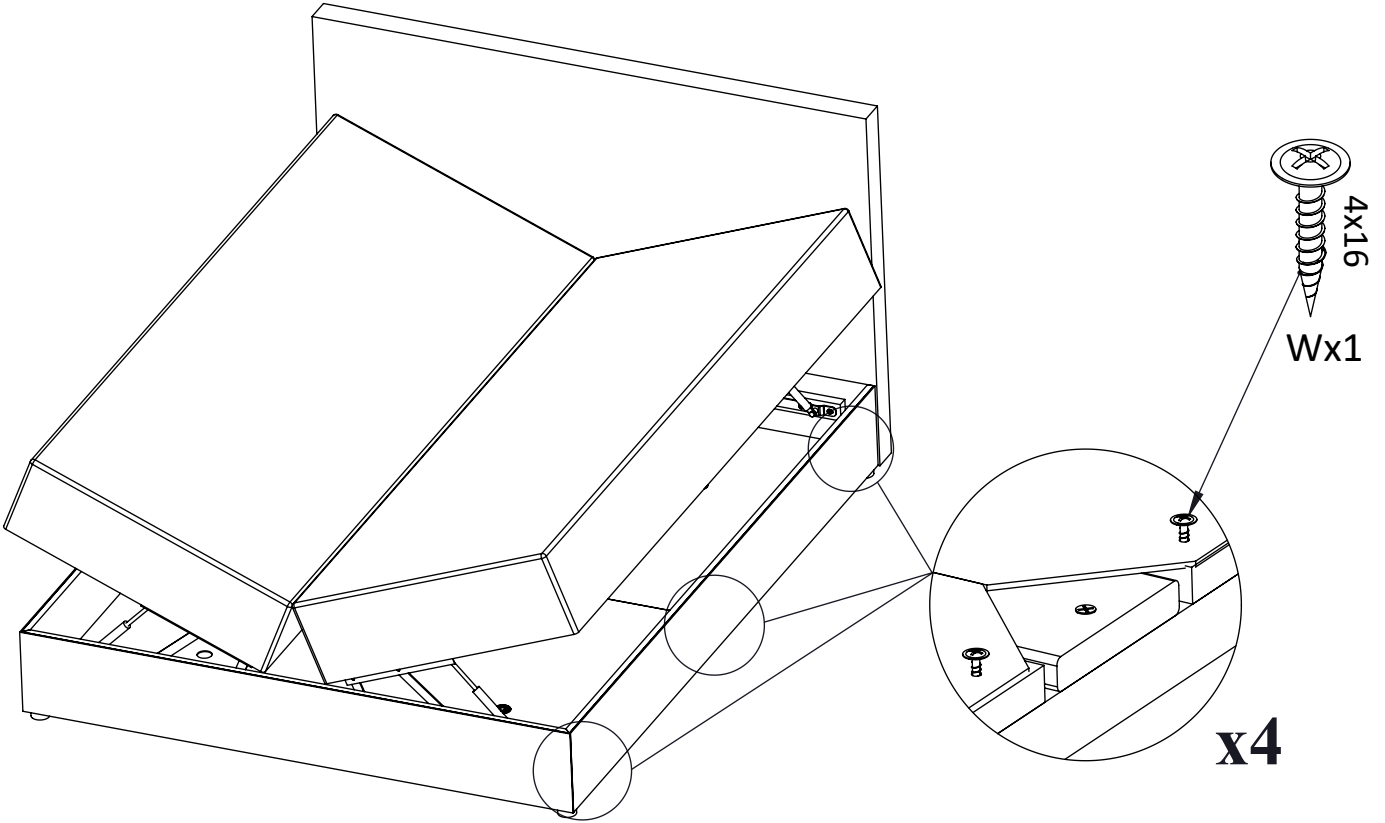

4x16
Wx4

