


Assembly Instruction 3.6X6M Cedar Gazebo

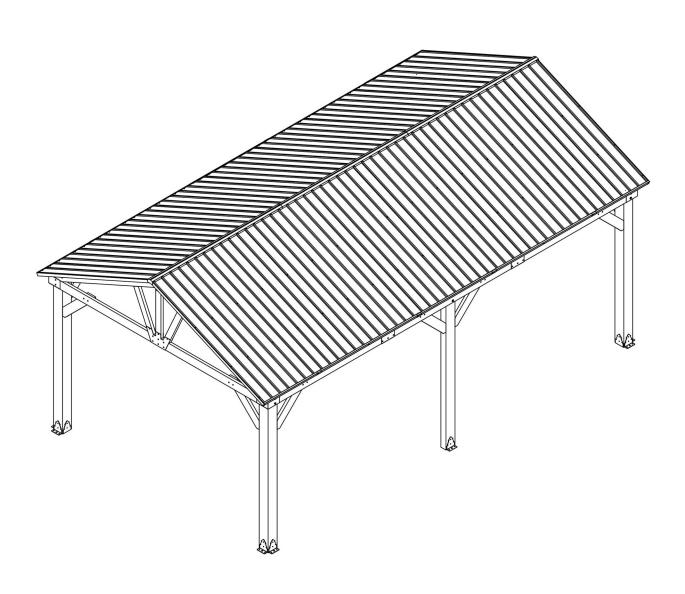



Four or more people are required for assembly

The following tools are not included and needed for assembly

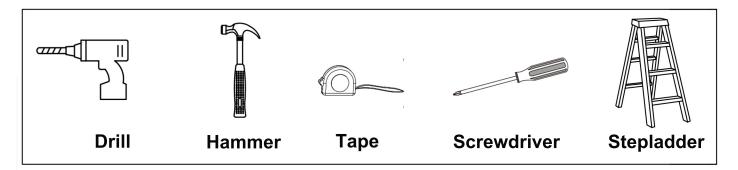


Note:


- 1. The gazebo come with 7 carton boxes.
- 2. Wearing protective gloves is recommended.
- 3. Do not fully tighten screws prior to complete assembly.





Before You Start


- Please read all instructions carefully.
- ↑ Separate and count all parts and hardware.
- Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- Always place the product on a flat, steady and stable surface.
- Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

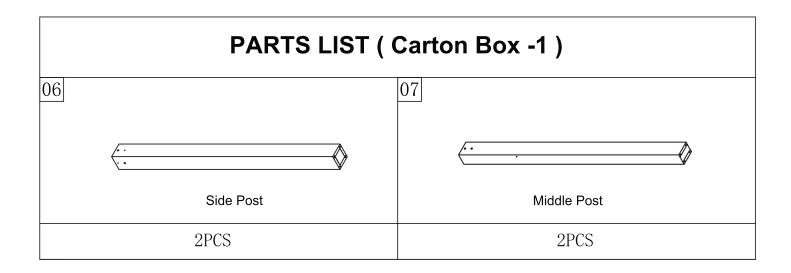


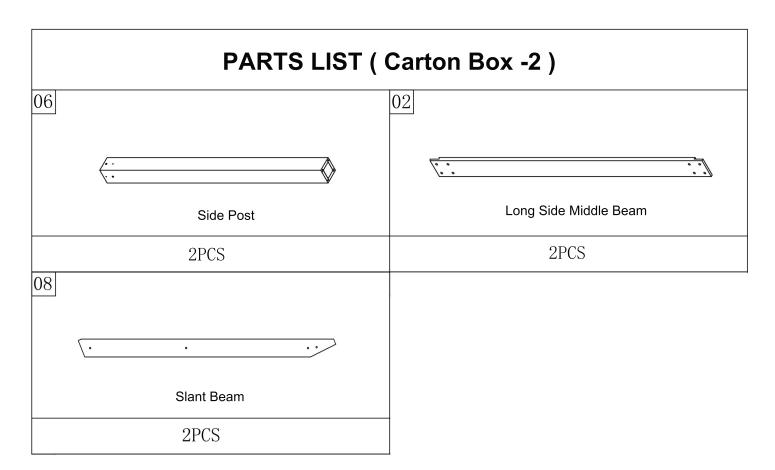

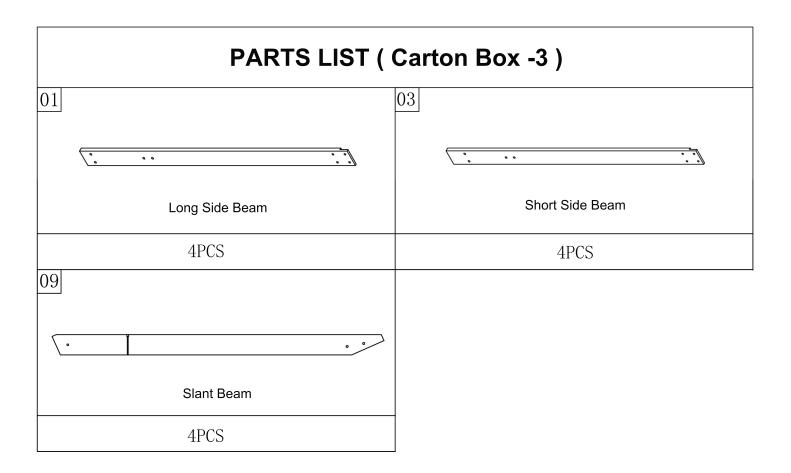

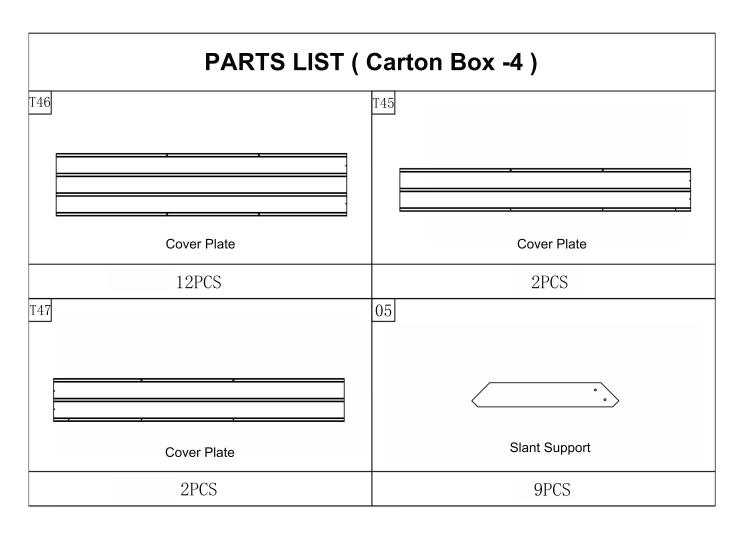

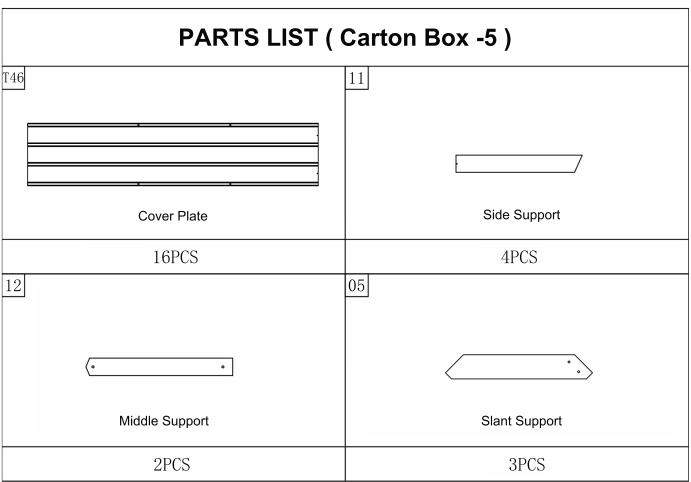


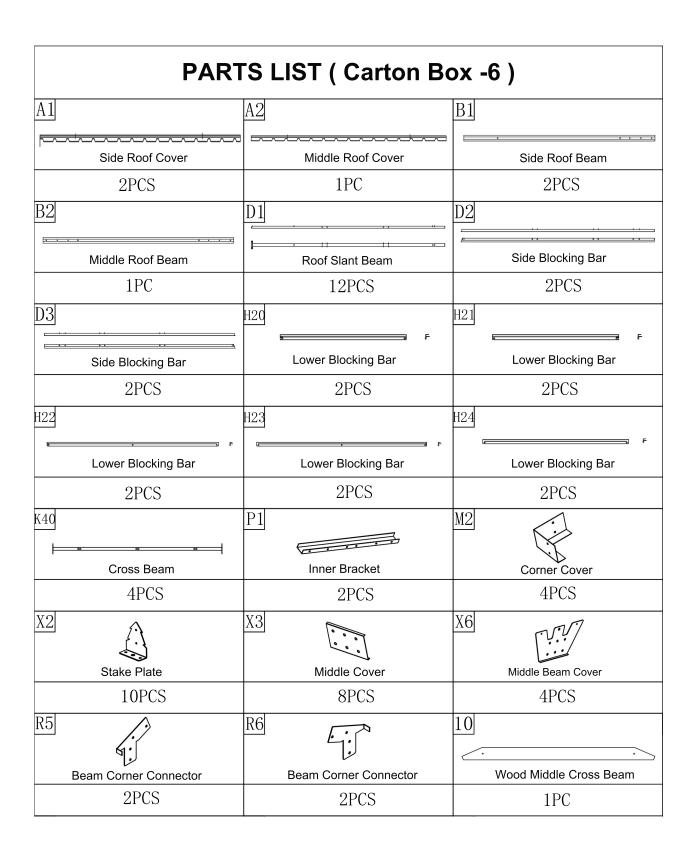

PARTS LIST (Carton Box -7)							
C1	K38	K39					
Cross Bar	Cross Beam	Cross Beam					
6PCS	8PCS	16PCS					
N1	Z1	Z2					
Roof Beam Connector	Slant Beam Connector	Support Connector					
3PCS	12PCS	2PCS					
Z3 (;)	Z4	Z5 · .					
Middle Top Cover	Blocking Bar Fixed Plate	Middle Top Cover					
4PCS	8PCS	2PCS					
Z6 J	X1	X5					
Beam Corner Connector	Stake Plate	Base Plate					
2PCS	10PCS	4PCS					
X7 (: 0:)	Q2	R4					
Base Plate	Hook	Side Beam Connector					
2PCS	2PCS	4PCS					

	HAR	DW/	ARE LIST (C	arton	Вс	ox -7)		
AA	M8X165	BB		M5X30	CC		M10X80	
			\bigoplus			♦	· (0)	
	Inner Hex head Bolt & Nut		Self-tapping Screw			Outer Hex head Screw & Washer		
	8PCS		70+6PCS			8PCS		
DD	M6X70	EE		M6X25	FF		M8X25	
	Inner Hex head Screw					Inner Hex head Bolt	& Nut	
	12PCS		12+2PCS			58+3PCS		
GG	M6	НН		M8X60	II	_	M6X70	
	Nut & Washer		Inner Hex head Bolt & I	Nut		Inner Hex head screw	& Nut	
	6+1PCS		26+1PCS			6+1PCS		
JJ	M5X20	KK		M5X140	LL		M6X45	
	⊕ \		(1)					
	Self-tapping Screw		Self-tapping Screw	1	In	ner Hex head Bolt & Wa	sher & Nut	
	40+3PCS		4+1PCS			60+4PCS		
00	M5X50	TT	a	M6X15	NN		M8X105	
	(1) [minn (1)							
	Self-tapping Screw	1	nner Hex head screw & W	/asher		Inner Hex head Bol	It & Nut	
	4PCS		226+15PCS			4PCS		
Y1	M6	Y2		M6	Y3		M10	
	2					2	2	
	Wrench		Screwdriver set hea	d		Wrench		
	1PC		1PC			2PCS		
Y4	M8	Y5		M8	Y6		M6	
	Allen key		Allen key			Allen key		
	2PCS		2PCS			2PCS		
Y7	M6	Y8		M8	UU		ø6x200	
						<	\Rightarrow	
	Hex screwdriver head		Hex screwdriver head	l		Stake		
	1PC		1PC			20PCS		
MM	(P)				•			
	Washer							
	72+4PCS							

<1> X2

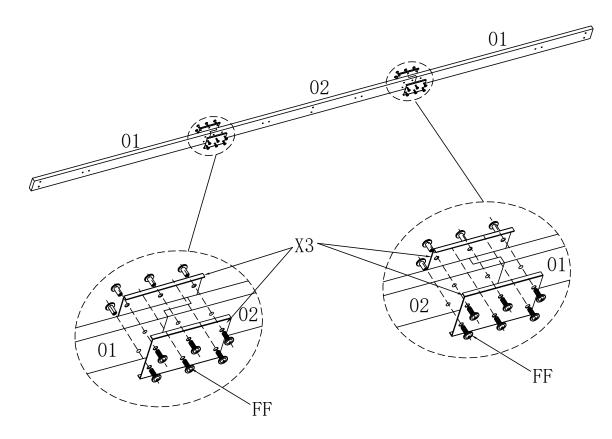


Connect Middle Covers X3 with Middle Long Beams 02 and Side Beams 01, fasten by using Bolts FF.








<2> X4

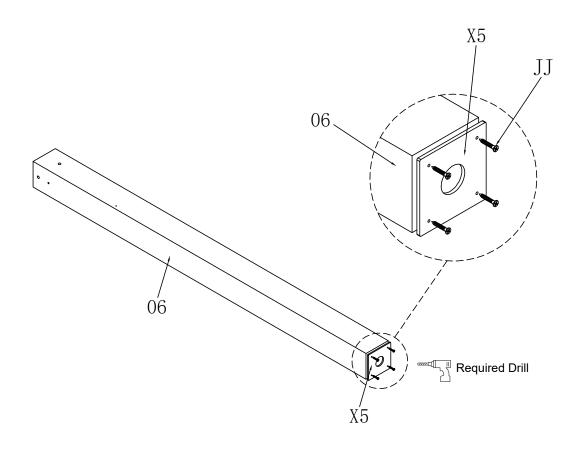

Attach Base Plate ${\bf X5}$ to the bottom of Post ${\bf 06}$, fasten by using Screw ${\bf JJ}$.








(X5) 4X




① 16X


<3> X2

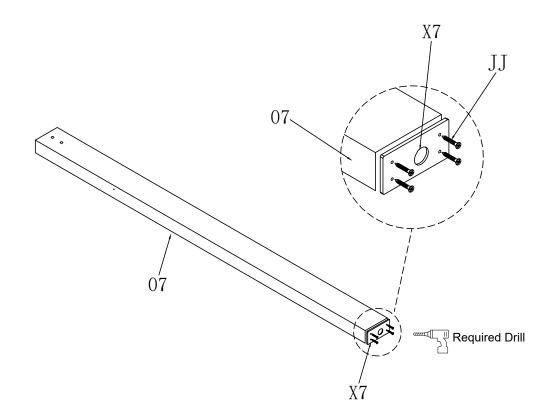


Attach Small Base Plate X7 to the bottom of Post 07, fasten by using Screw JJ.

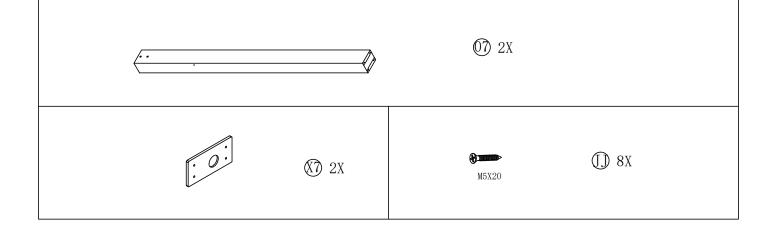

<4> X2

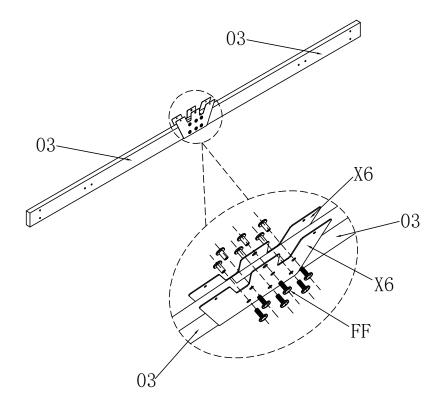


Connect two Middle Beam Covers X6 with two Short Side Beams 03, fasten by using Bolts FF.





₩ 4X FF 12X M8*25

<5> X2

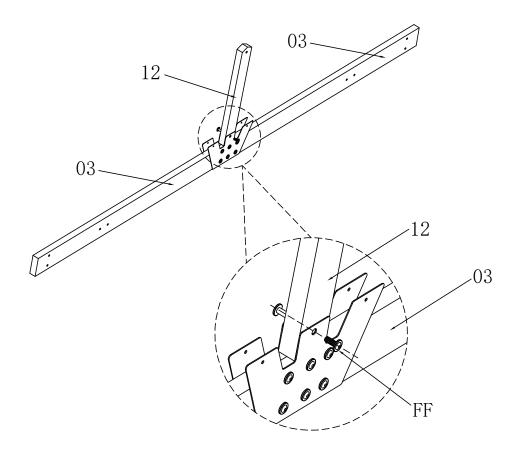



Insert the Middle Support 12 into Middle Cover X6 of assembled Short Side Beams 03, fasten by using Bolt FF.

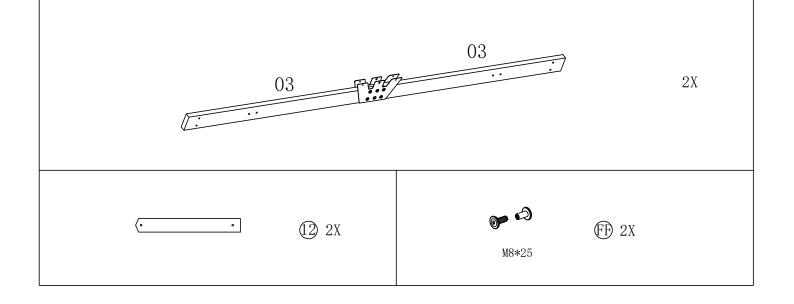


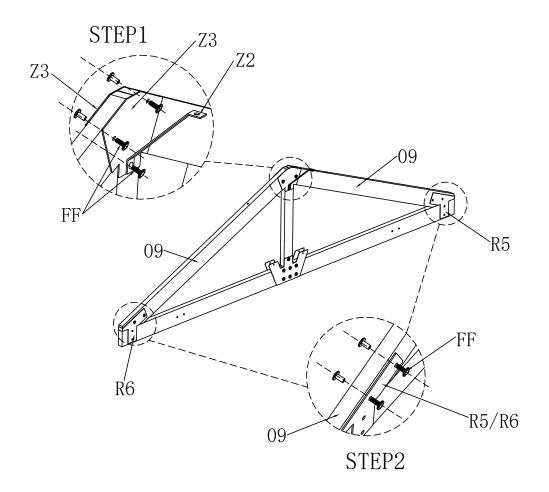



Attach Slant Beam **09** to Middle Support **12** with Middle top Covers **Z3** and Top Support Connector **Z2** by using Bolts **FF**, attach bottom of Slant Beam **09** to Beam Corner Connectors **R5/R6** by using Bolts **FF**.

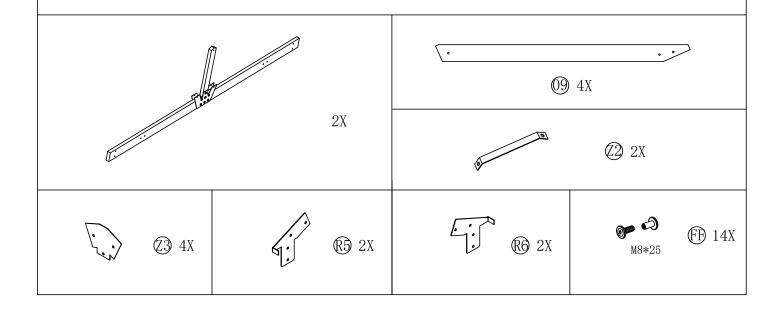

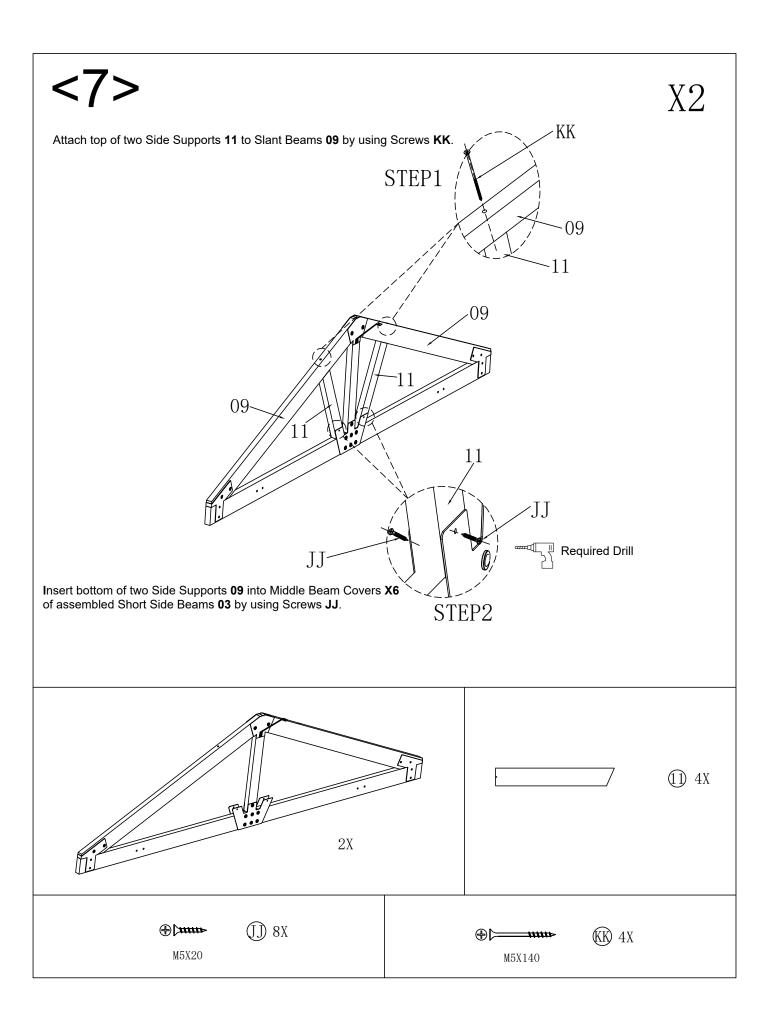

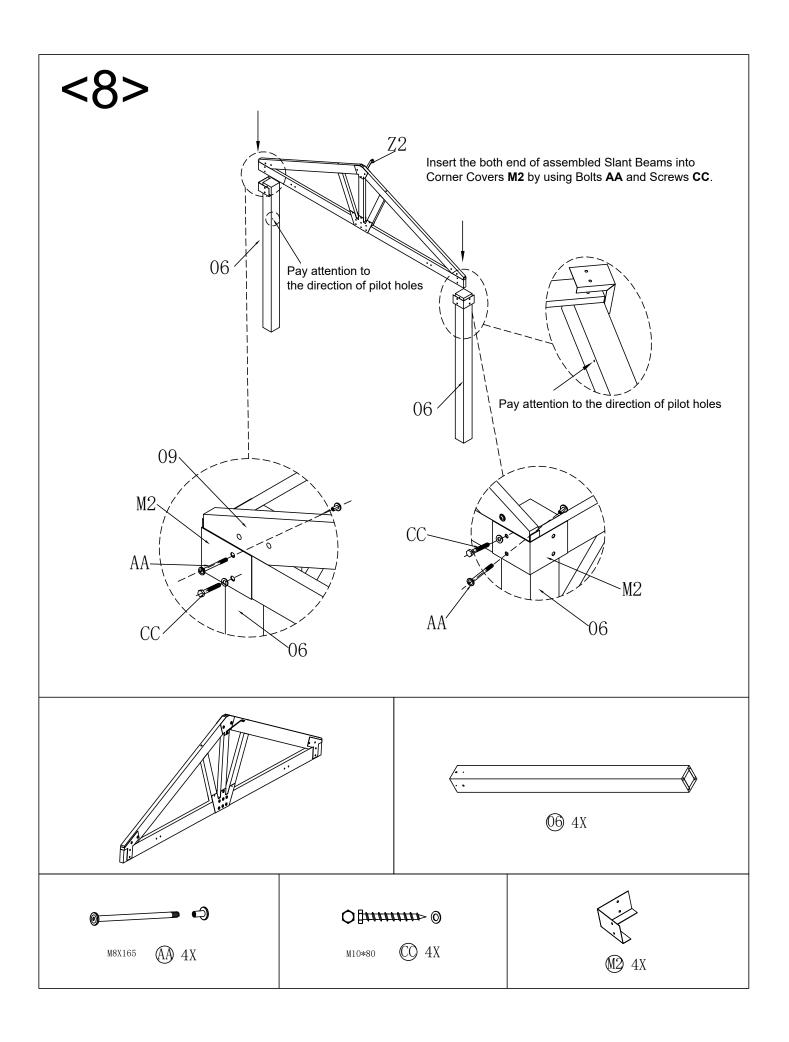


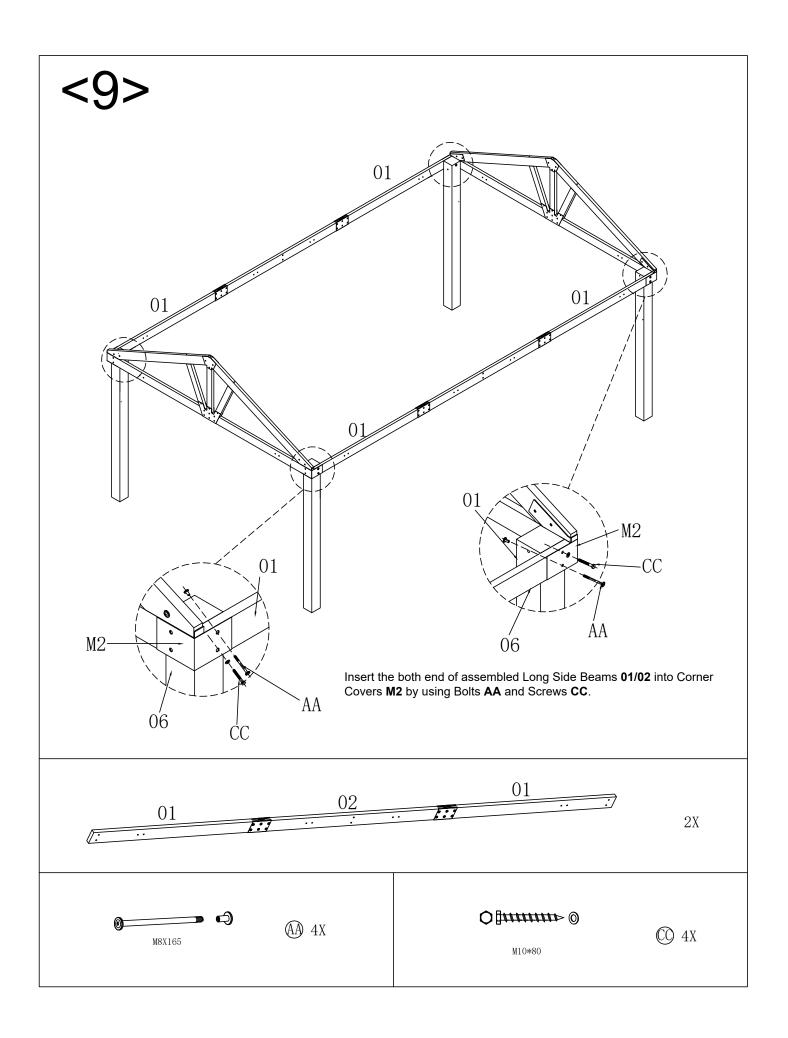

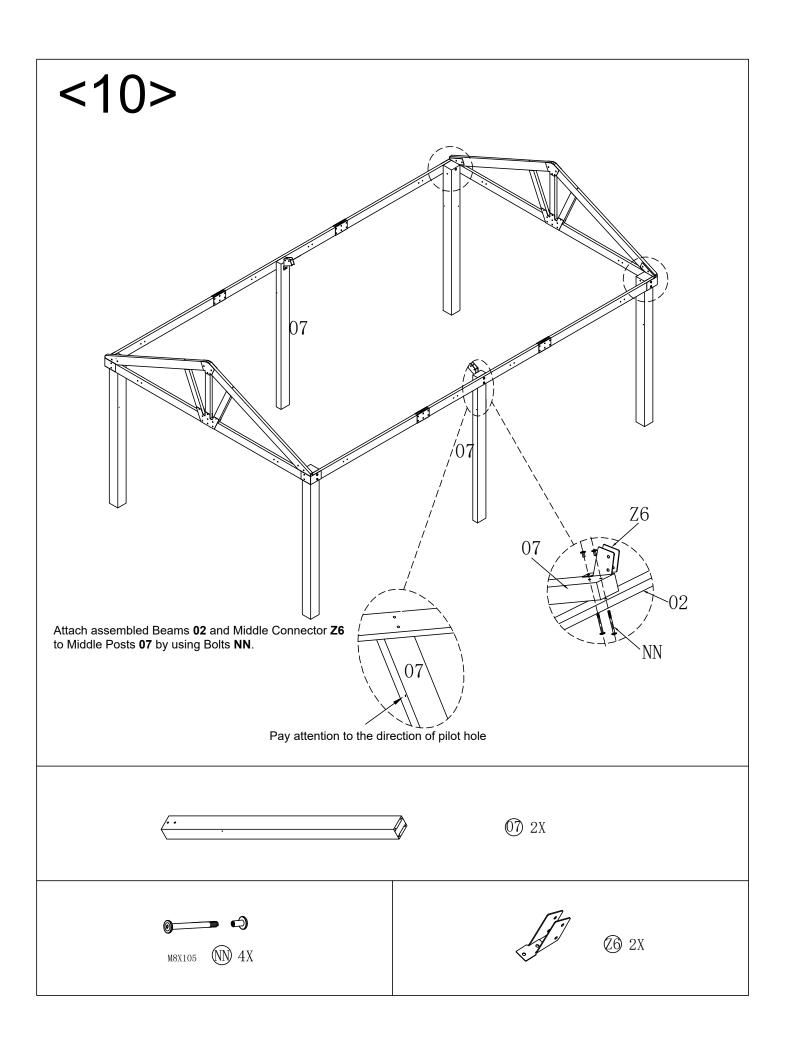


<11> 05·HH Attach Slant Support ${\bf 05}$ to Short Side Beam ${\bf 03}$ and Post ${\bf 06}$, fix by using Screws ${\bf DD}$ and Bolts ${\bf HH}$. 05 Required Drill **©**5 12X ₩ 24X ①D 12X M8X60 M6*70


<12>

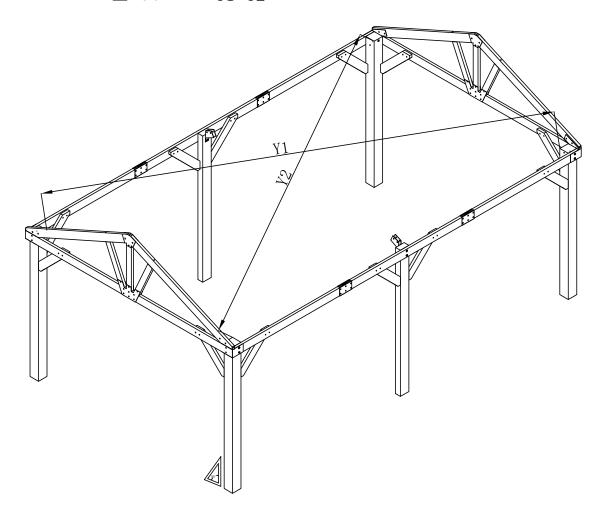


Note: Make sure the distances are equal between two diagonals of Side Posts by using tape before to next assemble step. Keep the beam at right angles to the post, the post at right angles to the ground, and keep the beam horizontal.

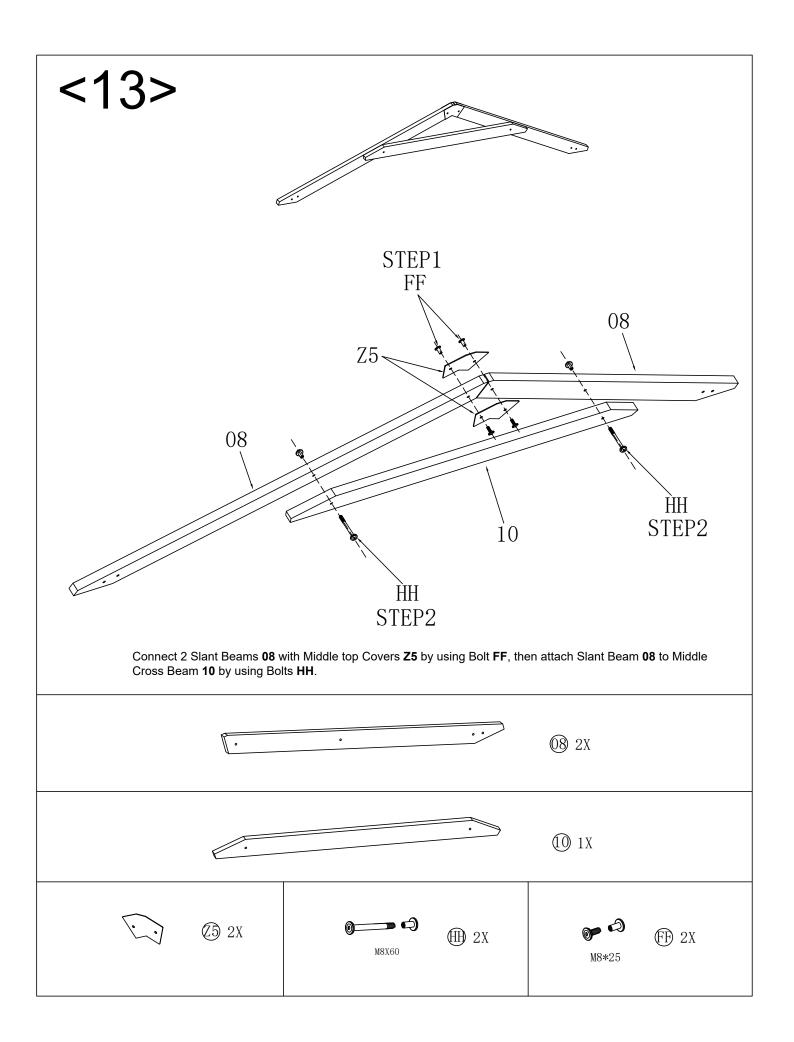


<14>

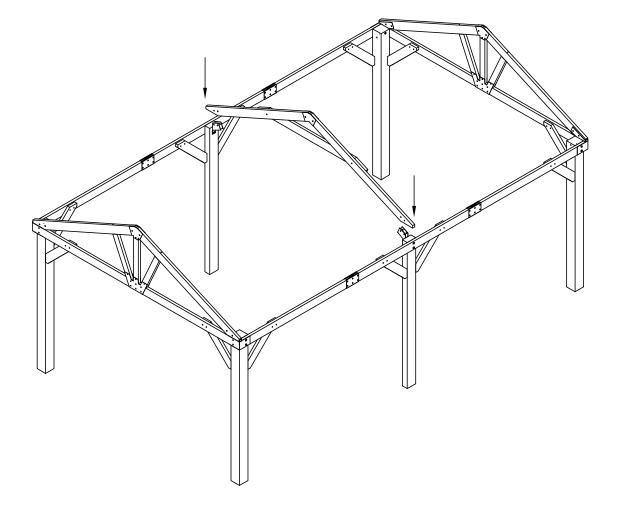

Lift assembled Middle Slant Beams, ready to insert the both end into assembled frame.

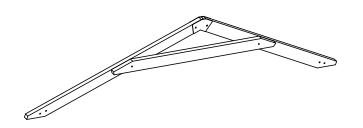

<15>

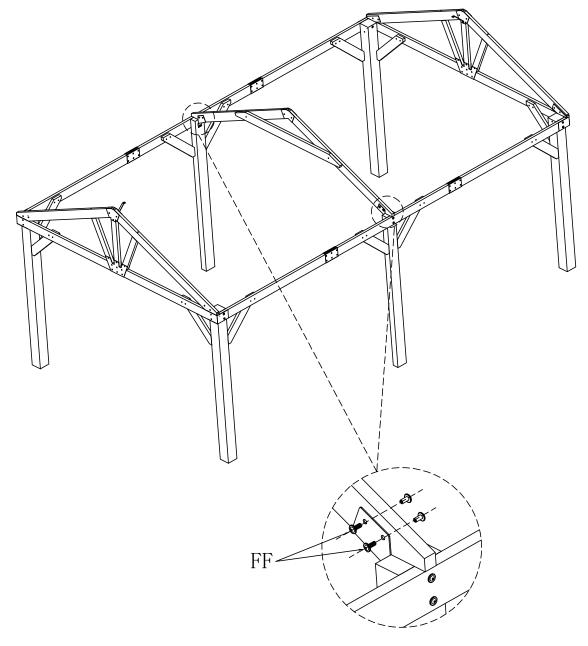


Attach bottom of Middle Slant Beam 08 to Beam Corner Connector 26 by using Bolts FF.






M8*25


<16>

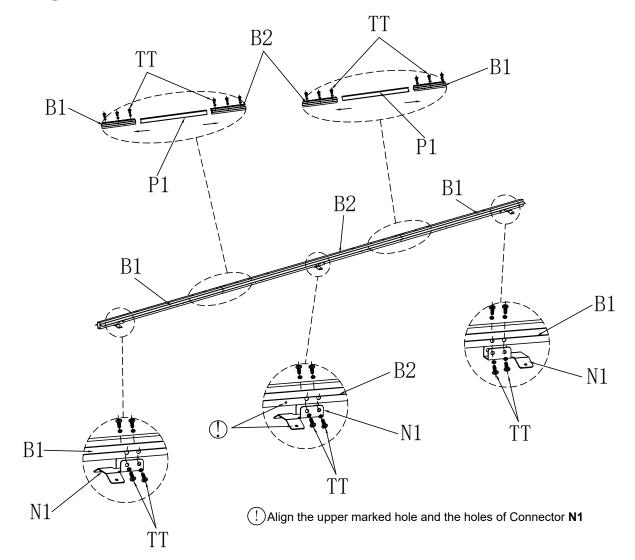

Connect Side Roof Beams **B1** to Middle Roof Beam **B2** with Inner Bracket **P1** by using Screws TT, Connect two Connectors **N1** with both bottom of **B1**, fasten by using Screws TT.

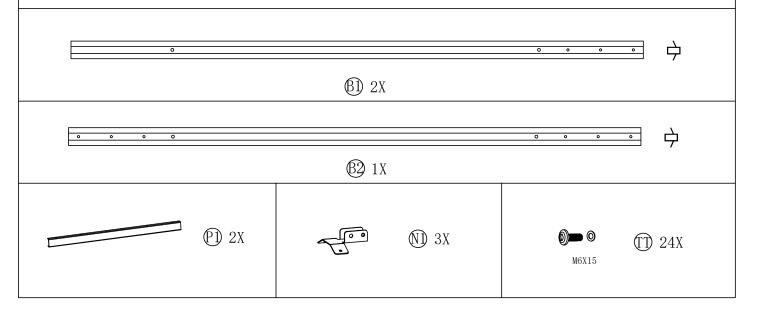

<17>

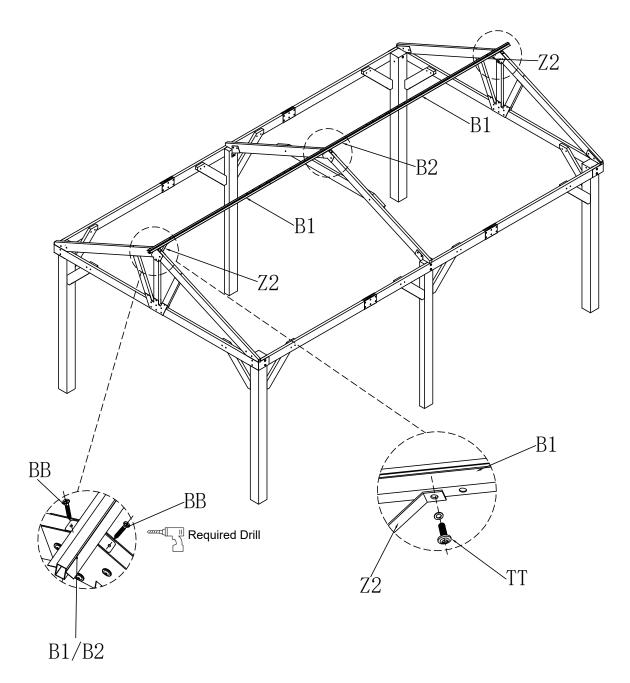

Attach Side Roof Beam **B1** to Slant Beam **09** by using Screws BB, connect the top of Support Connector **Z2** with Side Roof Beam **B1** by using Screws **TT**.












<18> X12

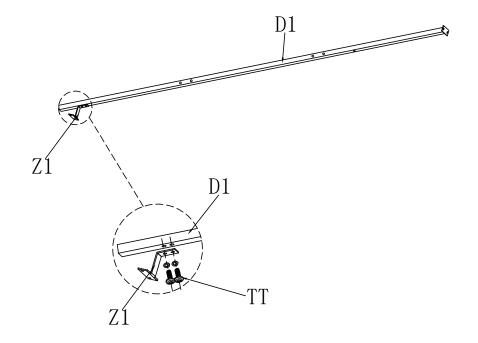


Connect all Slant Beam Connectors Z1 with the bottom of Roof Slant Beams D1, fasten by using Screws TT.

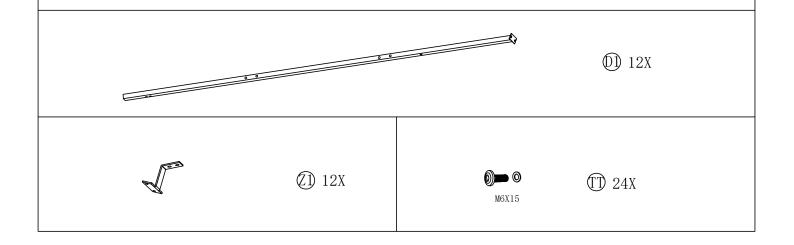


<19>

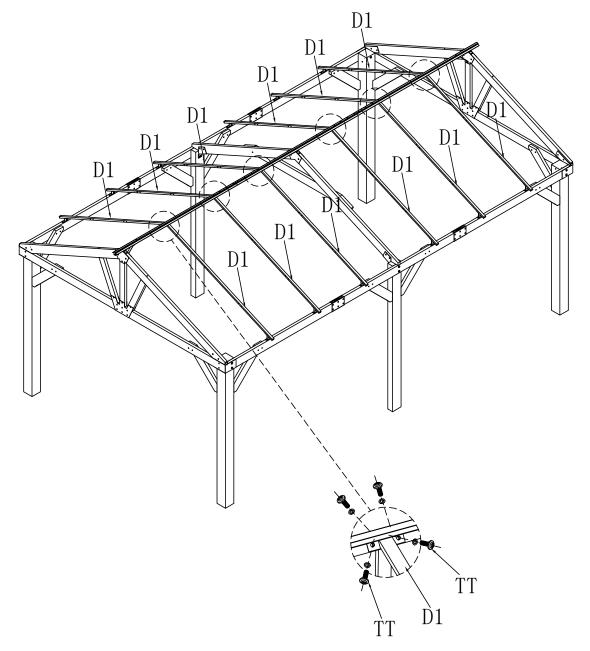


Attach the top of Roof Slant Beams D1 to Top Roof Beam B1 by using Screws TT.

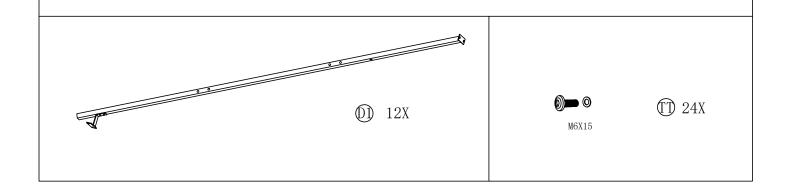


<20> X2

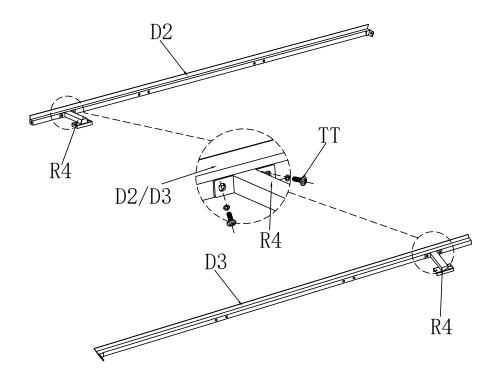


Attach Side Beam Connector R4 to Left/Right Side Blocking Bar D2/D3 by using screws TT.

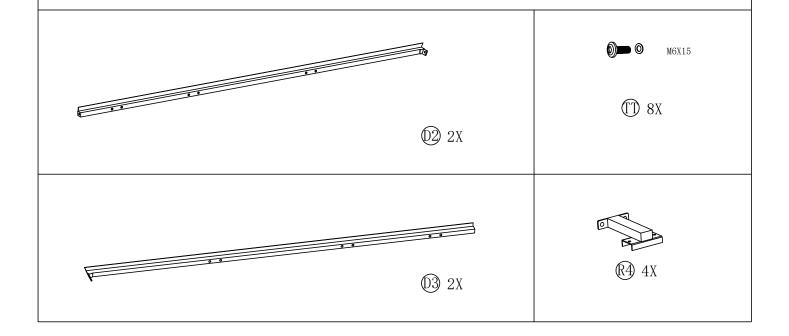


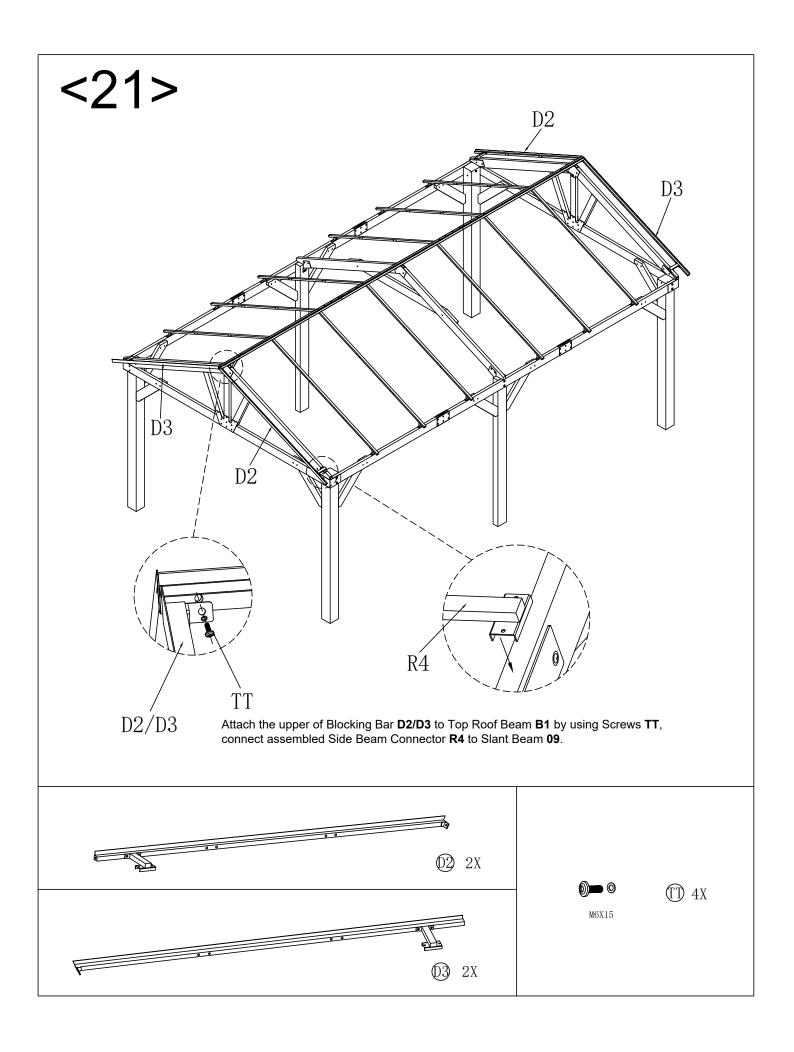

<22>

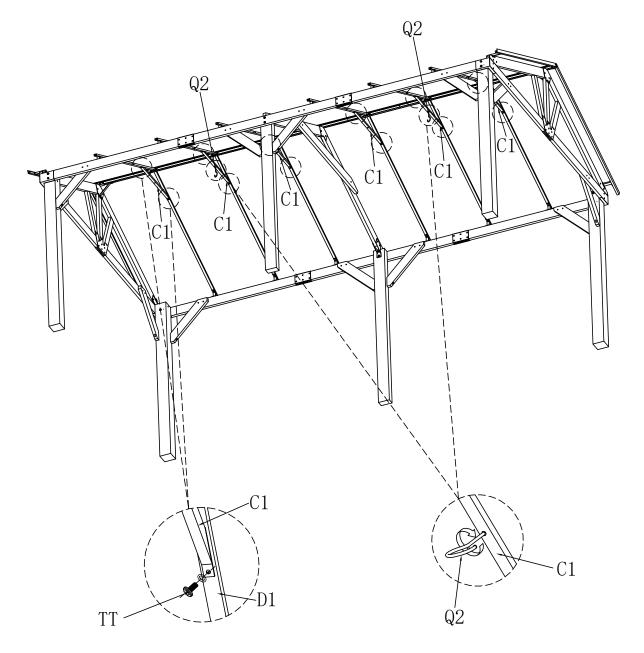



Attach the Cross bar **C1** to Roof Slant Beam **D1** by using Screws **TT**, then attach Hook **Q2** to the top of any Cross Bar **C1**, turn Hook to the right to tighten.

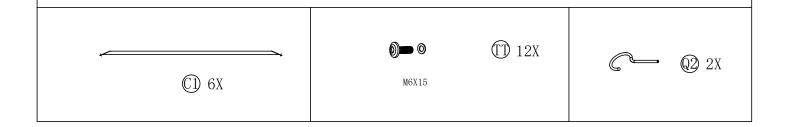



<23>


Pay attention to the Cross Beam K38/K39/K40 placement.

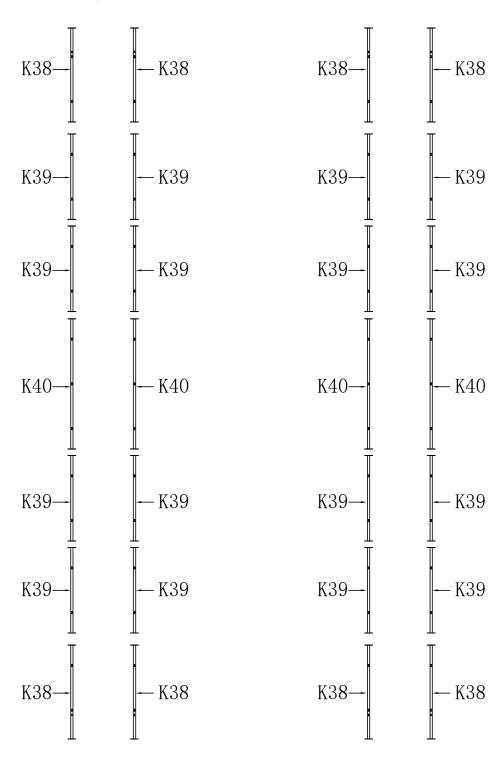


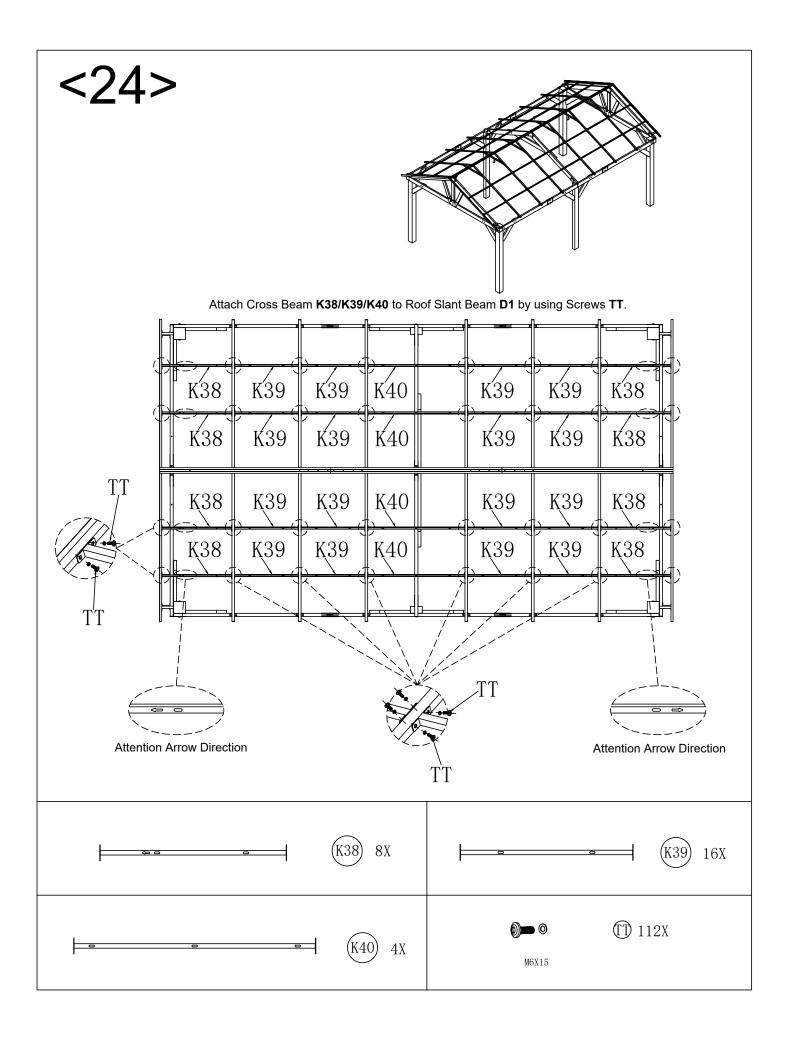

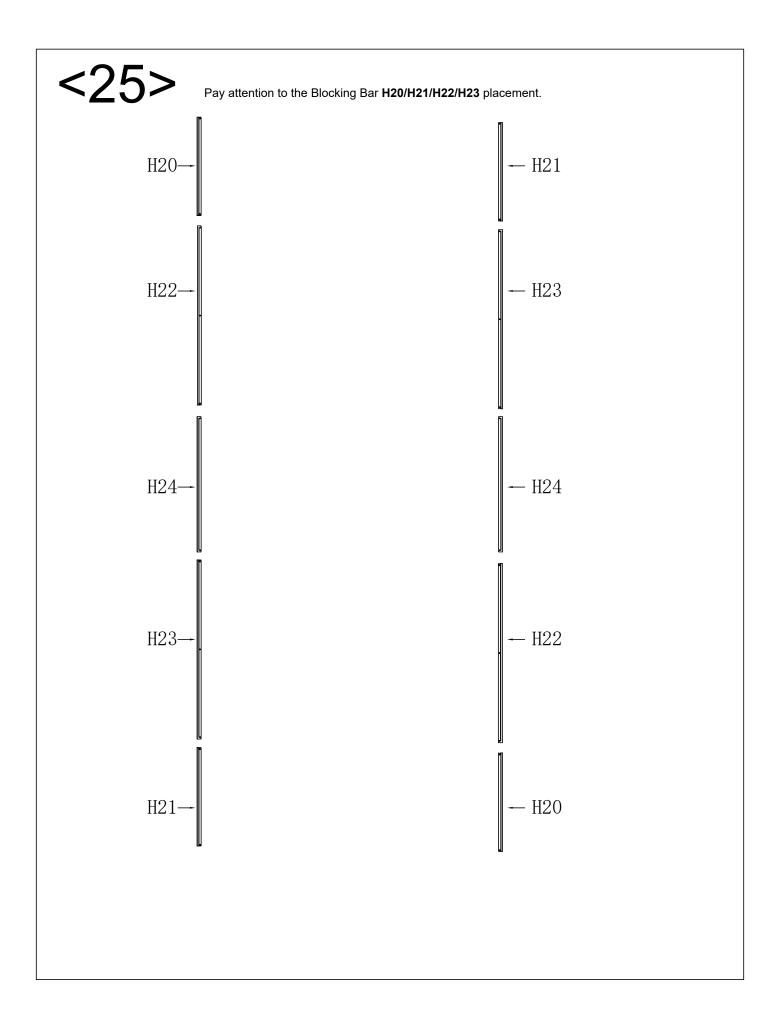


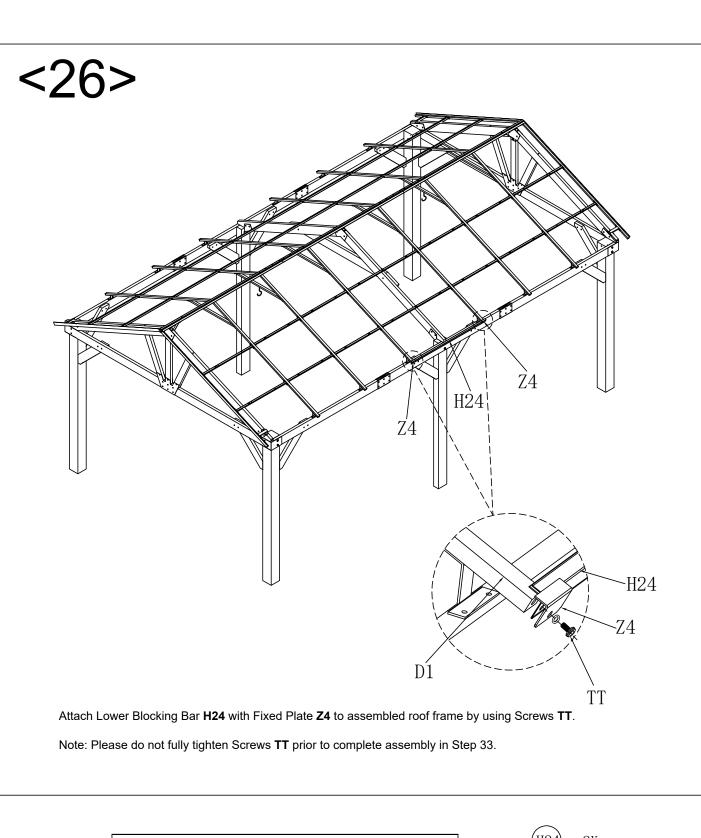

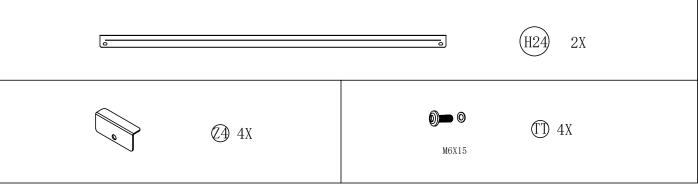

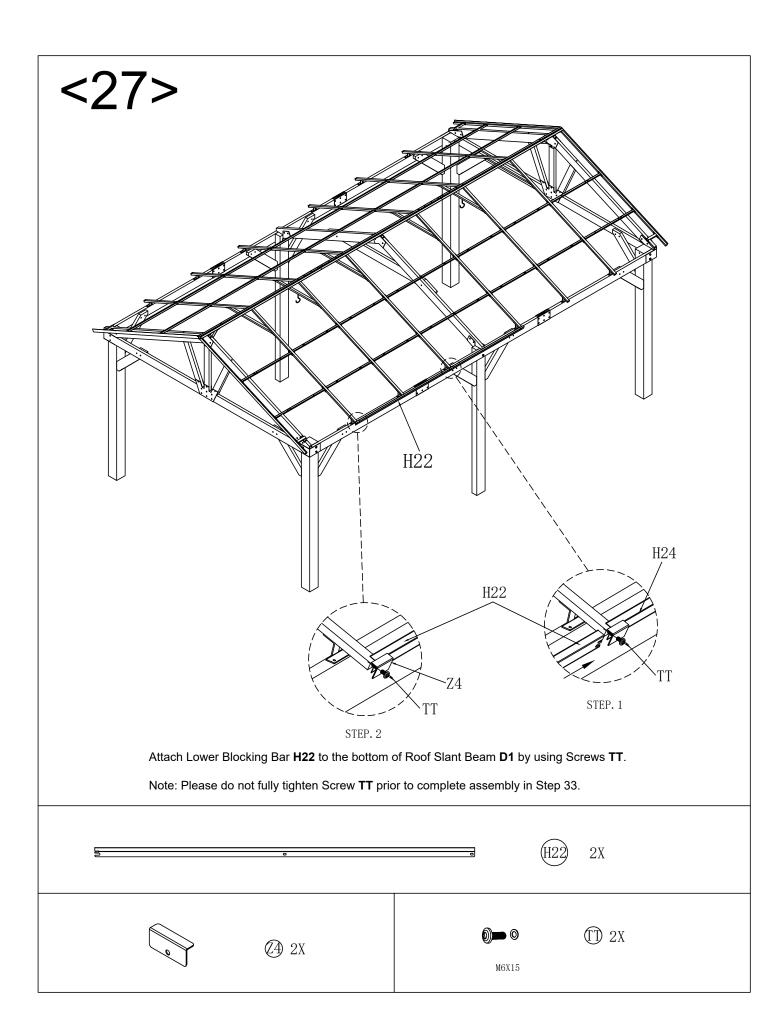


<28>

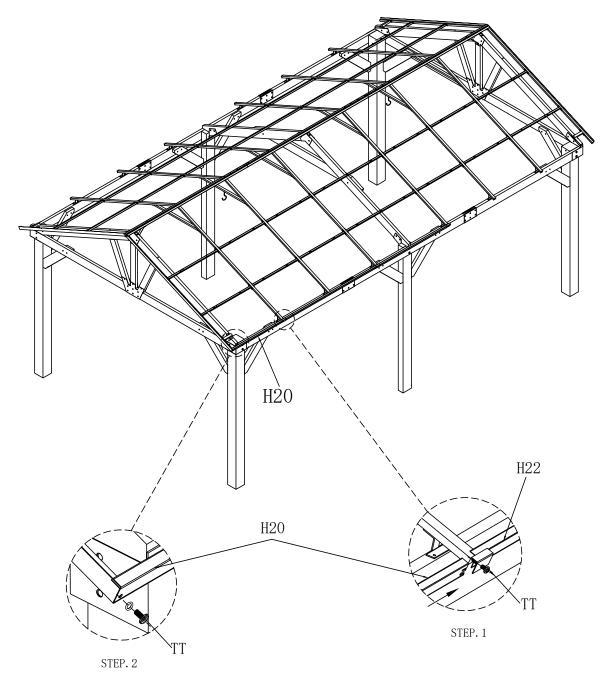


 $Attach \ Lower \ Blocking \ Bars \ \textbf{H20} \ to \ the \ bottom \ of \ Roof \ Slant \ Beams \ \textbf{D1} \ and \ Side \ Blocking \ Bar \ \textbf{D2} \ by \ using \ Screws \ \textbf{TT}.$

Note: Please do not fully tighten Screws TT prior to complete assembly in Step 33.



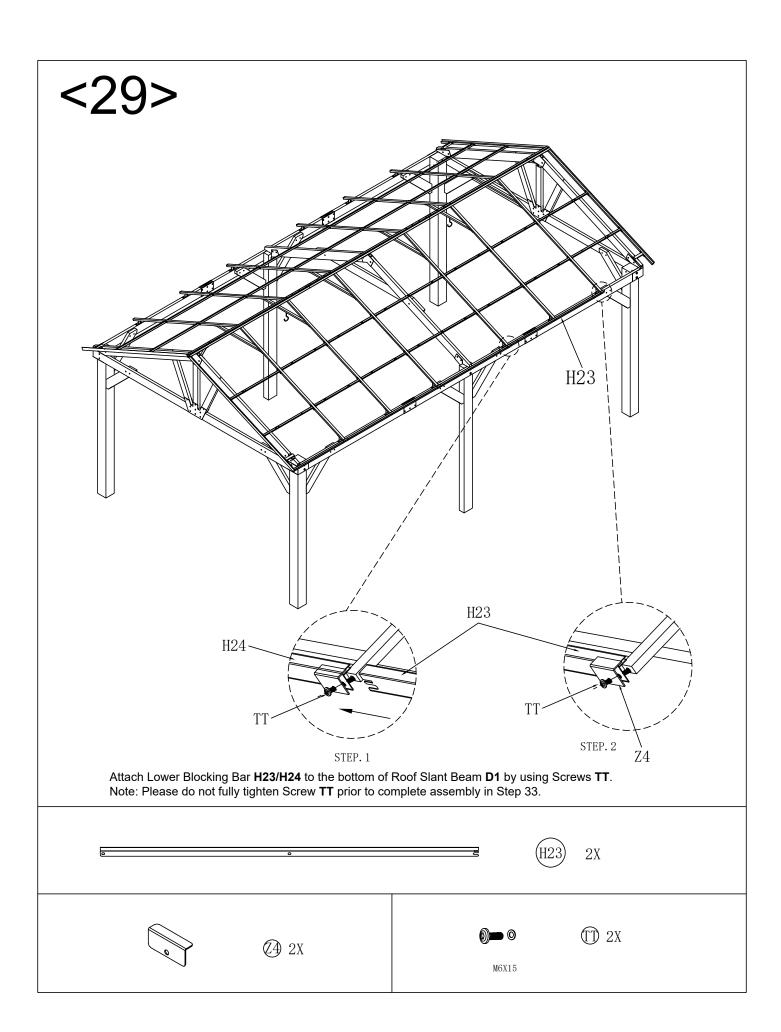

<30>

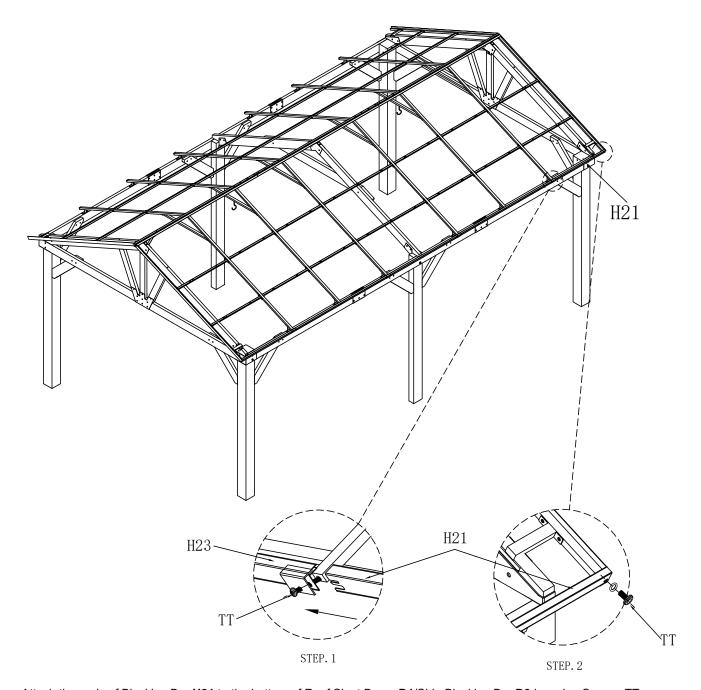

Attach the ends of Blocking Bar **H21** to the bottom of Roof Slant Beam **D1**/Side Blocking Bar **D3** by using Screws TT.

Note: Please do not fully tighten Screw $\ensuremath{\mathsf{TT}}$ prior to complete assembly in Step 33.




0

① 2X

M6X15

<31>

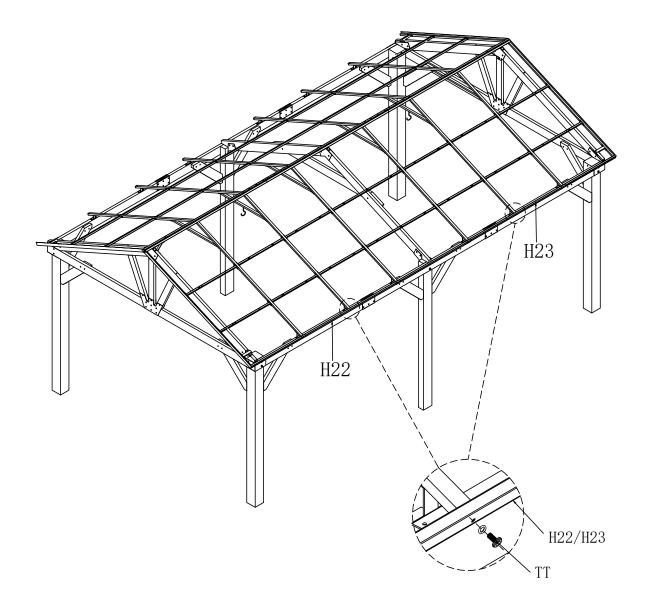

Attach Low Blocking Bar **H22/H23** to assembled roof frame by using Screws **TT**.


Note: Please do not fully tighten Screws TT prior to complete assembly in Step 33.






M6X15

<32>

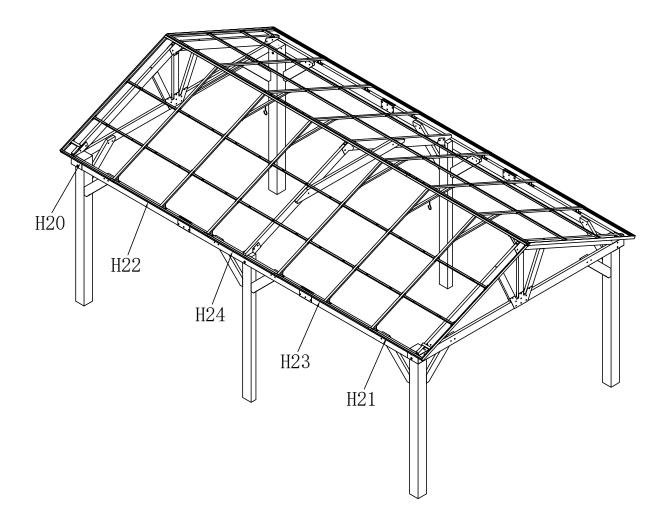

Follow the Step 26-31 to assemble another side Low Blocking Bar **H20/H21/H22/H23/H24**.

<33>

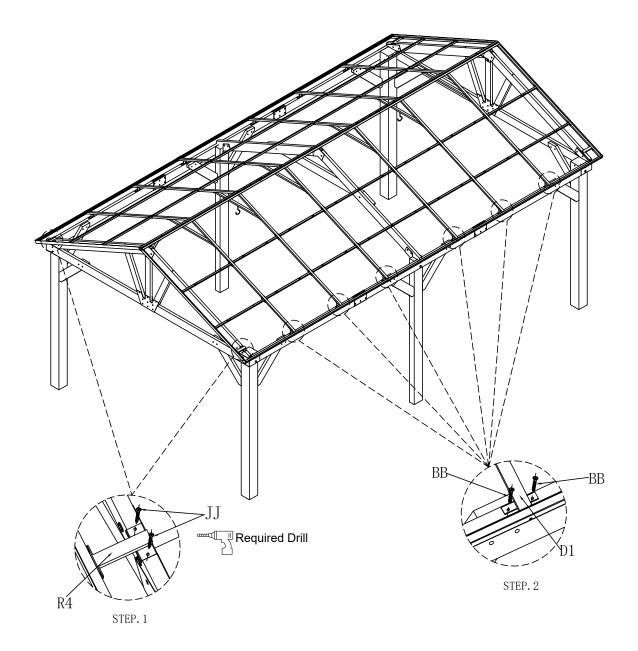

Attach the end of Roof Slant Beam **D1**/ Side Beam Connector **R4** to assembled roof frame by using Screws **BB/JJ**.


Note: tighten all pre-assembled Screws before using Screws BB/JJ.













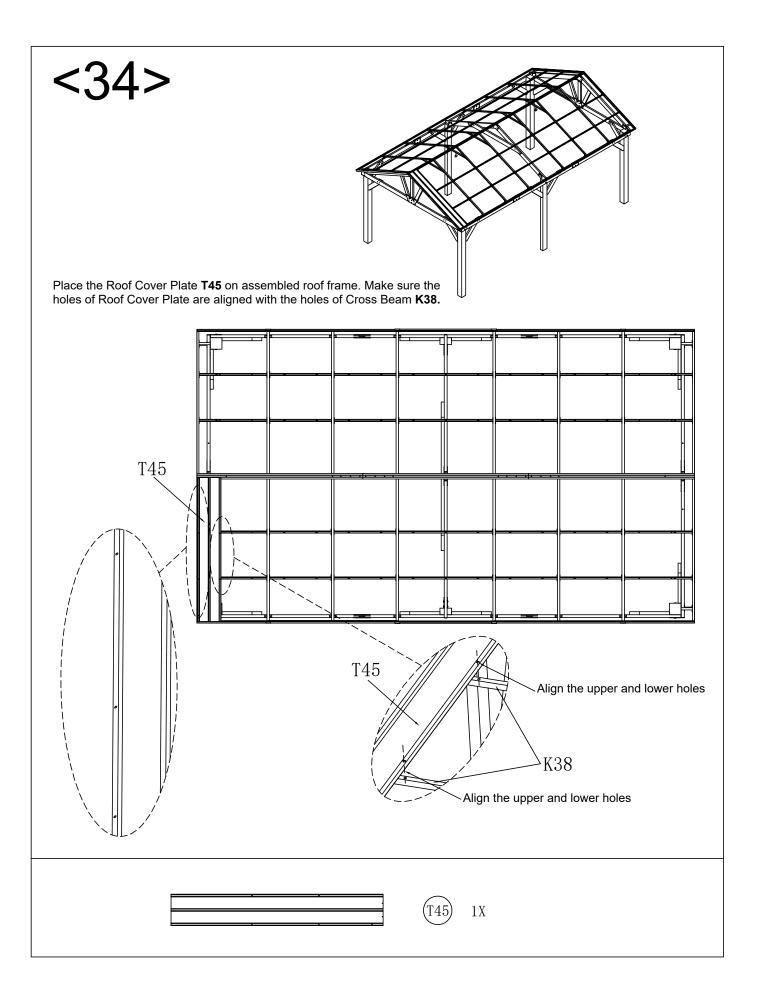

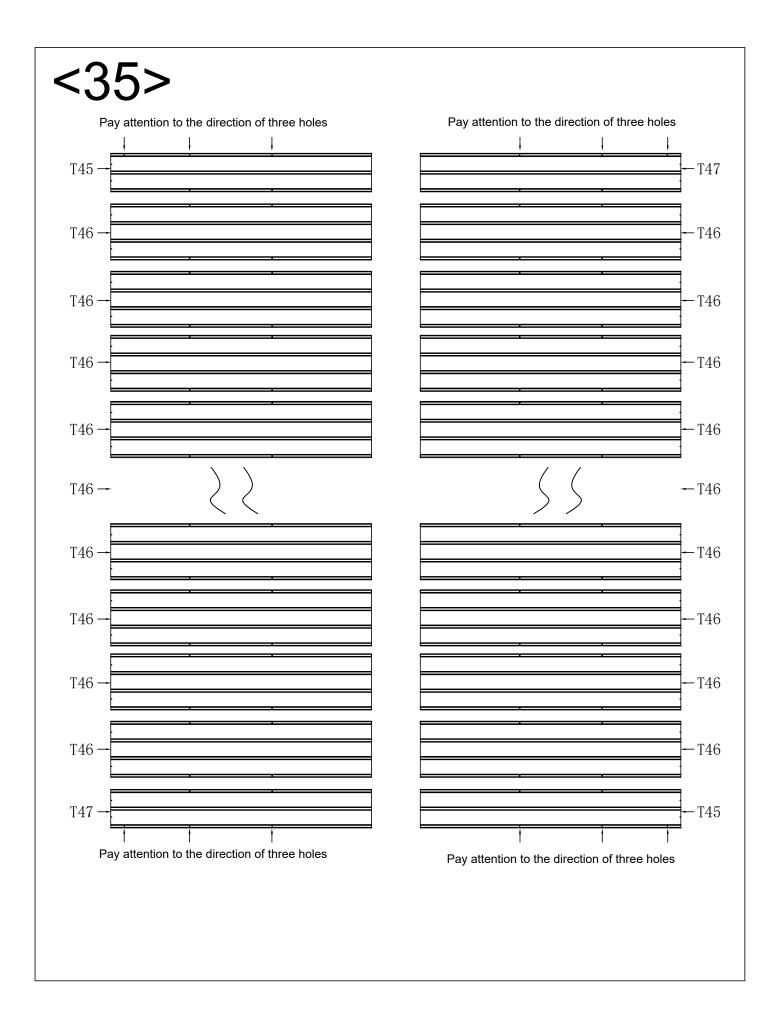


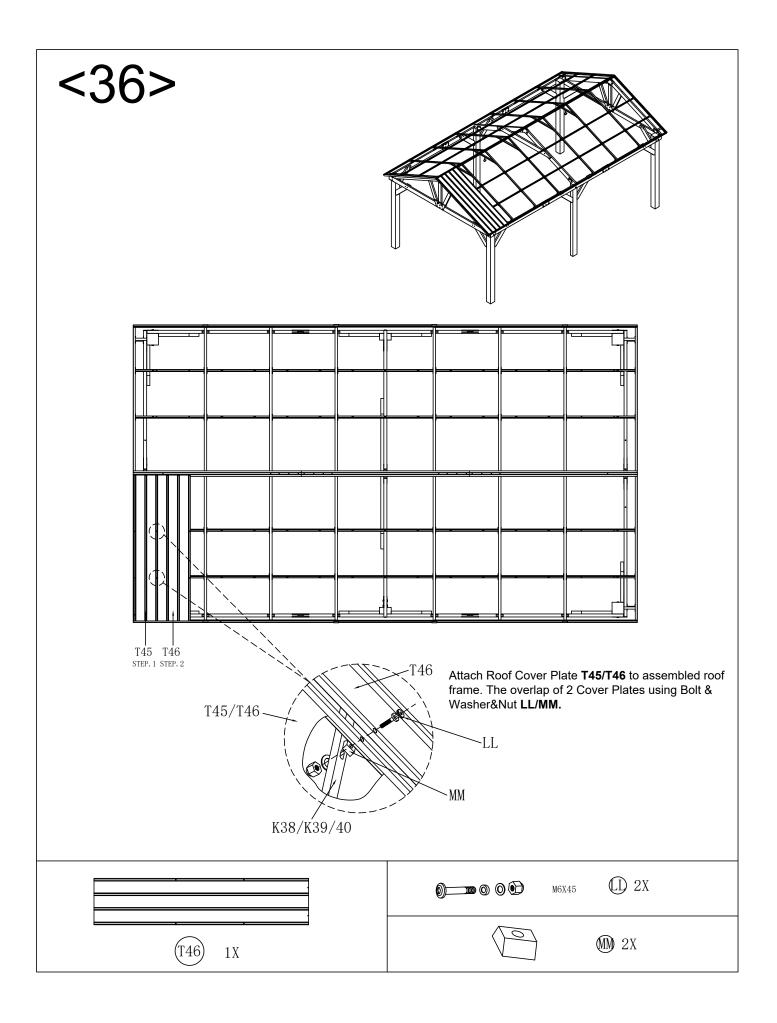


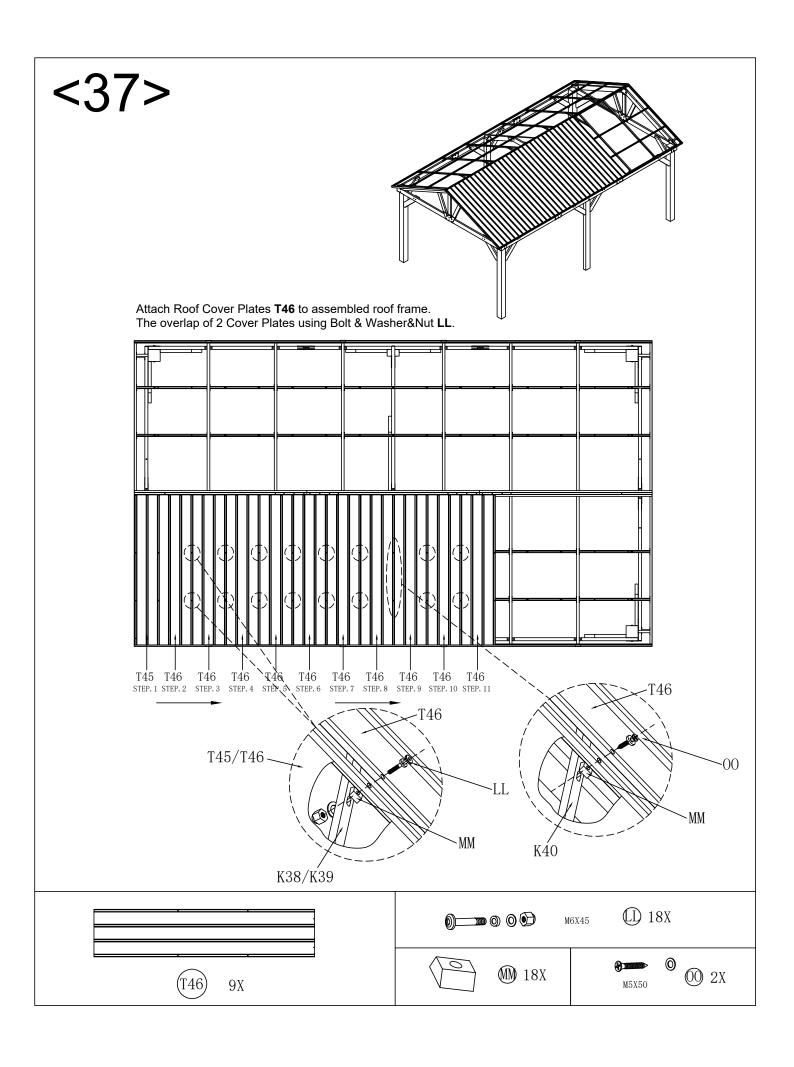

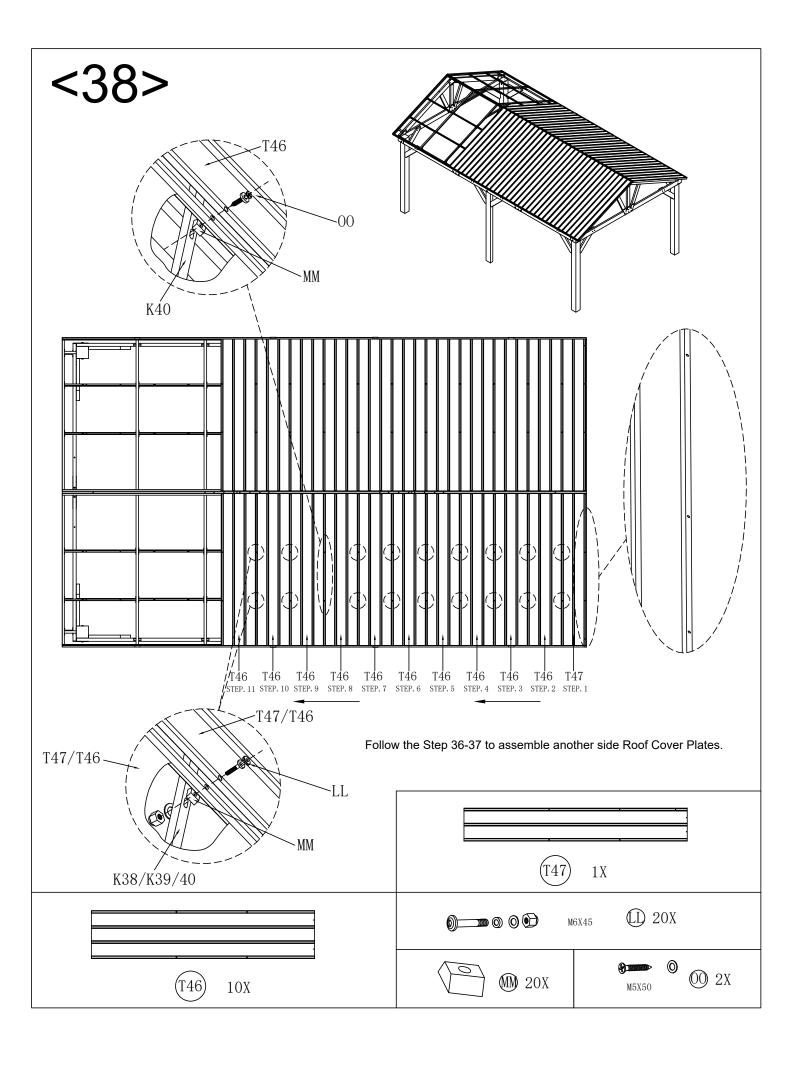

<39>

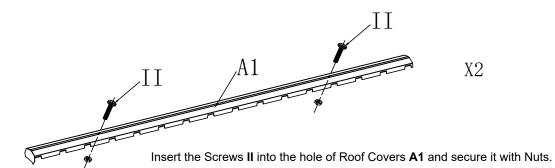

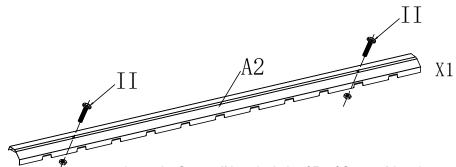

Insert the Screws II into the hole of Roof Covers A2 and secure it with Nuts.



(A1) 2X








M6X70

B2 Attach Top Roof Covers **A2** to Top Roof Beam **B2**, fix inner side of B1 by using Washers & Nuts **GG**.







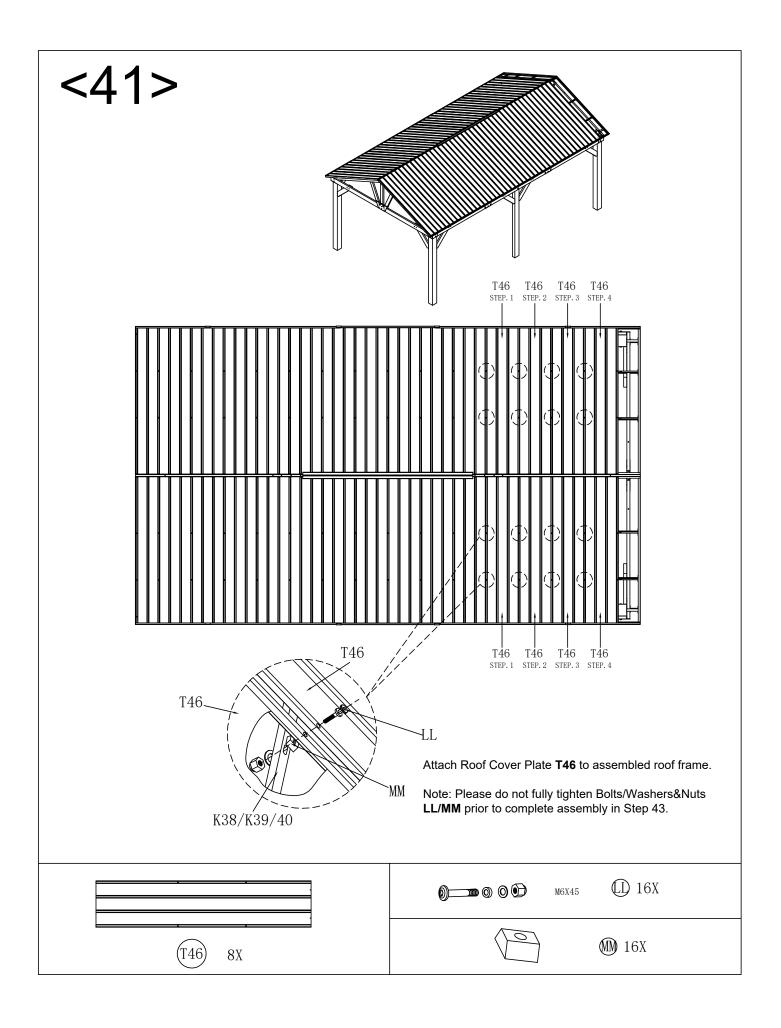


<42>

Attach Roof Cover Plate T45/T47 to assembled roof frame.


(1) 4X

M6X45

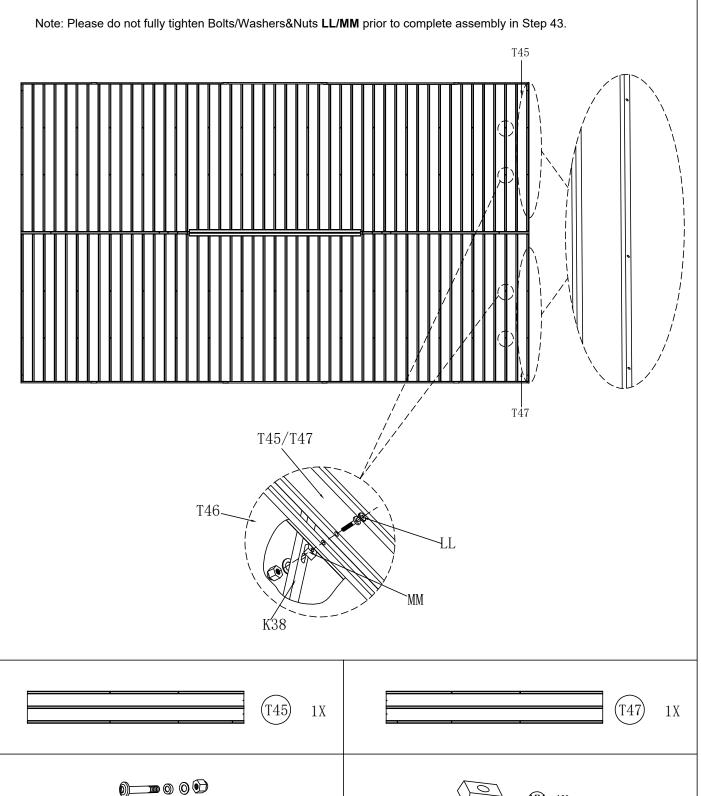

∭ 4X

<43>

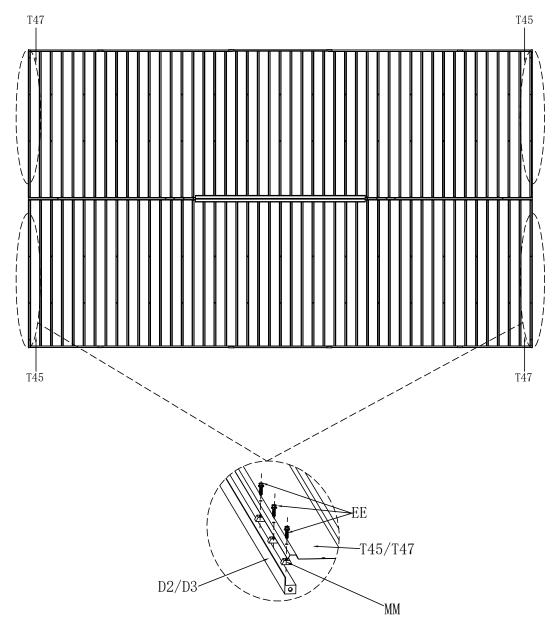

Make sure the holes of Roof Cover Plate **T45/T47** are aligned with the vertical edge of Blocking Bar **D2/D3**, fix by Screws **EE**. Note: Completed this assembly step, tighten all pre-assembled Bolts.










<44> B1 GG Attach Top Roof Covers **A1** to Top Roof Beam **B1**, fix inner side of **B1** by using Washers & Nuts **GG**. 0 $\bigcirc G$ 4X

(A1) 2X

<45>

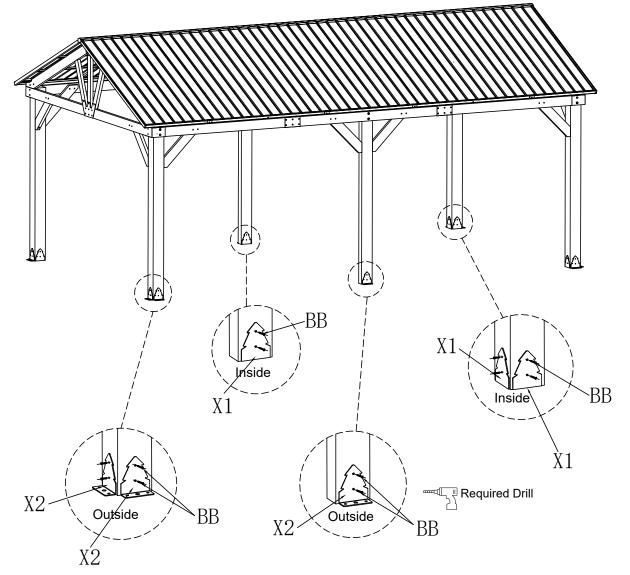

Attach Stake Plates X1/X2 to the bottom of Post, fix by using Screws BB.



(1) 10X




(2) 10X

⊕|>mm>


® 40X

M5X30

<46>

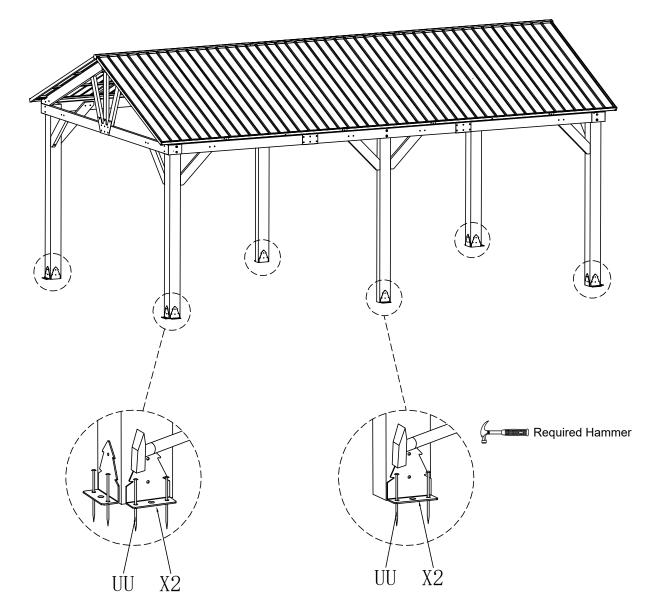

Fix assembled gazebo on the ground by using Stake **UU**.

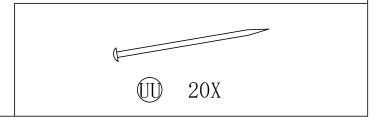

Care and Maintenance

- 1. Our steel components for garden accessories and furniture are treated with rust inhibiting paint that protects it from rusting. However, due to the nature of steel, surface oxidation (rusting) will occur once these protective coatings are scratched. This is not a defect and thus not covered by the warranty.
- 2. To minimize this condition, we recommend care when assembling & handling the product to prevent scratching the paint. Should any scratching or damage occur, we recommend immediate touch-up with rust inhibiting paint.
- 3. Surface rust can also be easily removed with a very light application of common cooking oil. If surface oxidation (rusting) occurs and if no measure is taken to prevent this, the oxidation may start dripping on to deck or patio and caused damaging stains, which may be difficult to remove. This can be prevented if the above-mentioned measures are taken to keep the product from oxidizing.
- 4. Use damp cloth to wipe off the stains as quickly as possible.
- 5. If necessary, wash with a mild solution of soap and water; rinse thoroughly and dry completely.
- 6. Periodically check and ensure that all bolts are well-tighten during use.